 
 
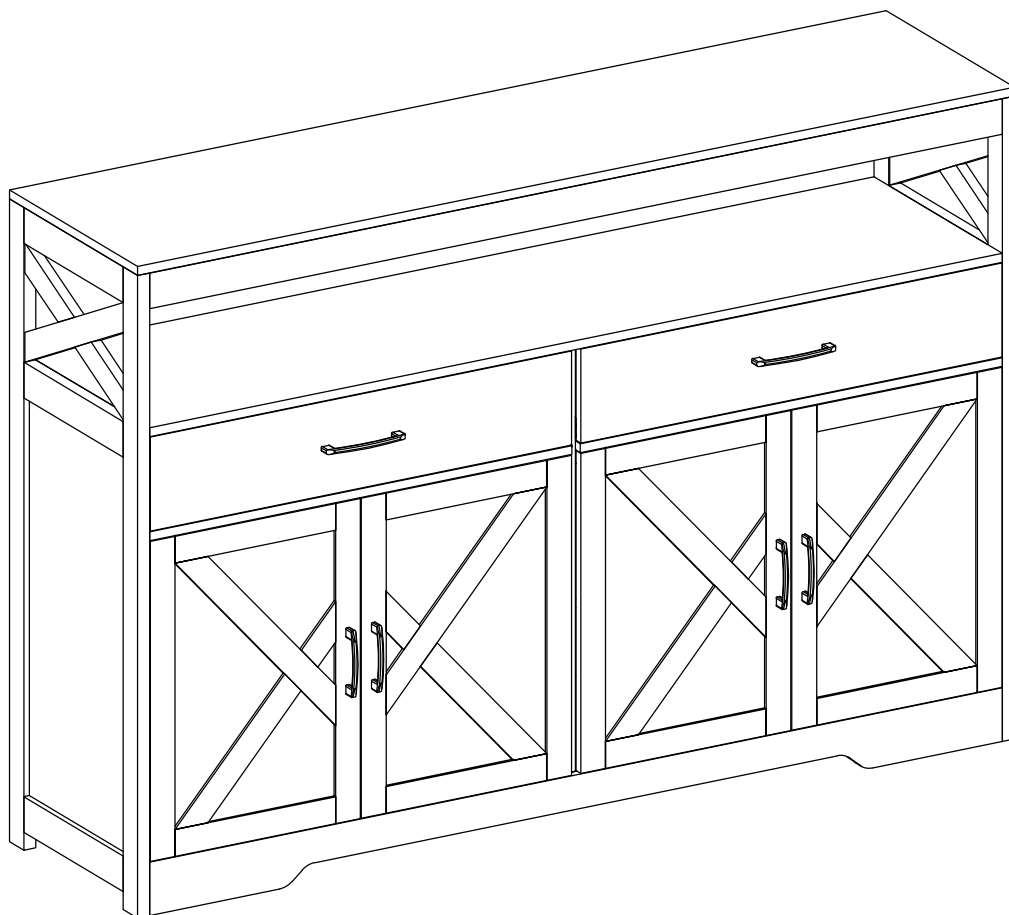 
 
 




ASSEMBLY INSTRUCTION



A	x 3+1	B	x 17+1	C	x 47+1	D	x 47+1	E	x 8+1	F	x 4	G	x 8+1
													
M6*30mm		Ø8 x 30mm										Ø4 x 12mm	
H	x 14+1	I	x 64+1	J	x 8	K	x 8+1	L	x 6+1	M	x 2	N	x 4+1
													
Ø3.5 x 38mm		Ø3.5 x 10mm				Ø3.5 x 15mm						Ø4 x 18mm	
O	x 1	CR	x 2	DR	x 2	CL	x 2	DL	x 2				
													
M4													



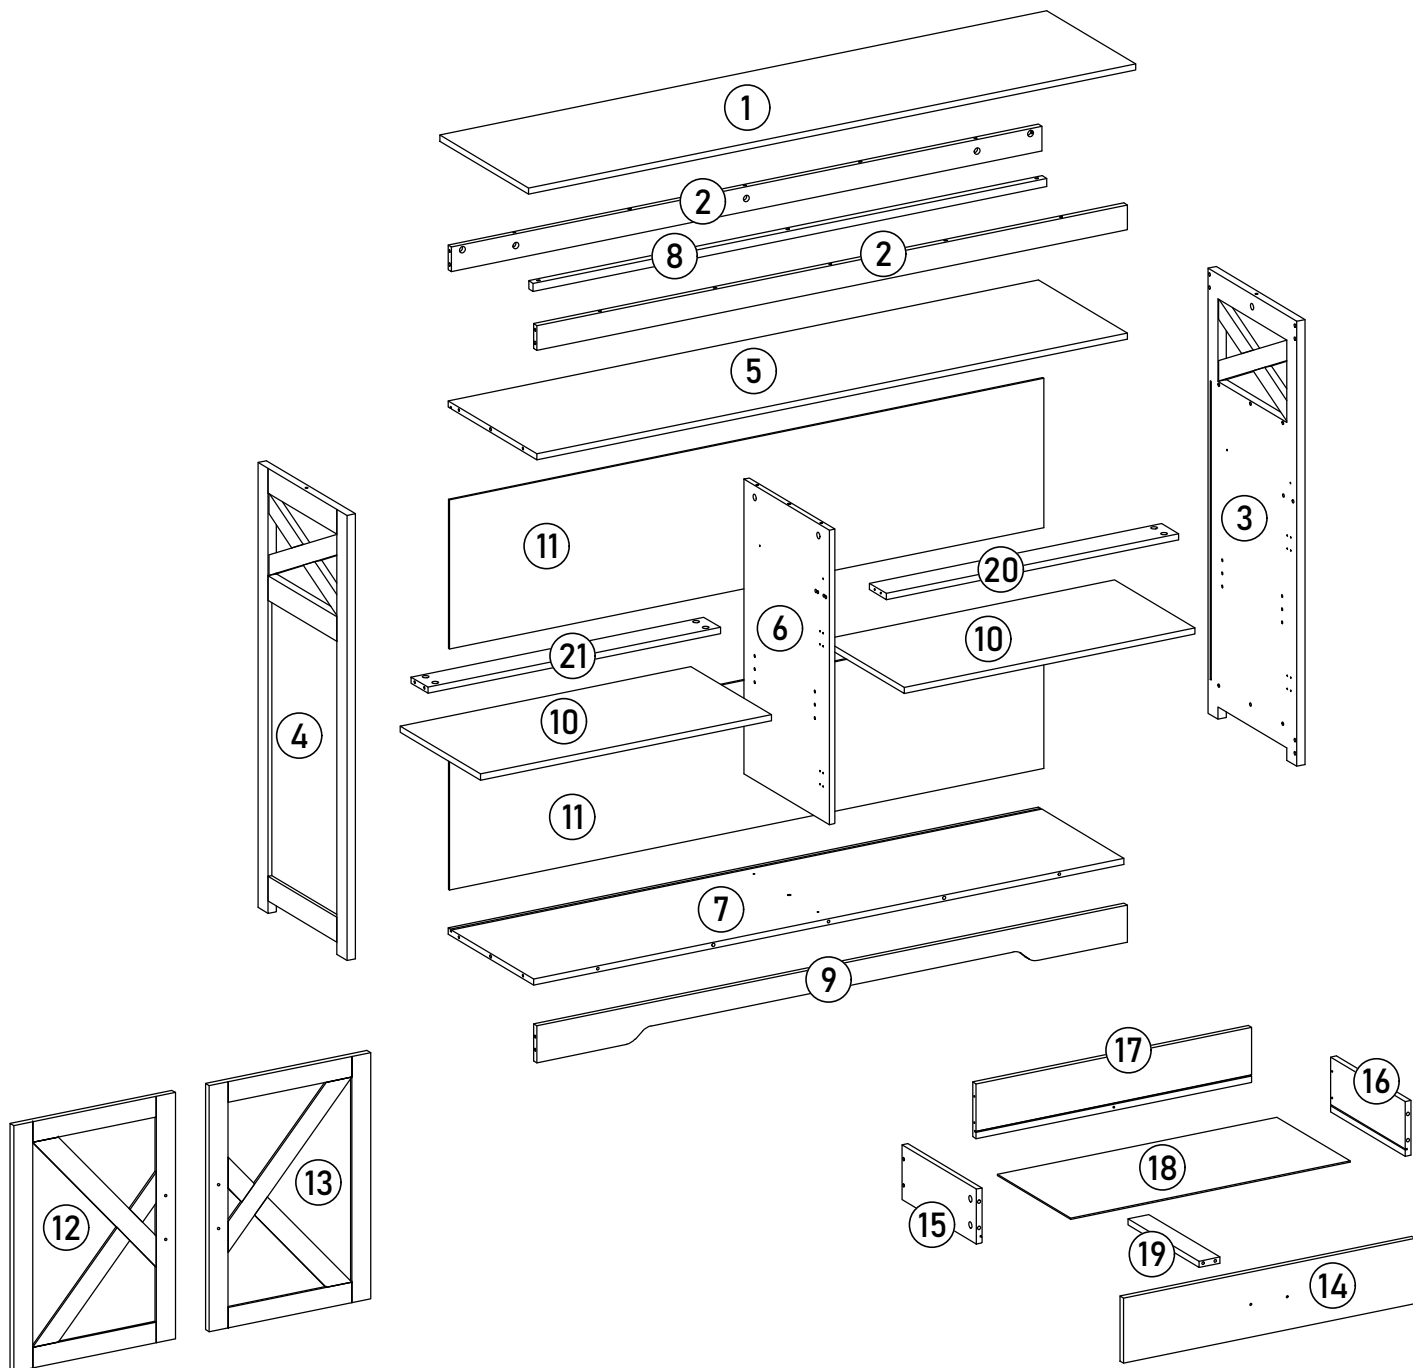


  STEP 1

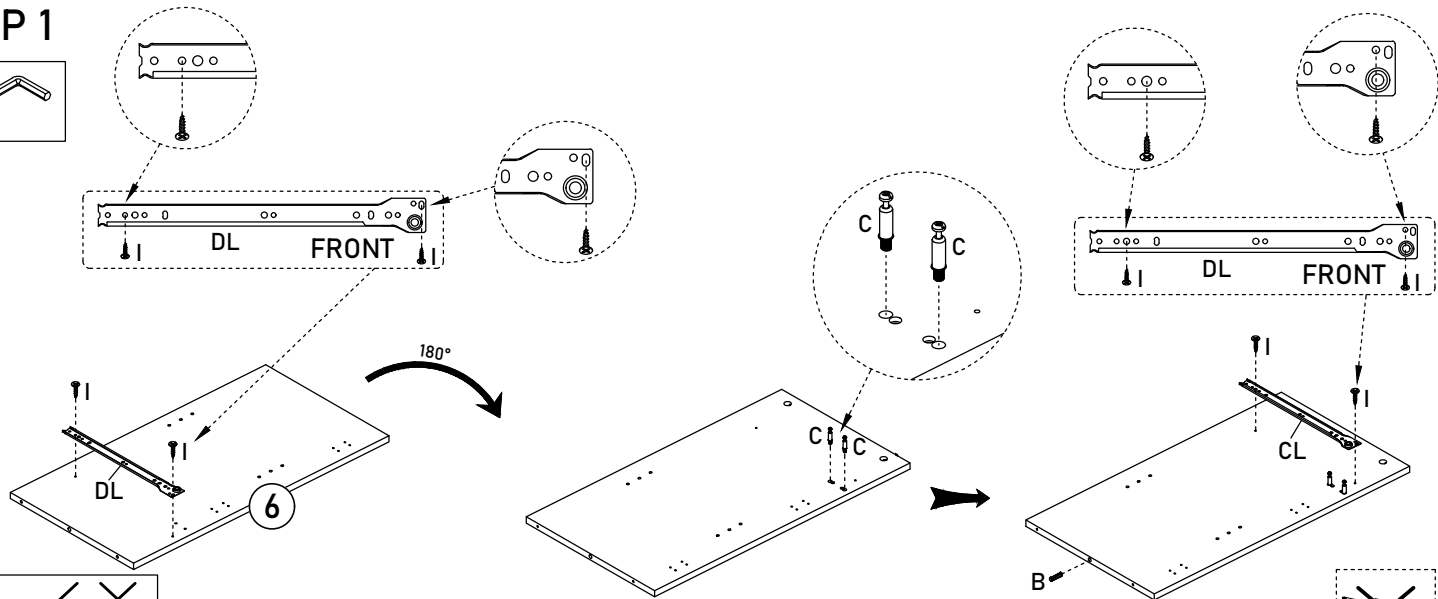




CL x 1PC	DL x 1PC	B x 1PC	C x 2PCS	I x 4PCS
----------	----------	---------	----------	----------

   STEP 2

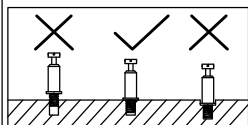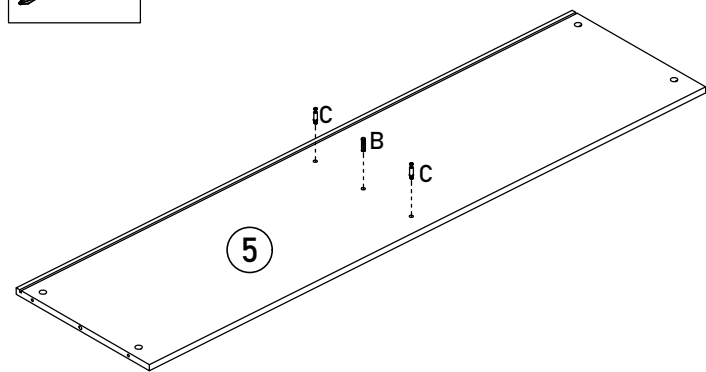




B x 1PC C x 2PCS

   STEP 3

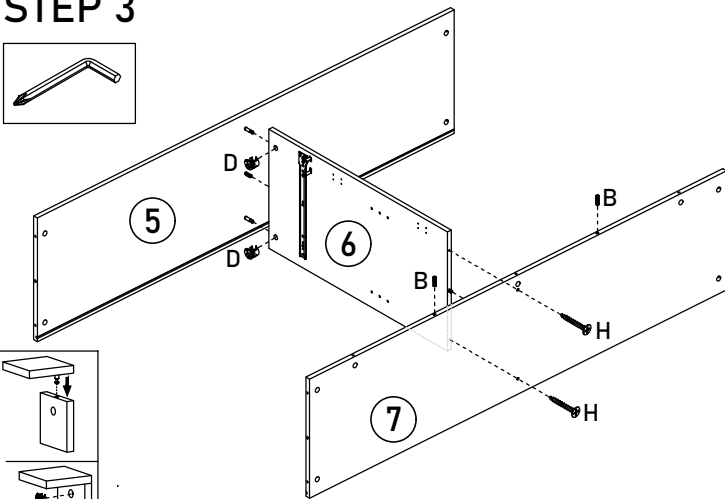




D x 2PCS B x 4PCS H x 2PCS

   STEP 4

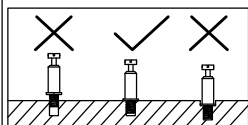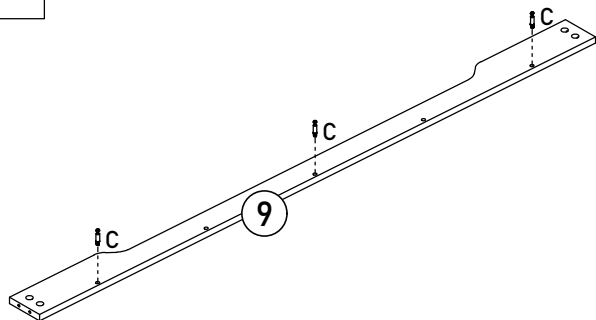



C x 3PCS

   STEP 5

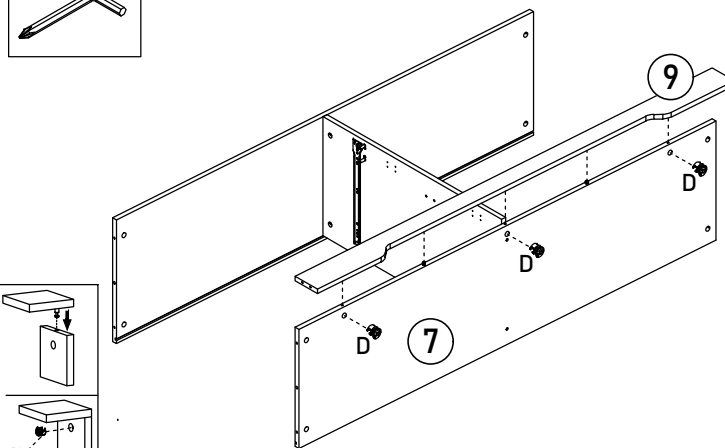




D x 3PCS

  STEP 6

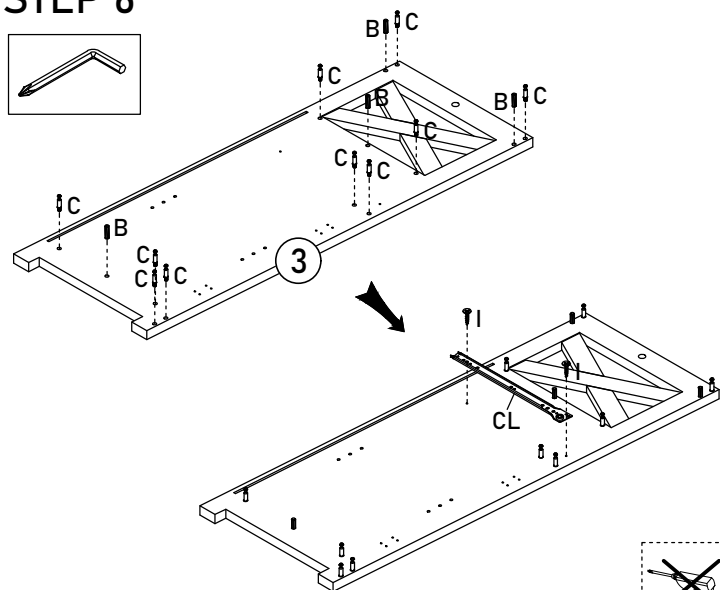




CL x 1PC B x 4PCS C x 10PCS I x 2PCS

   STEP 7

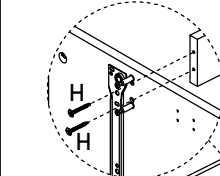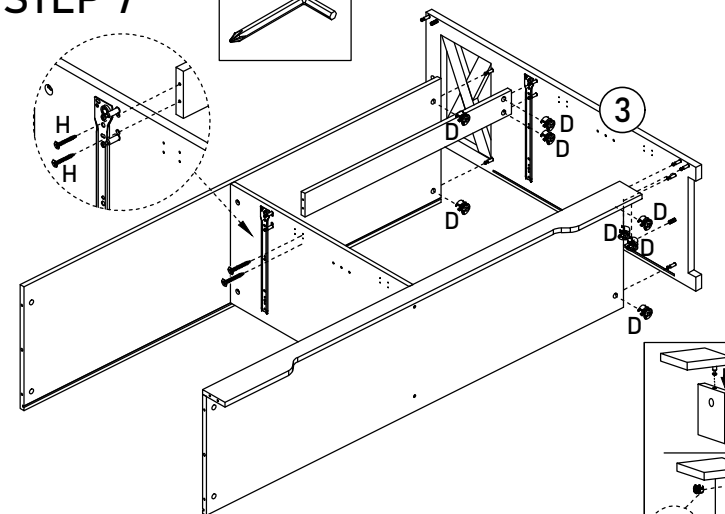





H x 2PCS D x 8PCS

   STEP 8

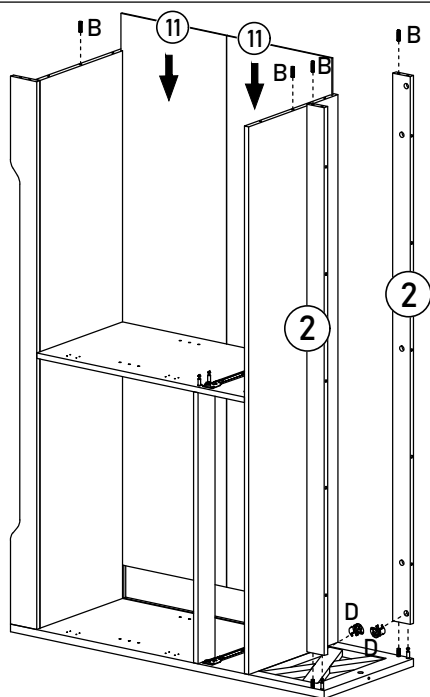



B x 4PCS
D x 2PCS

    STEP 9

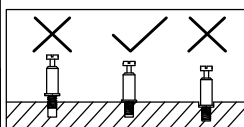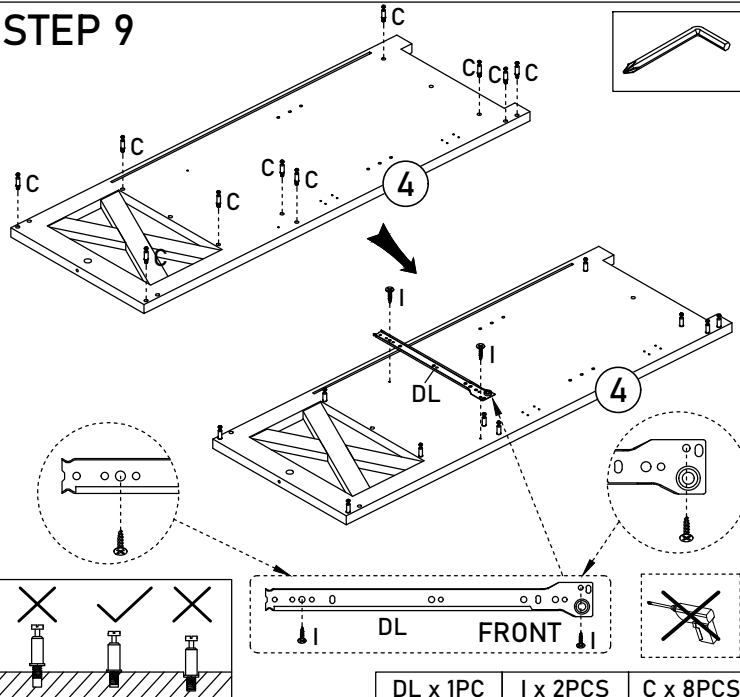


DL x 1PC I x 2PCS C x 8PCS

  STEP 10

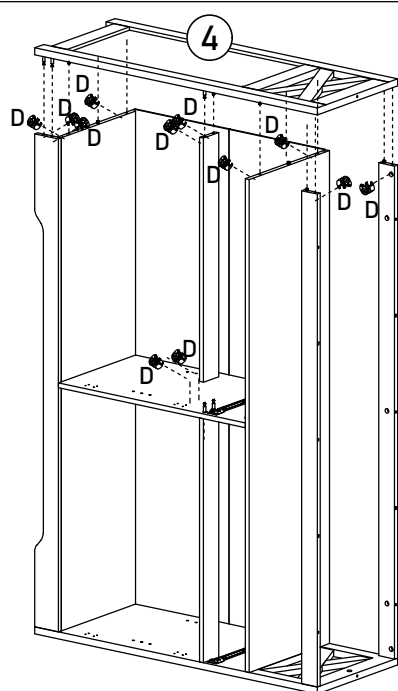




D x 10PCS

 STEP 11

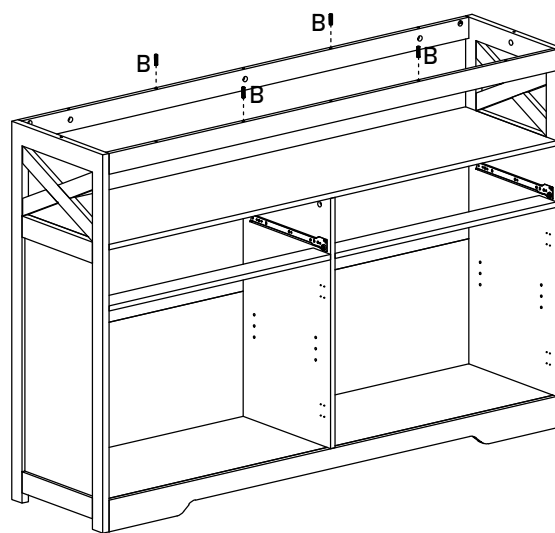



B x 4PCS

   STEP 12

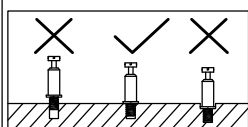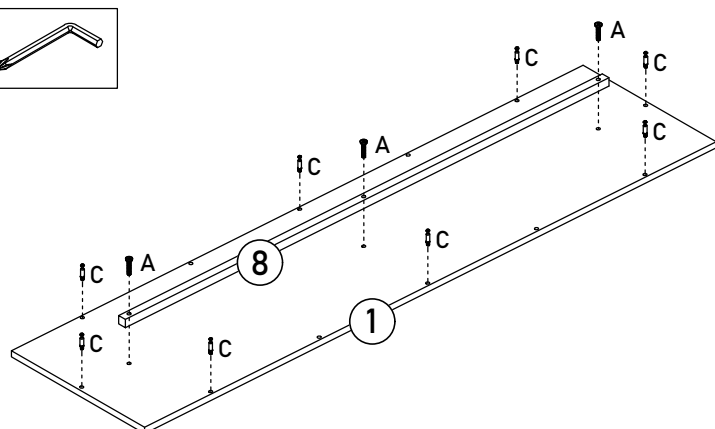


A x 3PCS C x 8PCS

  STEP 13

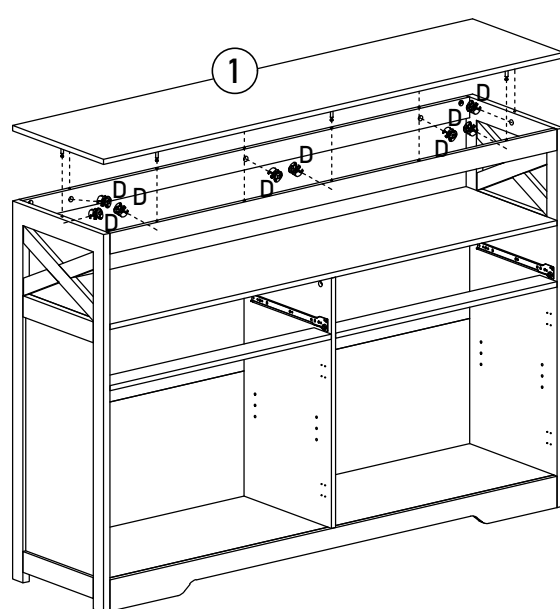


D x 8PCS

 
STEP 14

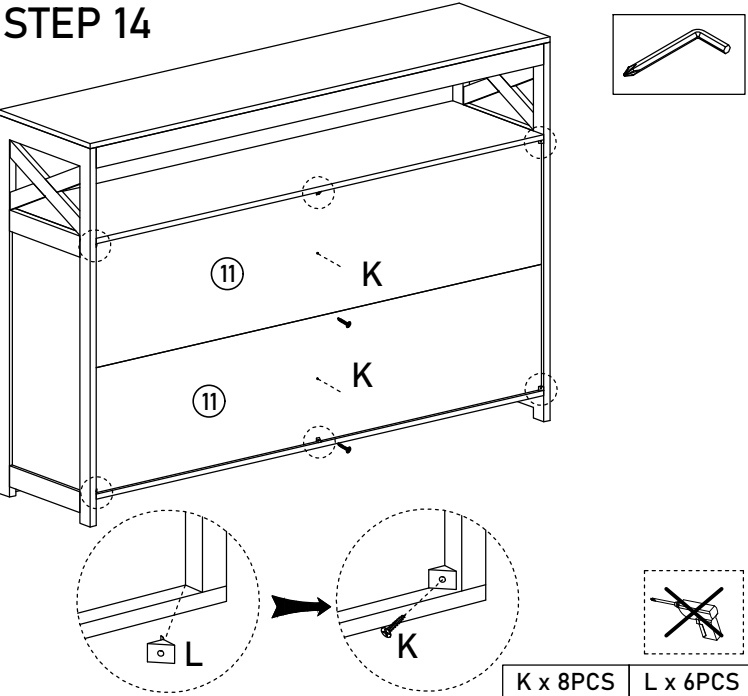

 
STEP 15

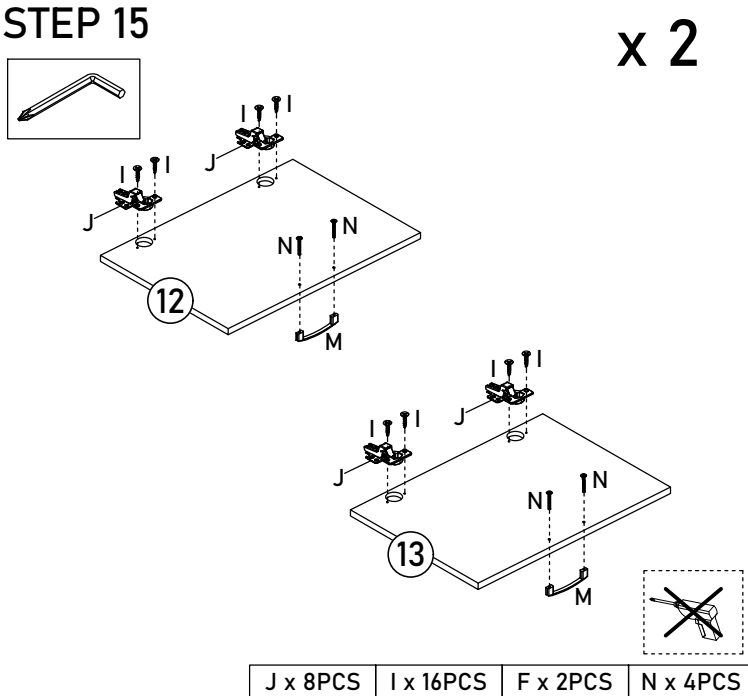

 
STEP 16

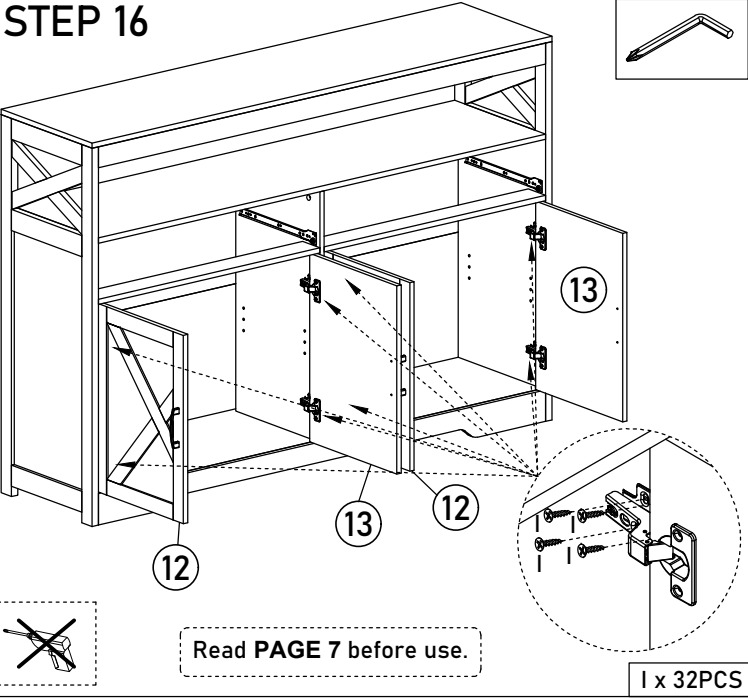

 
STEP 17

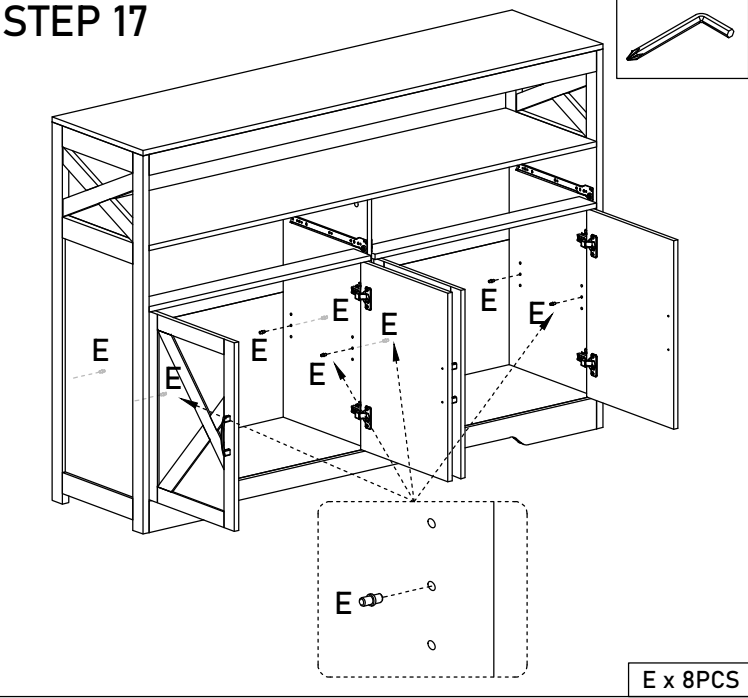

 
STEP 18

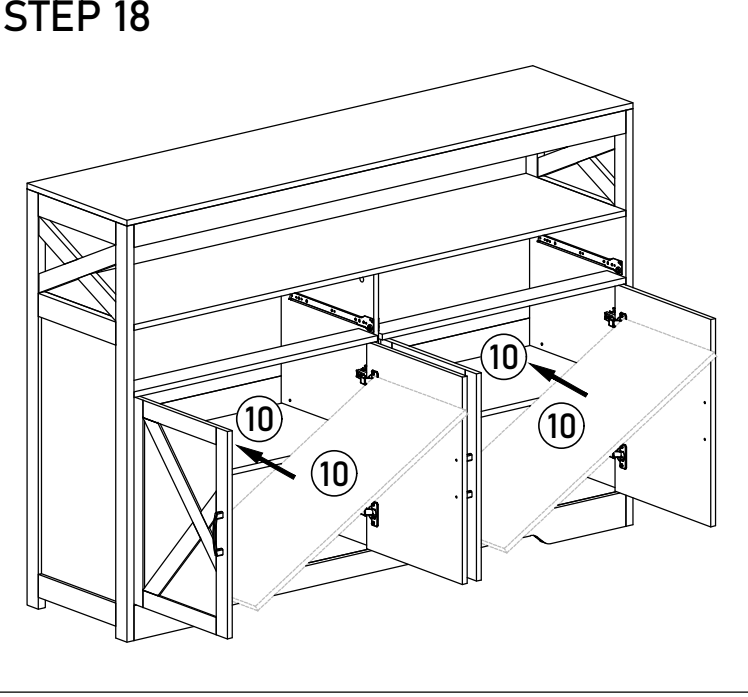

 
STEP 19

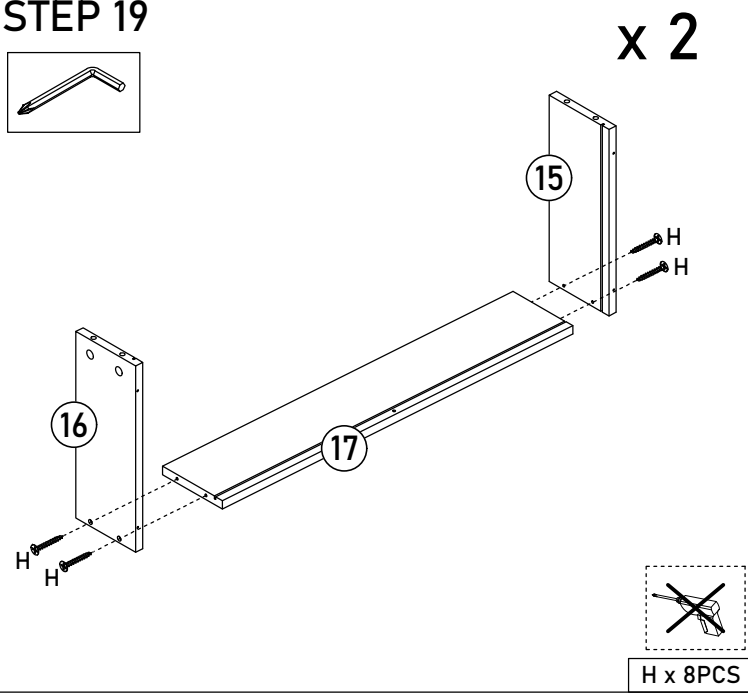


 
STEP 20



x 2

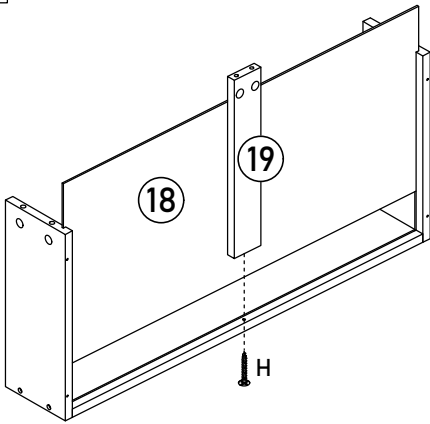 

  STEP 21

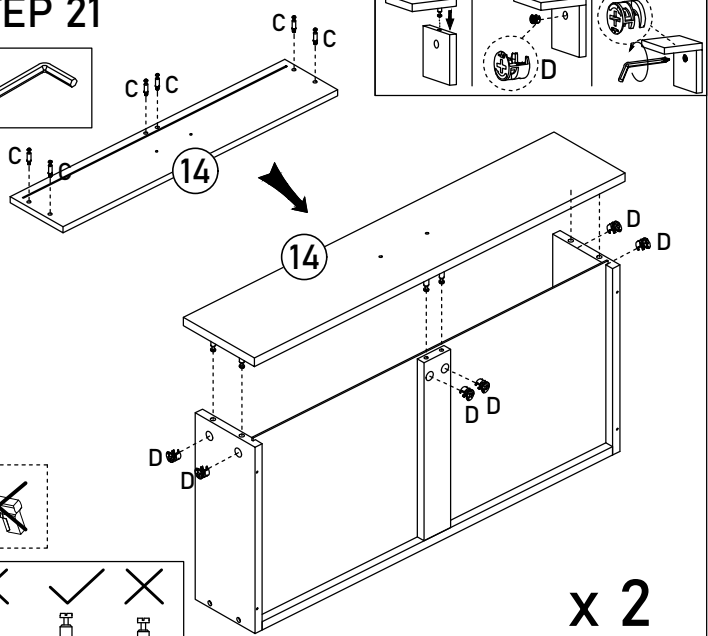


x 2


H x 2PCS

C x 12PCS D x 12PCS

 STEP 22




x 2


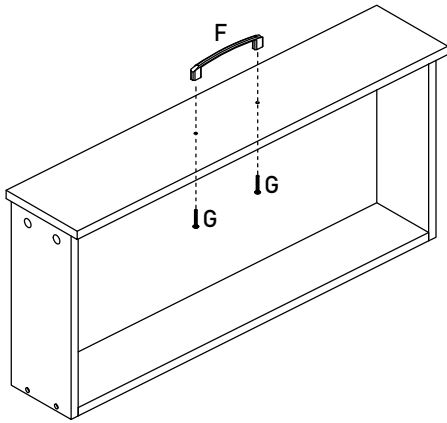 


F x 2PCS G x 4PCS

 STEP 23




x 2

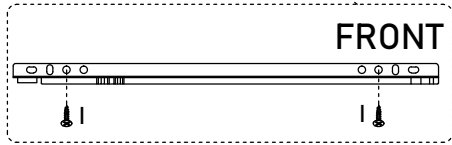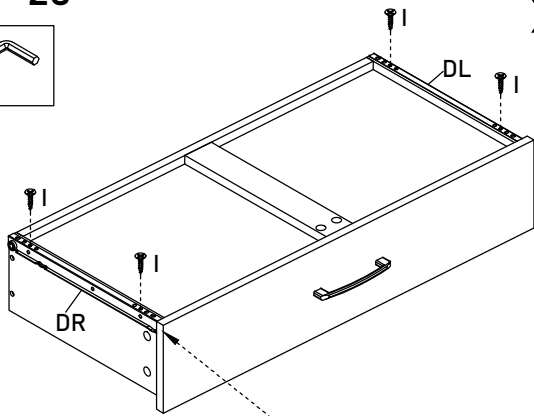  



DR x 2PCS DL x 2PCS I x 8PCS

 STEP 24

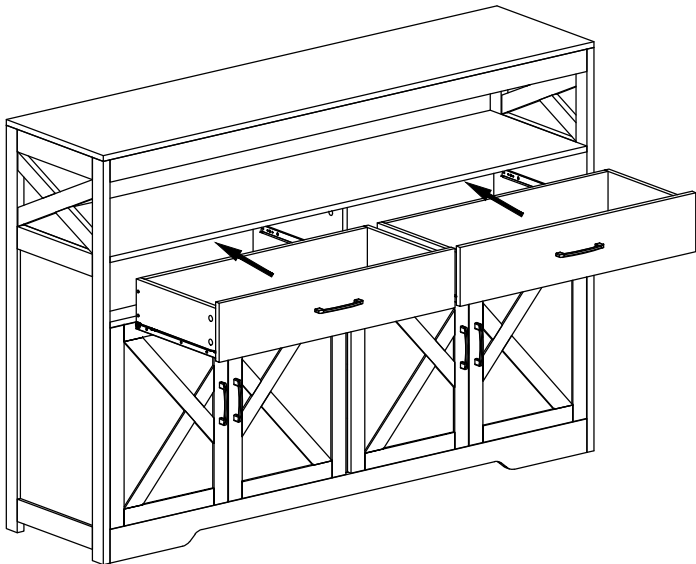


  STEP 25

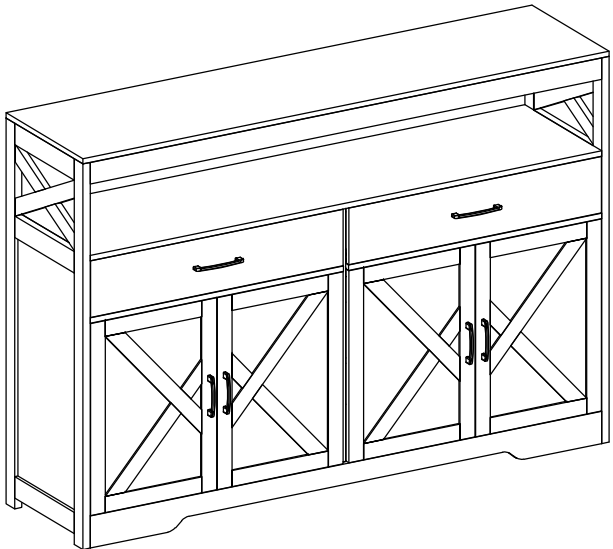


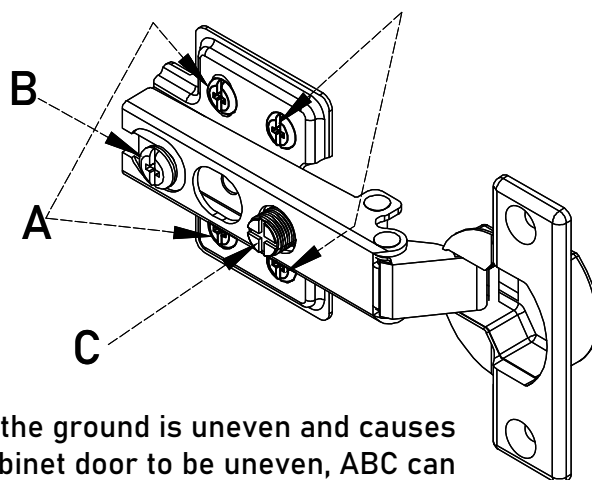

 
When the ground is uneven and causes the cabinet door to be uneven, ABC can be adjusted approp.

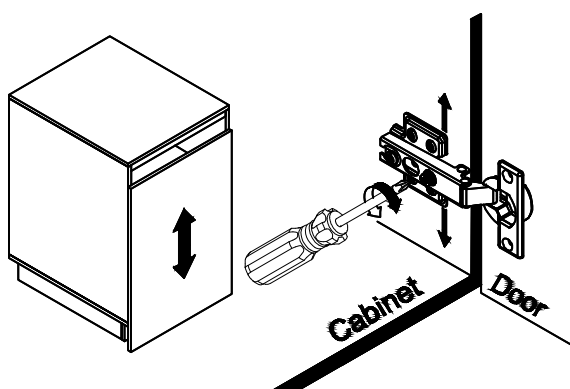

 To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

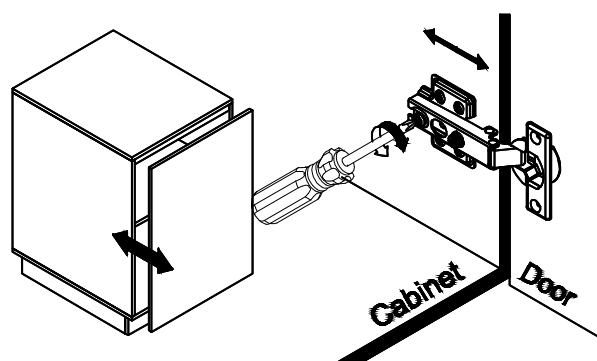

 To adjust depth.
Loosen screw "B" and adjust door, if the door cannot be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C"

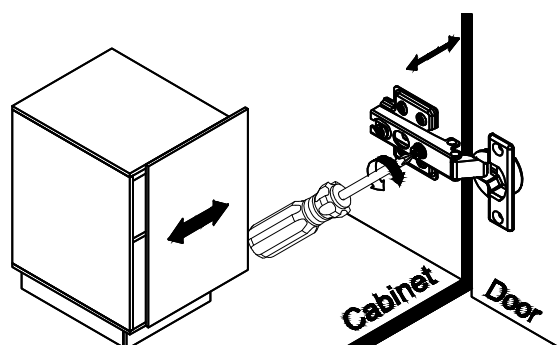

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.