

## **INSTALLATION GUIDE: DECORATIVE PRINTS**

### **1. Open the package carefully**

**When you receive your print or framed print, open the package carefully to avoid damaging its contents.**

**Use a box cutter or scissors to cut the outer packaging, making sure not to make deep incisions that could scratch or mark the print or frame.**

**Remove all items from the package and place them on a clean, flat surface.**

### **2. Measure the installation space**

**Before removing the print or frame from its protective packaging, identify the location where you want to install it.**

**Use a measuring tape or ruler to measure the available space and ensure the print or frame size fits perfectly.**

**Mark reference points on the wall with a pencil to achieve accurate placement.**

**If you're working with a frame, check that the wall is clean and free of irregularities to ensure proper adhesion or hanging.**

### **3. Remove the print from its inner packaging**

**With clean hands, take the print or frame out of its protective packaging, being careful not to bend or smudge the print.**

**If the print is rolled, carefully unroll it on a flat surface. If necessary, use books or light weights to help flatten it.**

### **4. Hang the print or frame using the included hangers**

**For framed prints, check that the hangers (such as easy-hang hooks) installed on the back of the frame are secure.**

**Place the frame on the wall and ensure it aligns with the marks made earlier.**