 
 
 
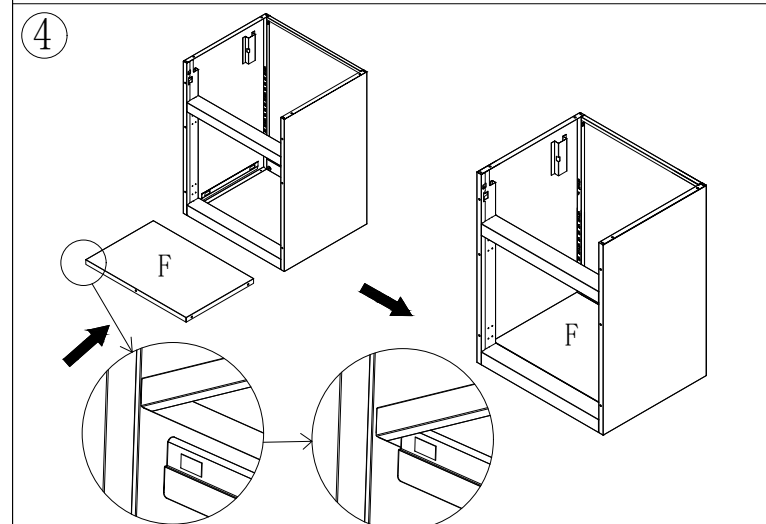 
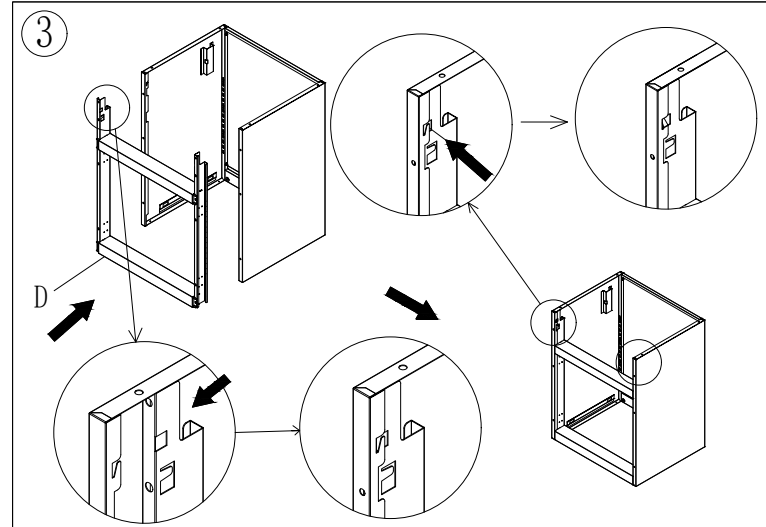 
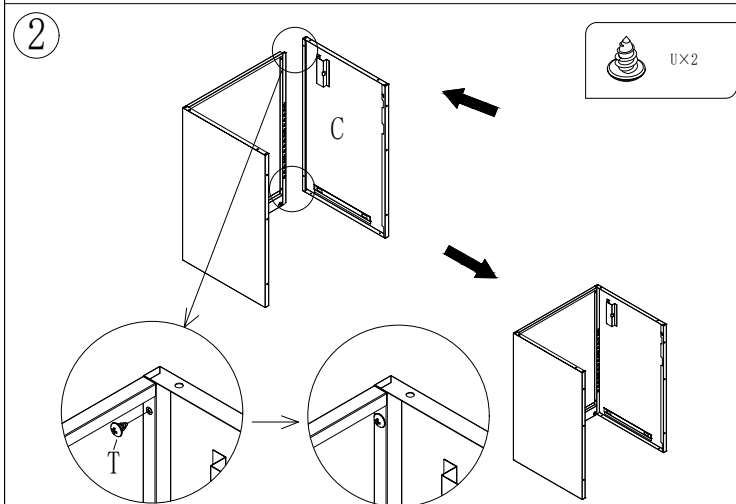 
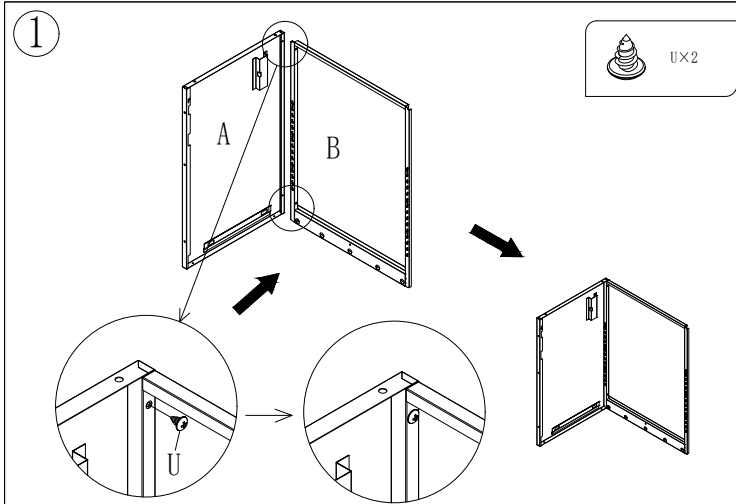 
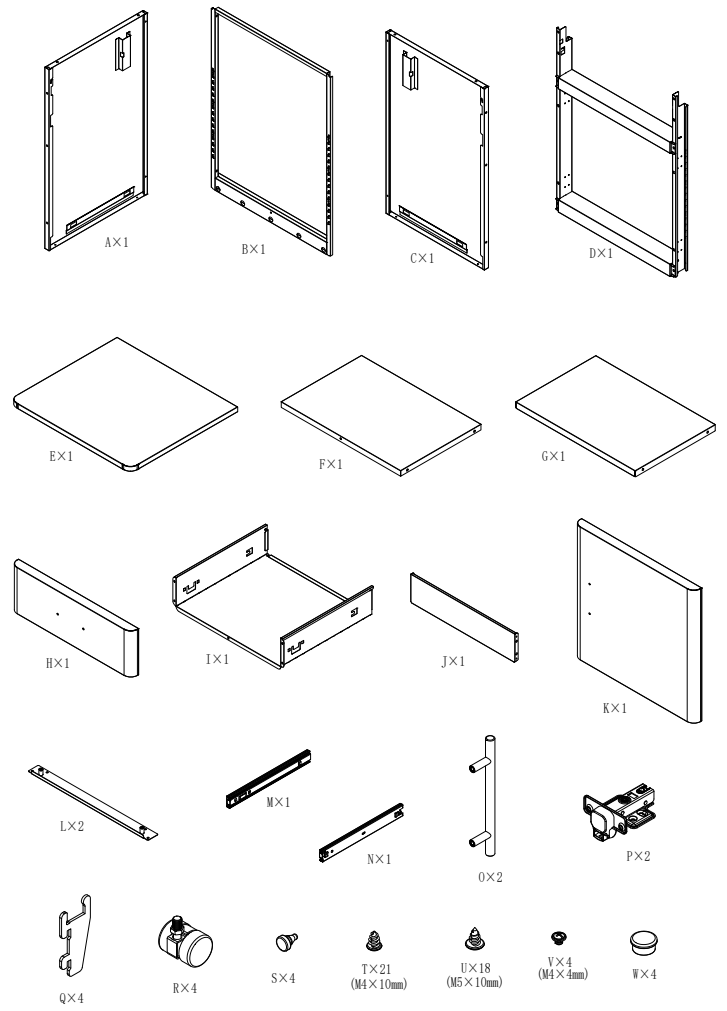 
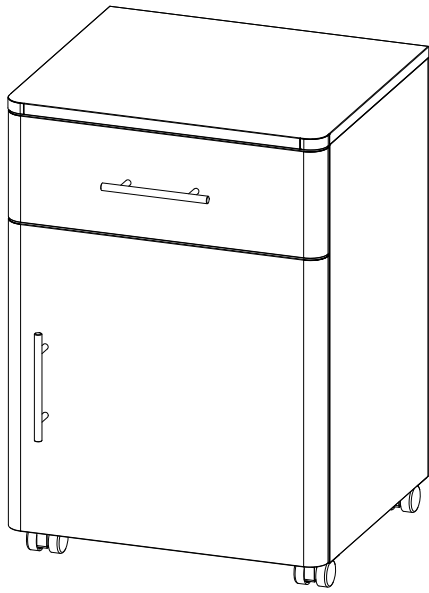 
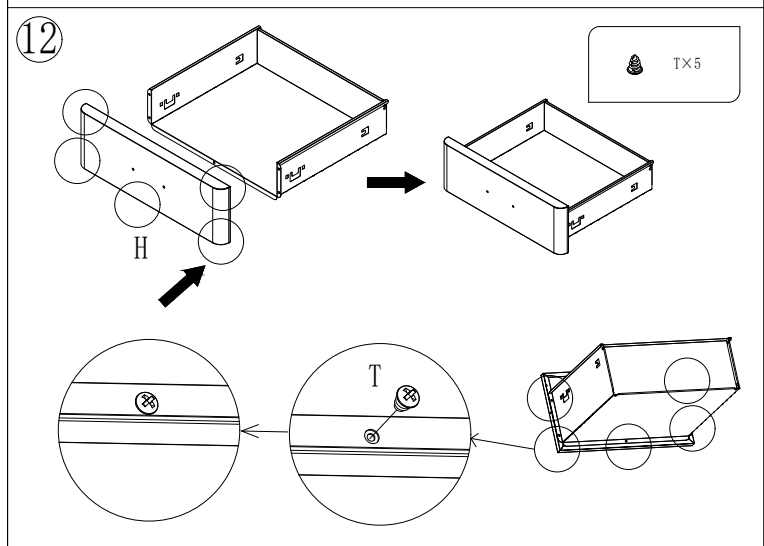 
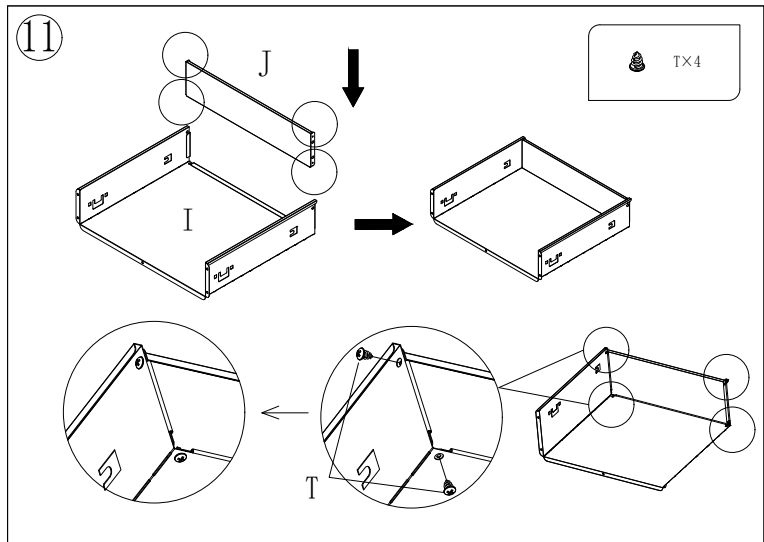 
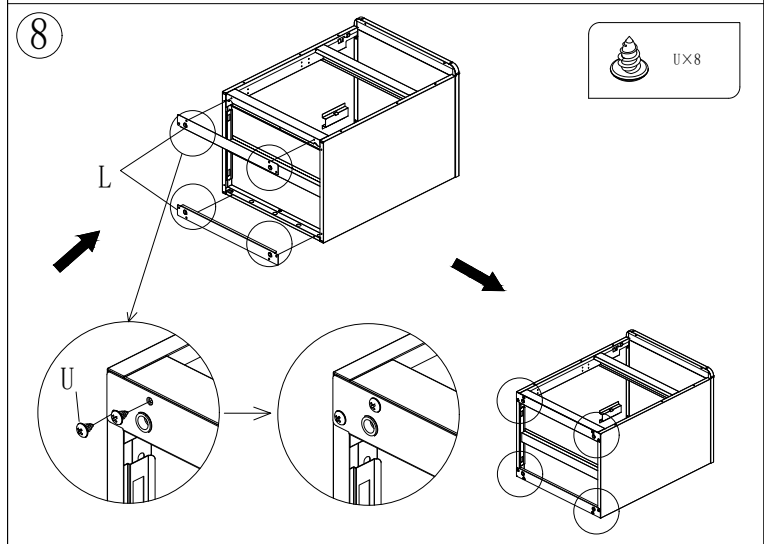 
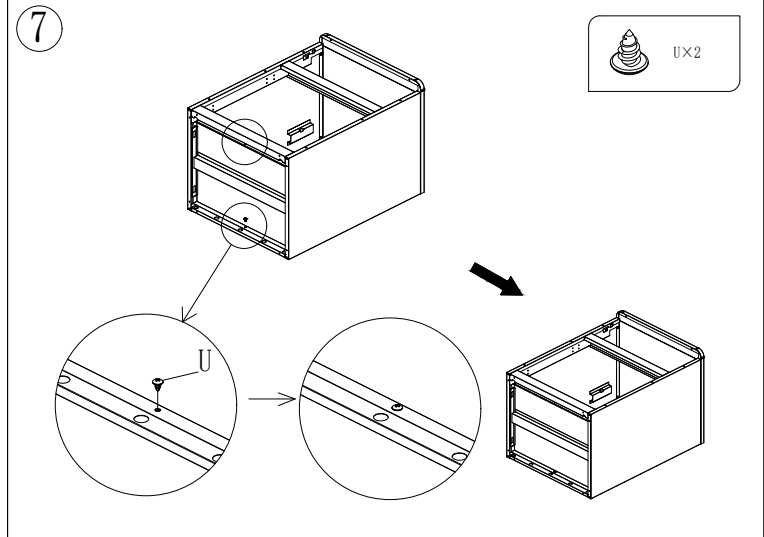 
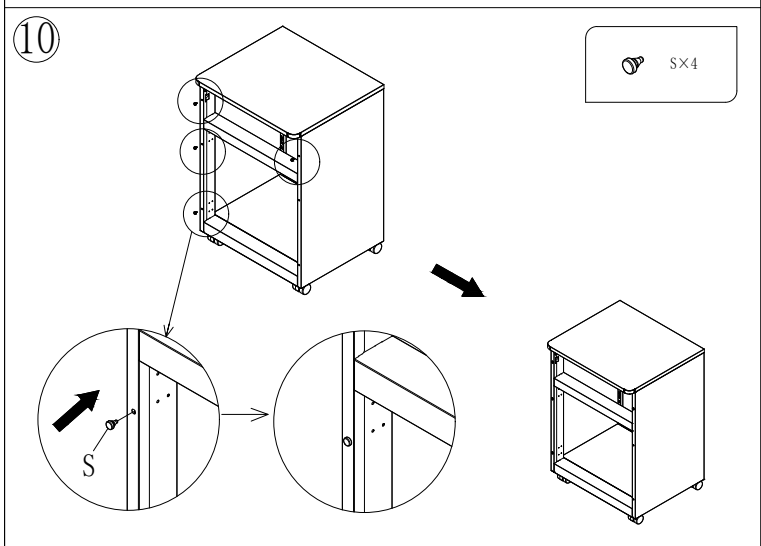 
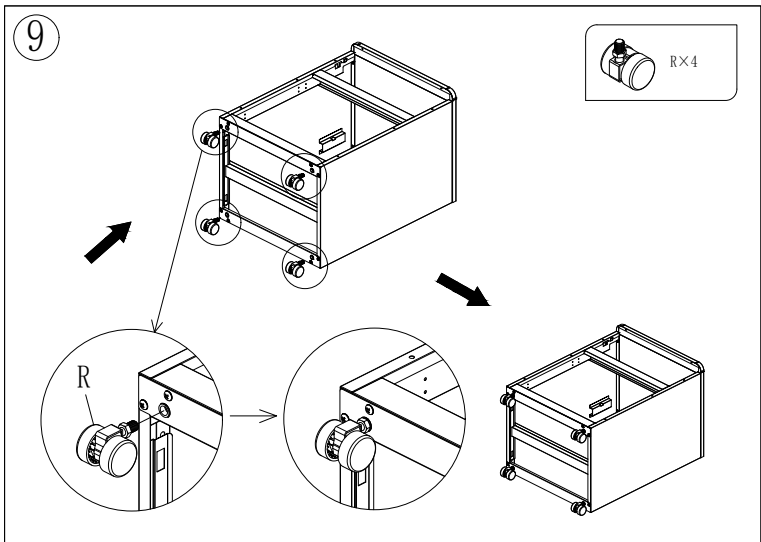 
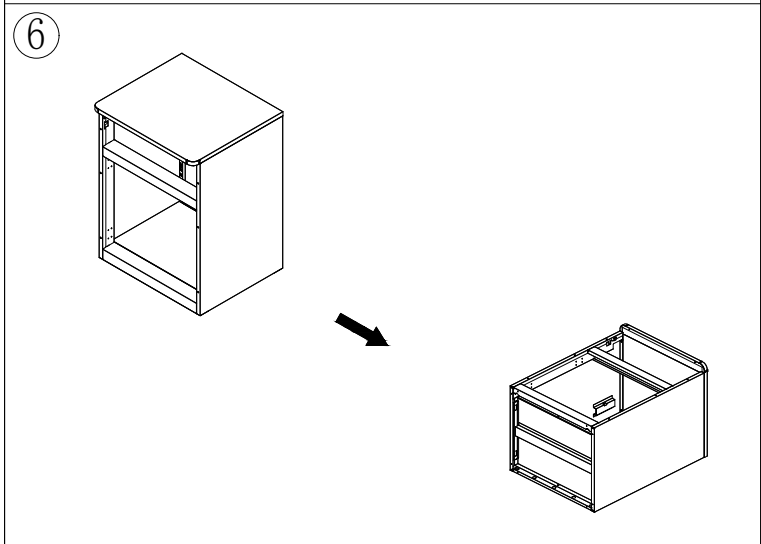 
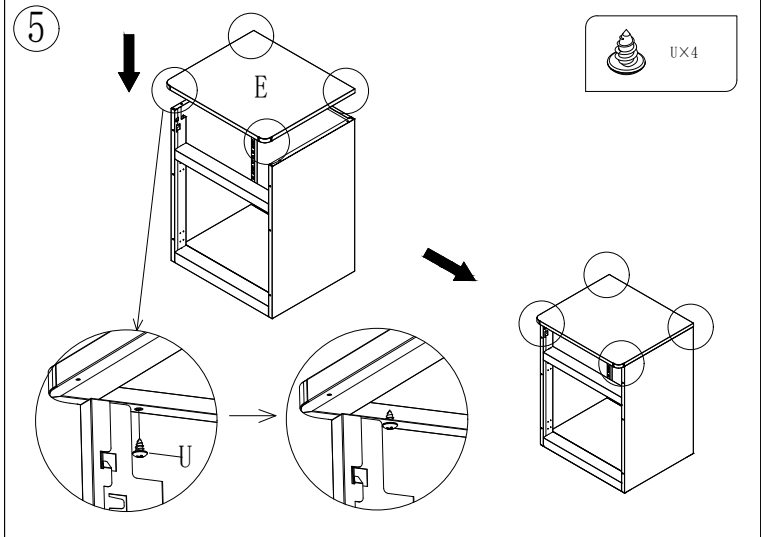 
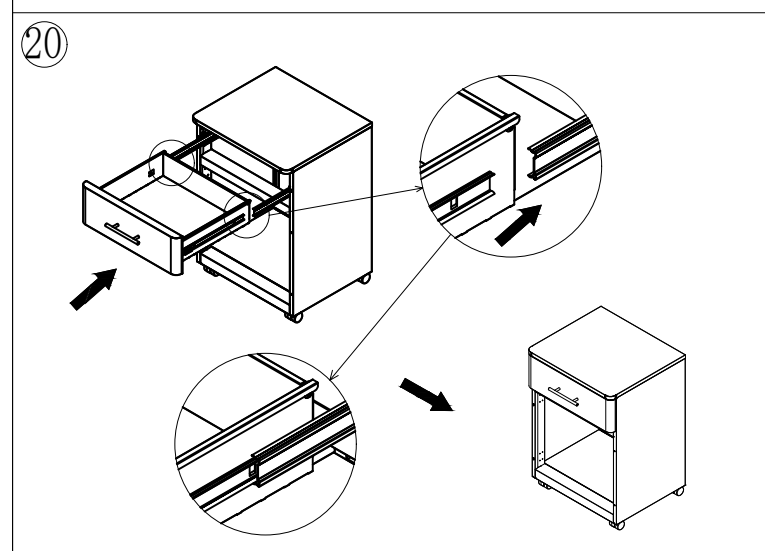 
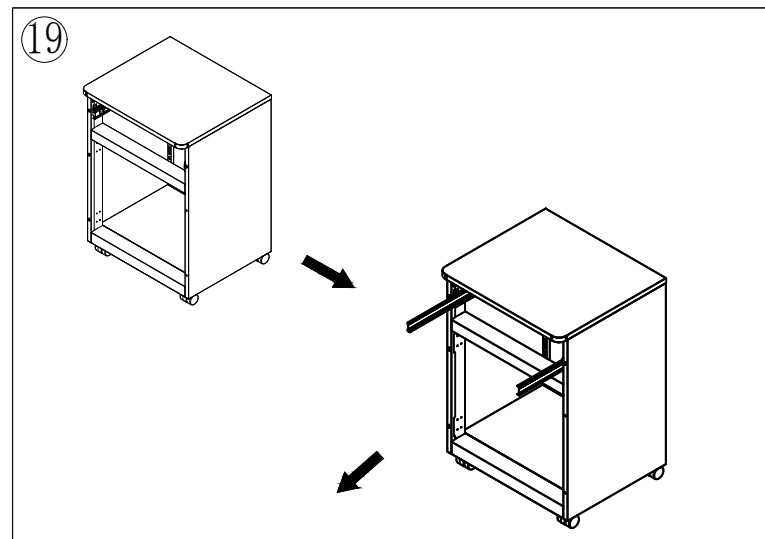 
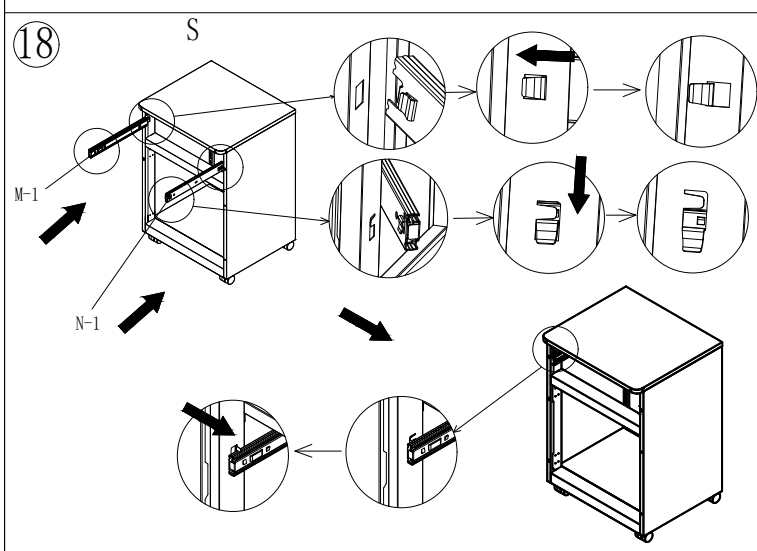 
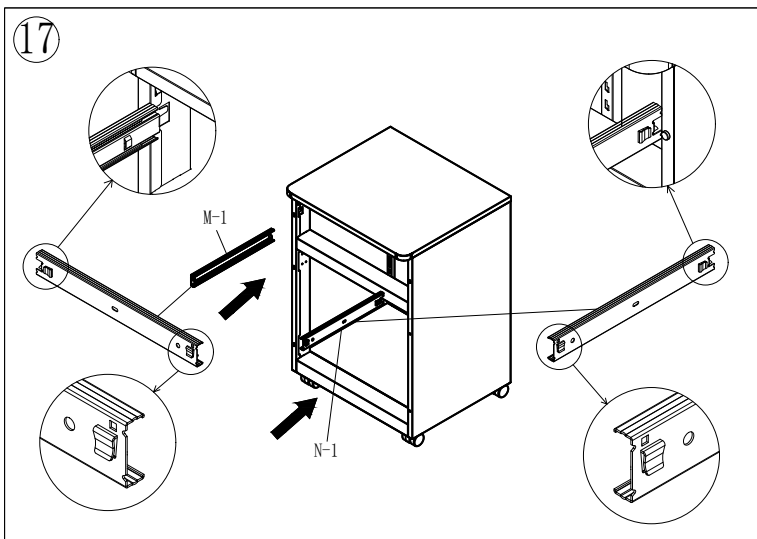 
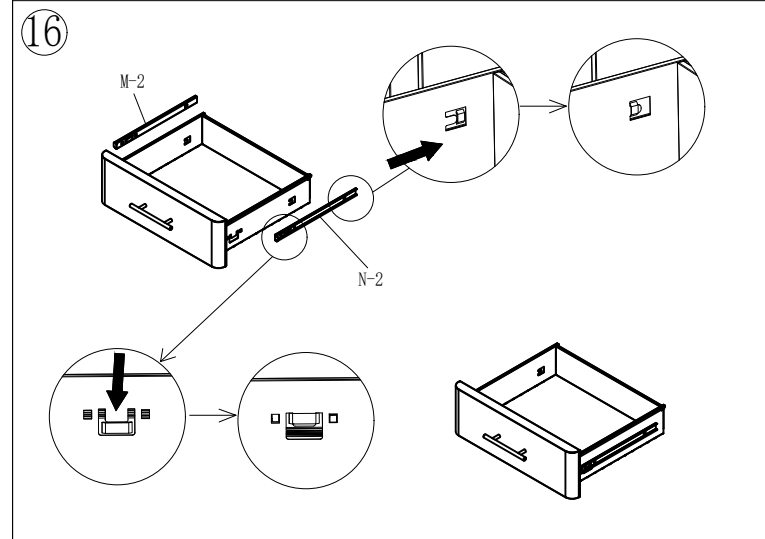 



Assembly Instruction

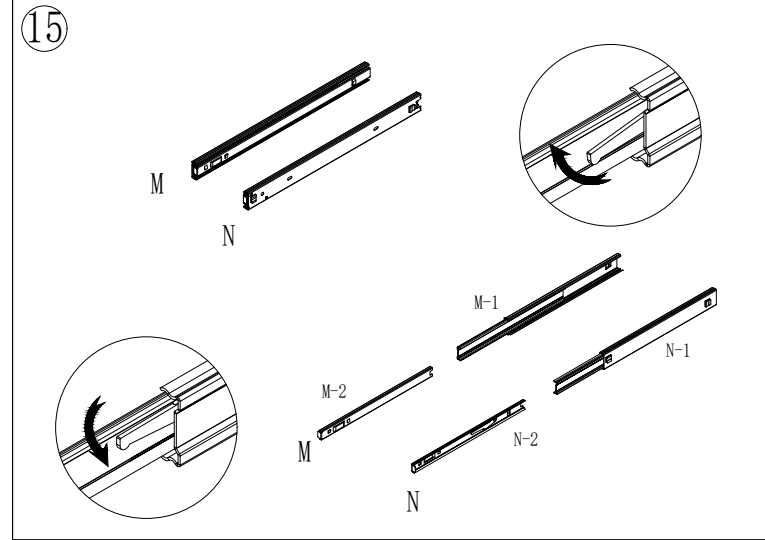

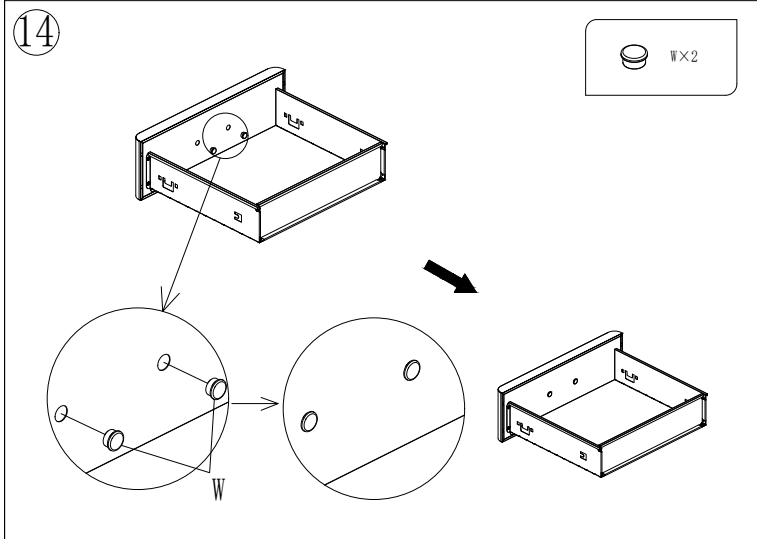


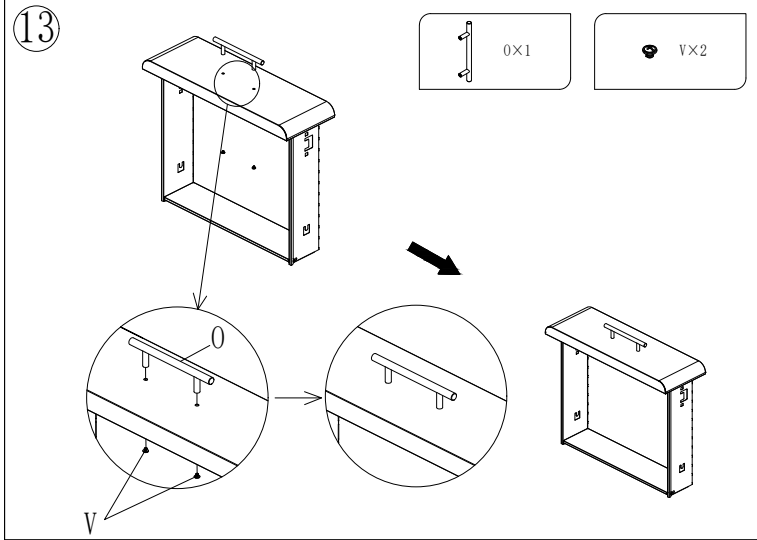

 
21

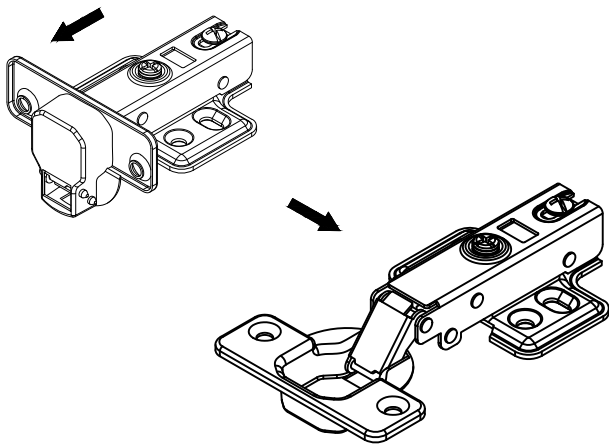


22

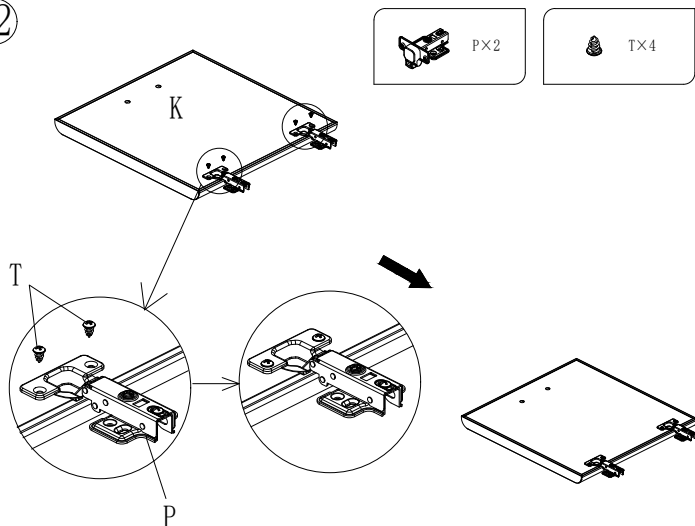


25

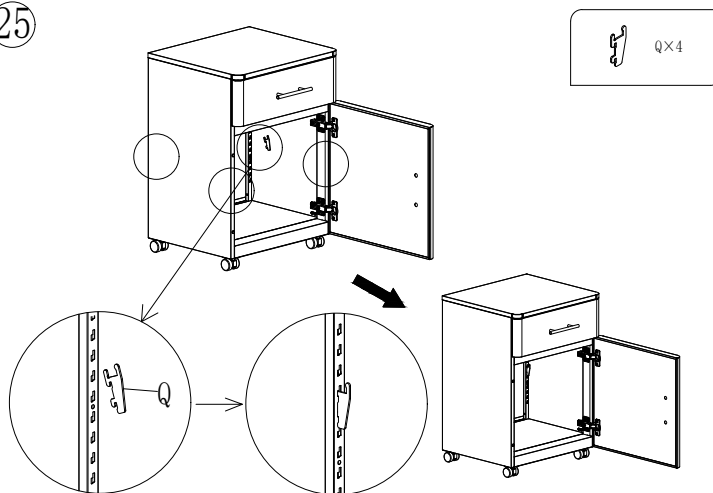


26

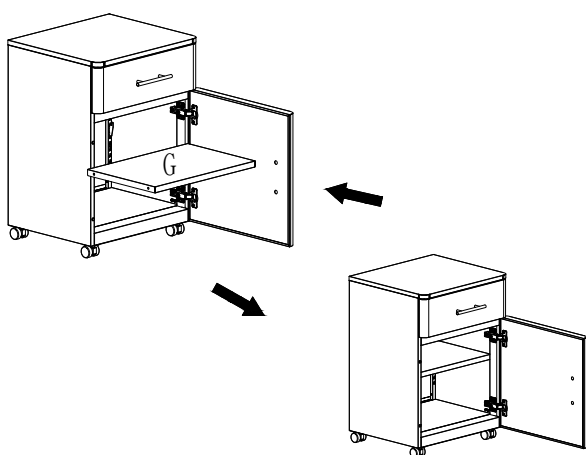


23

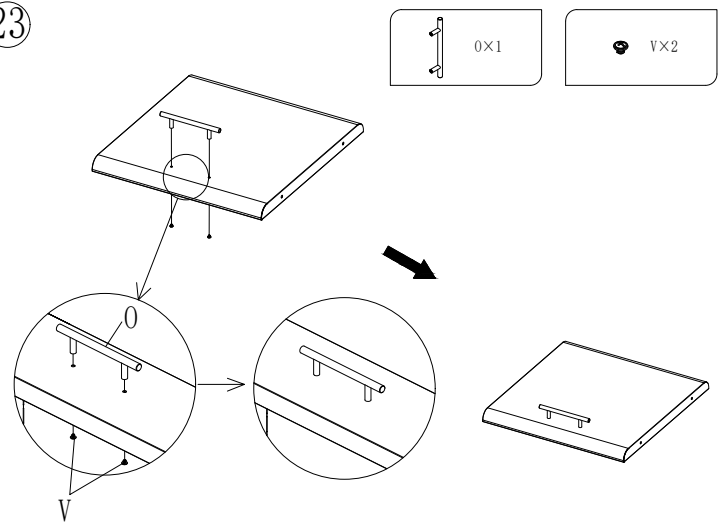


24

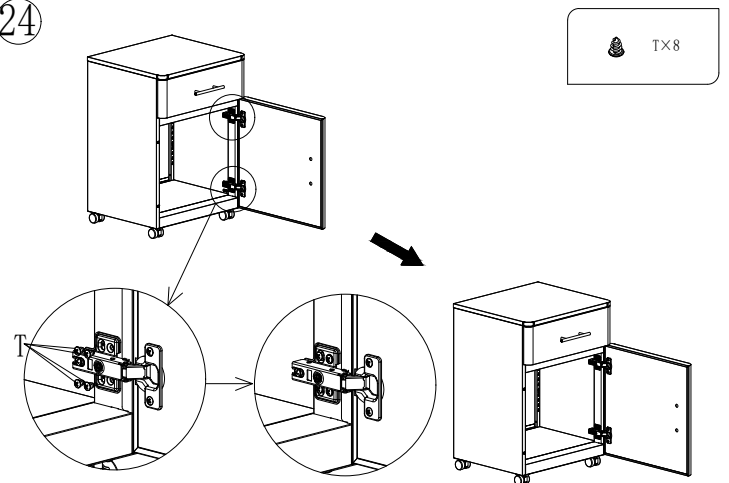

27

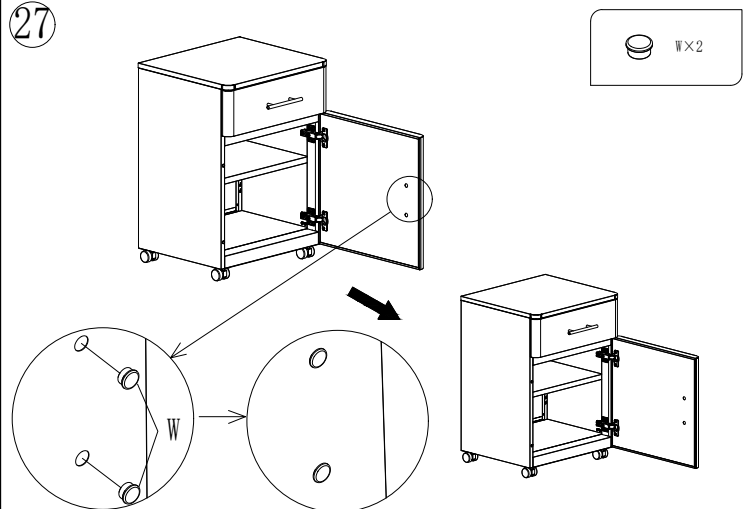

28

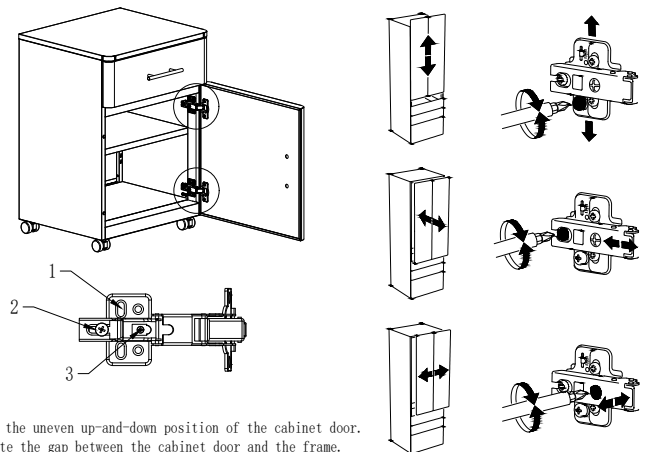

1. Adjust the uneven up-and-down position of the cabinet door.
2. Regulate the gap between the cabinet door and the frame.
3. Adjust the left-right height imbalance of the cabinet door.