 
 
 
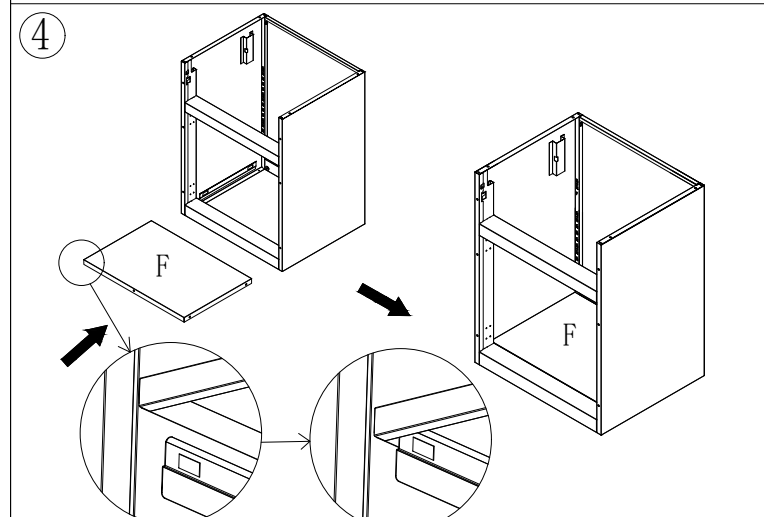 
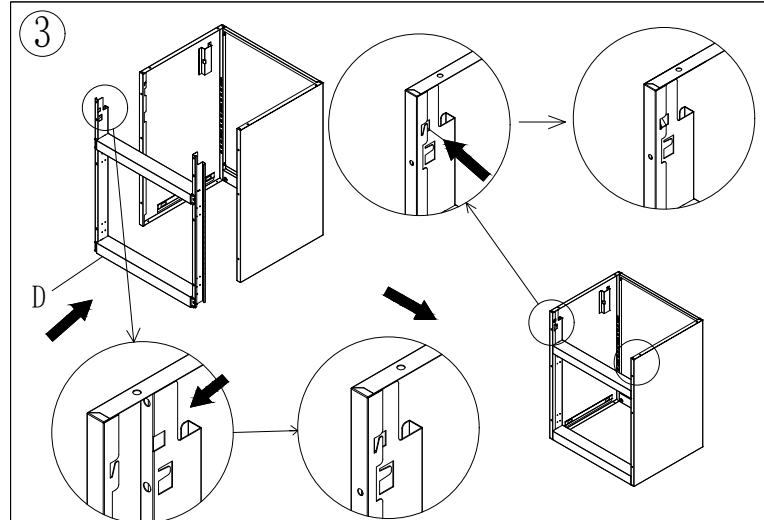 
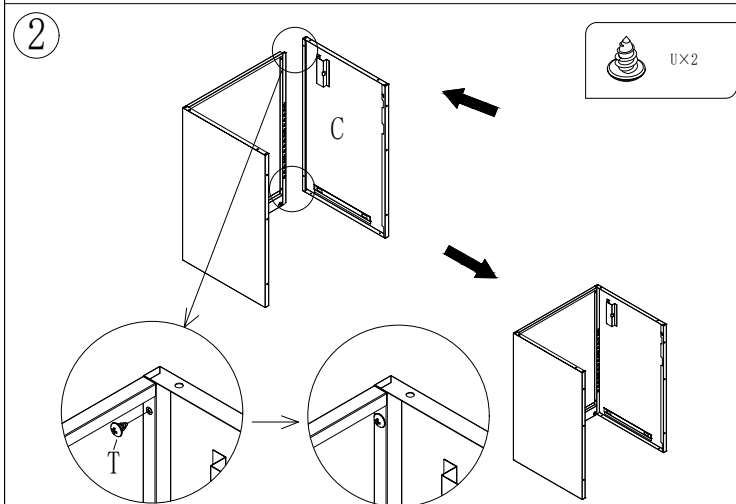 
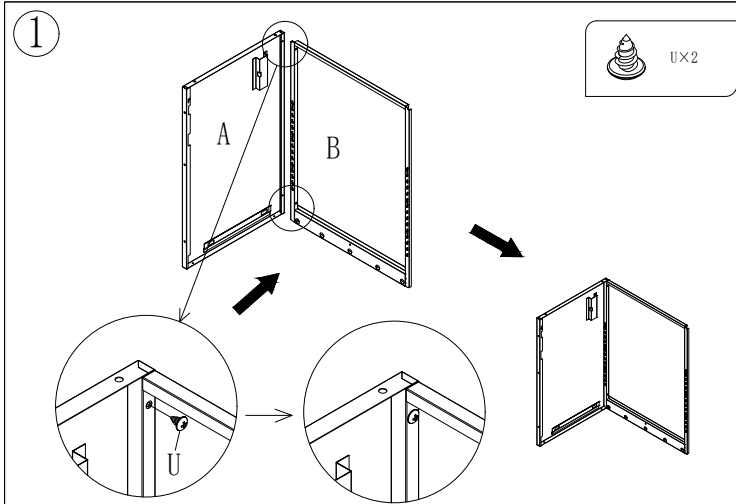 
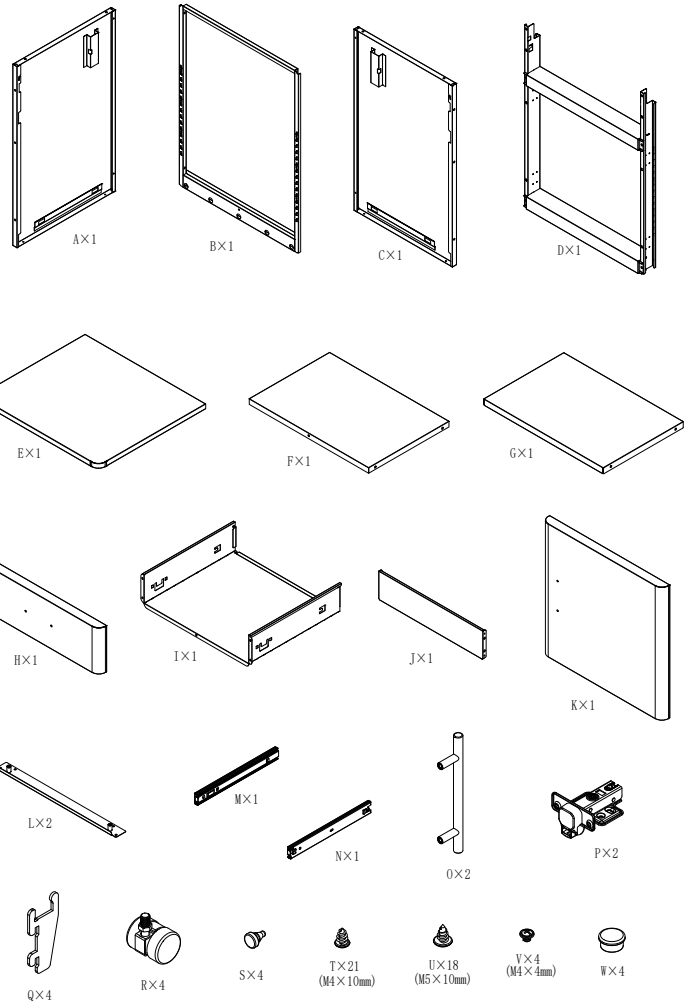 
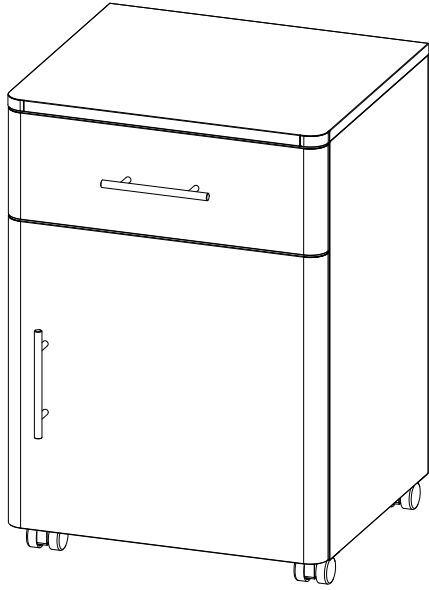 
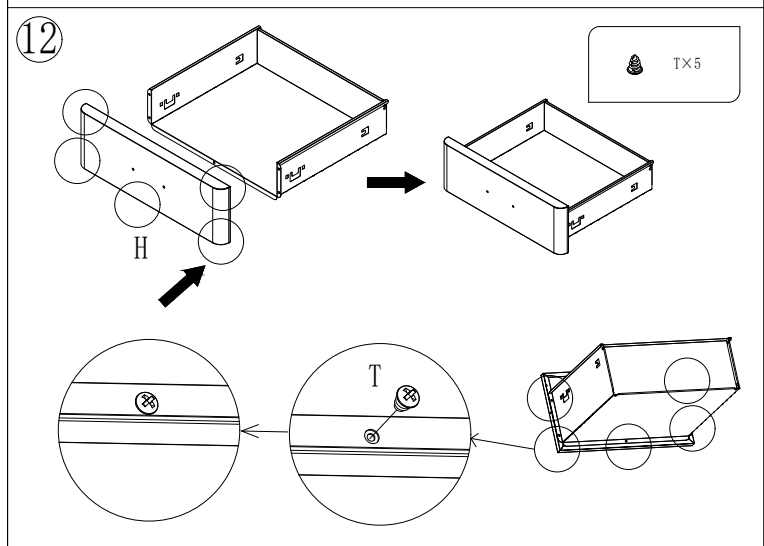 
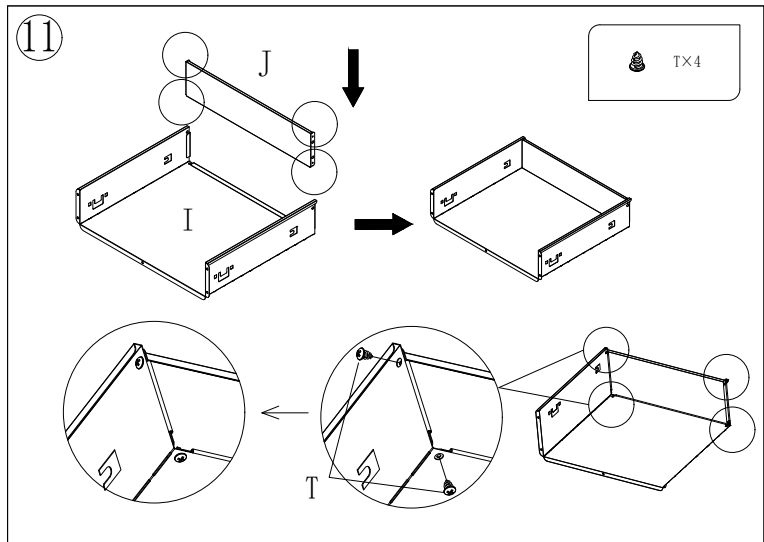 
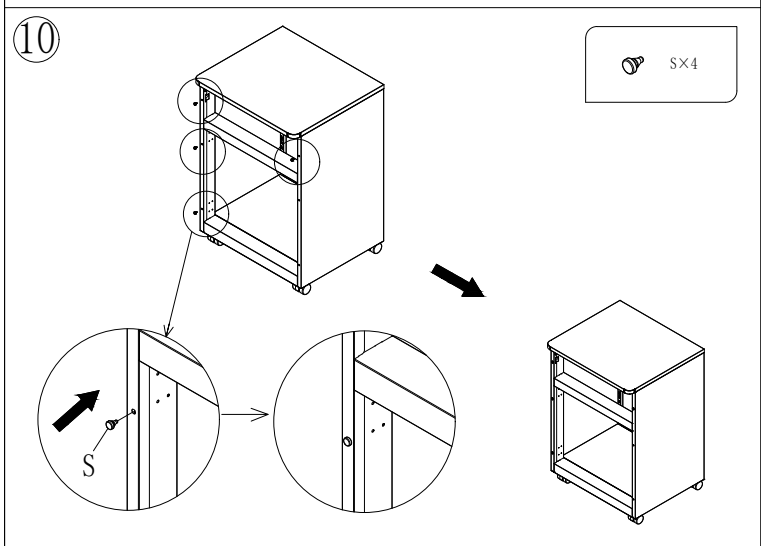 
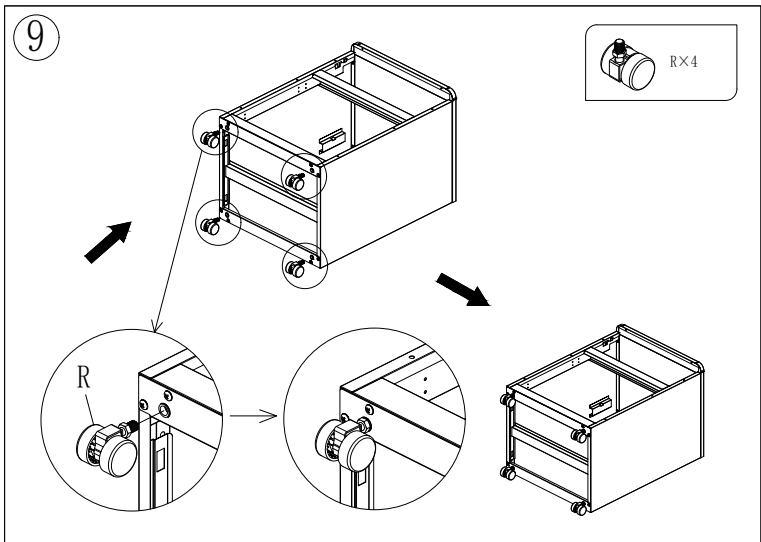 
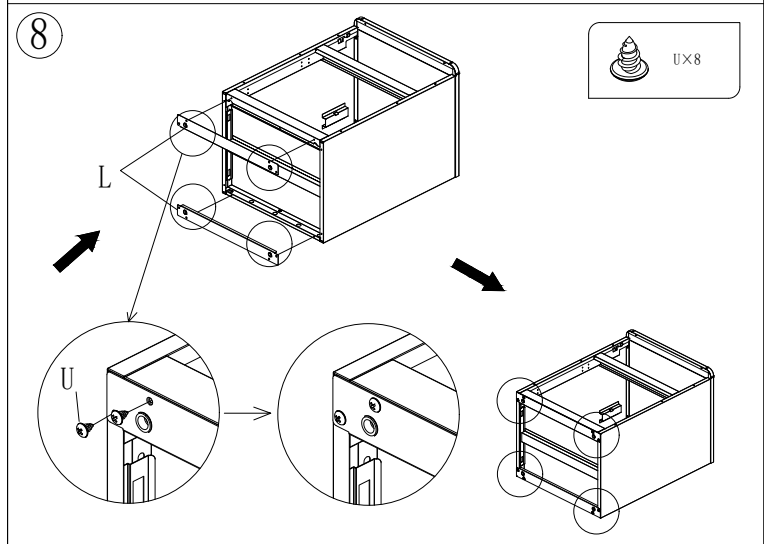 
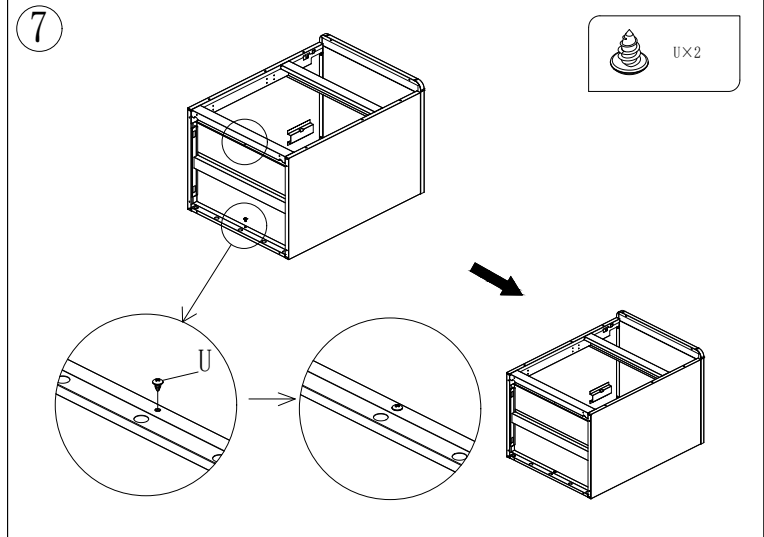 
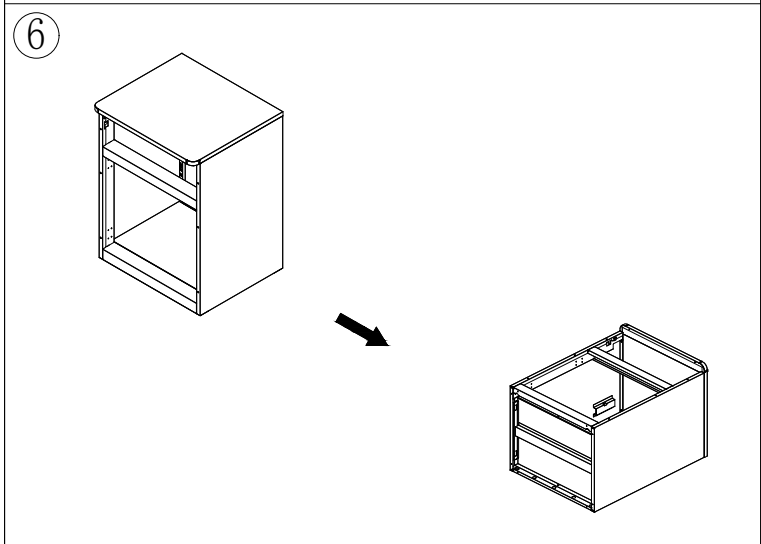 
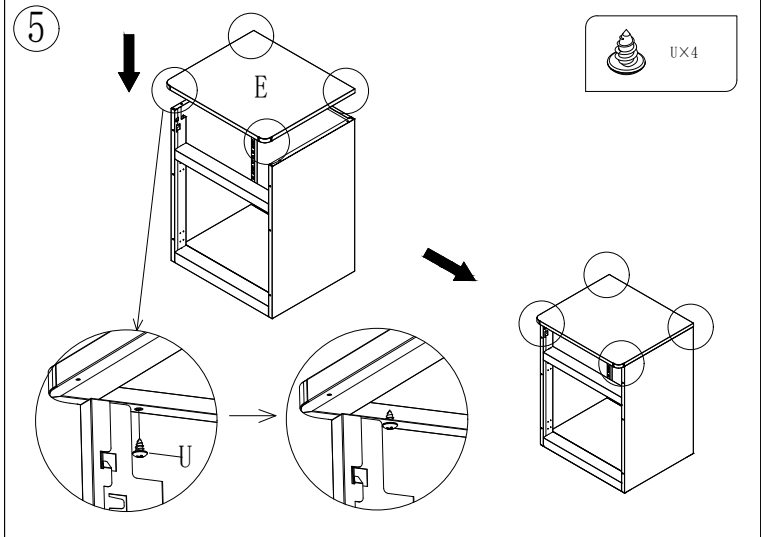 
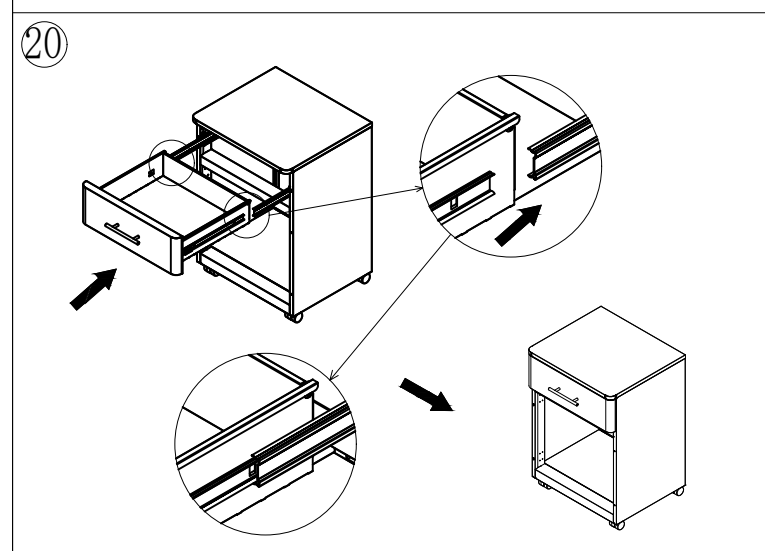 
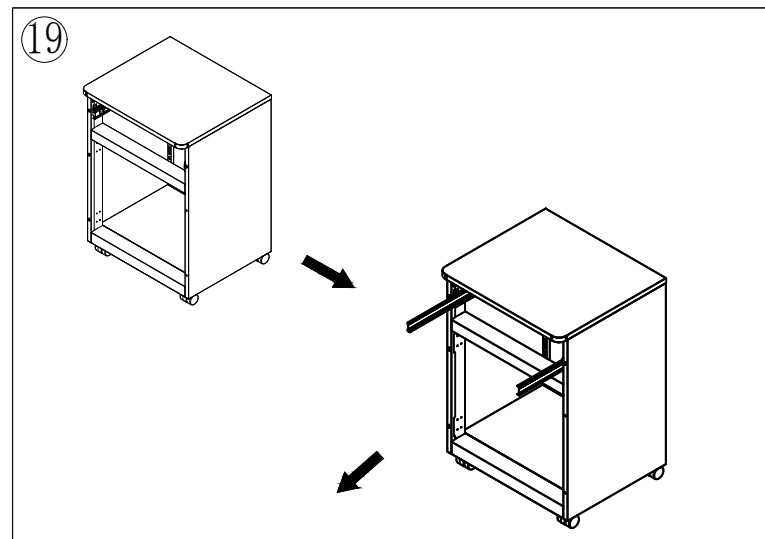 
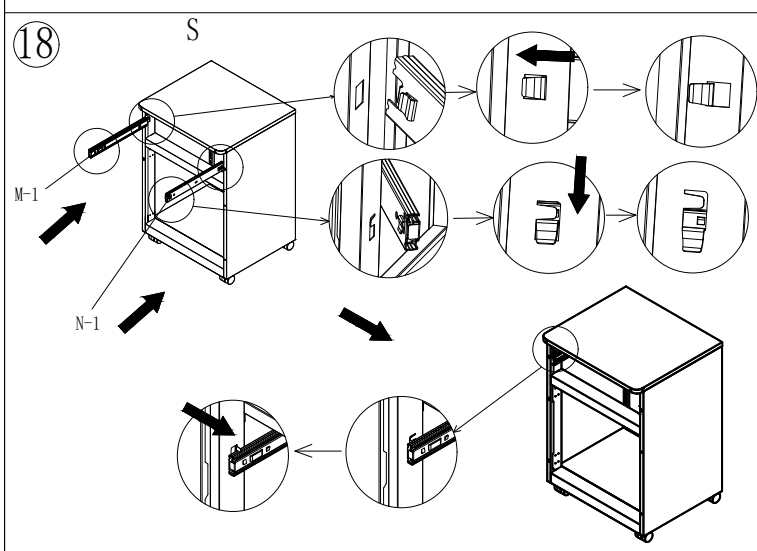 
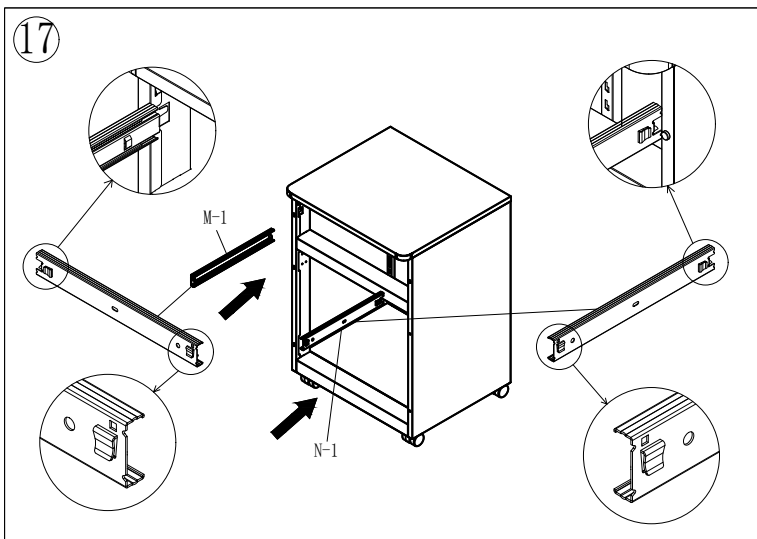 
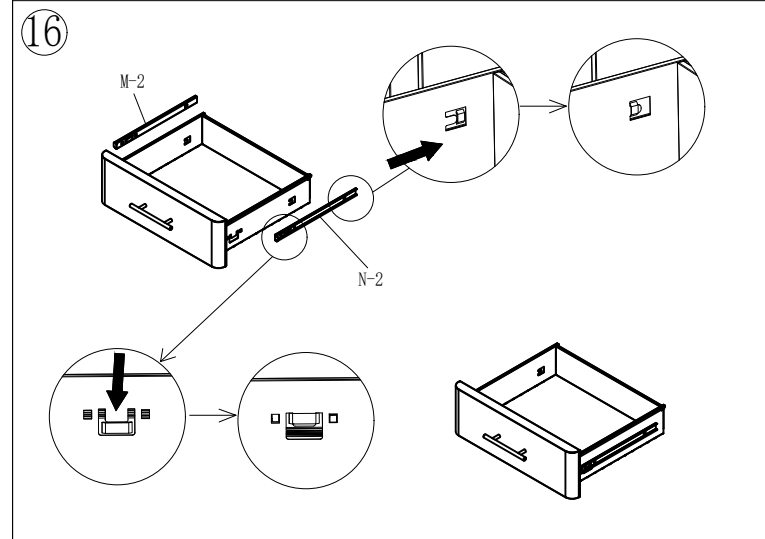 



Assembly Instruction

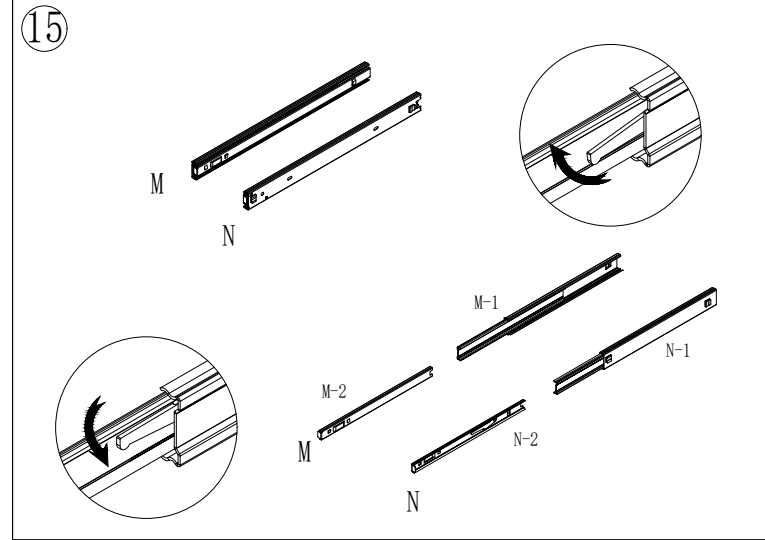

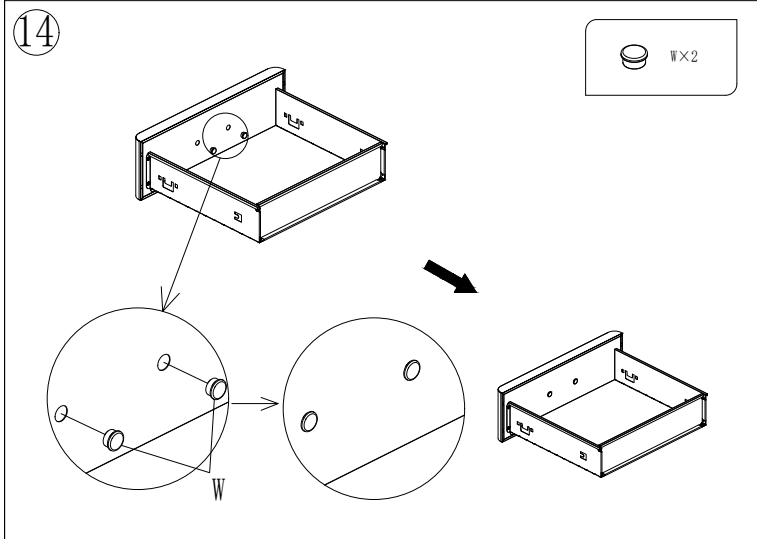


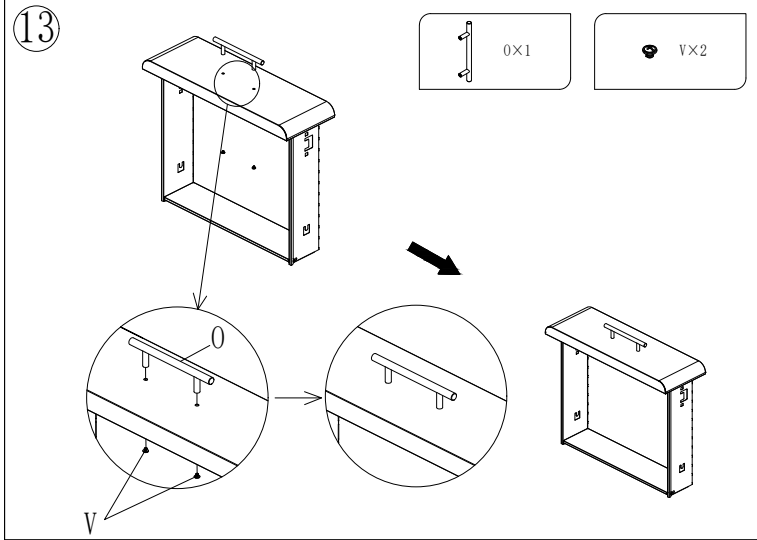

 
21

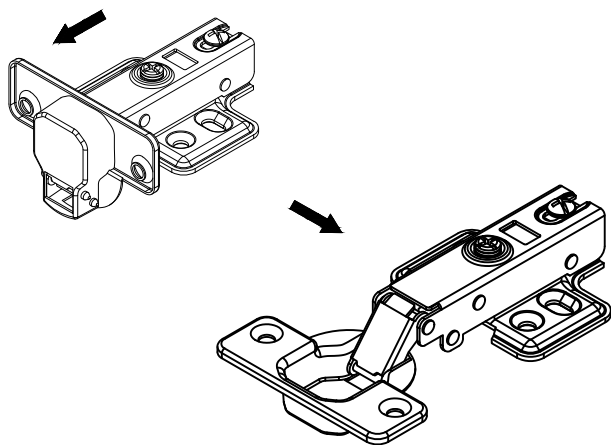


22

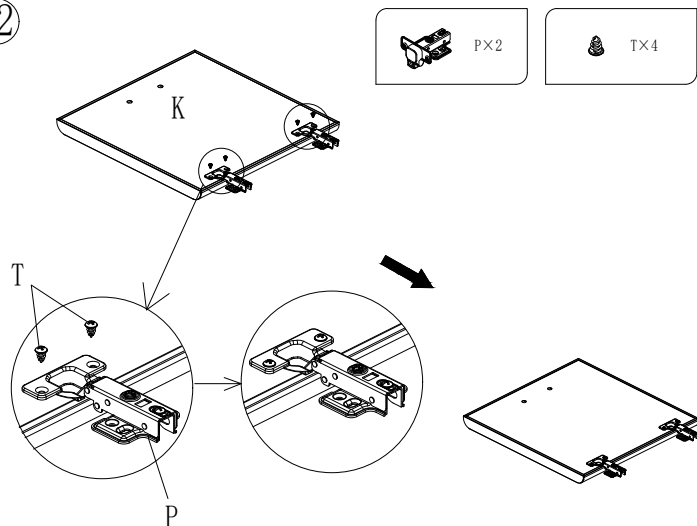 


23

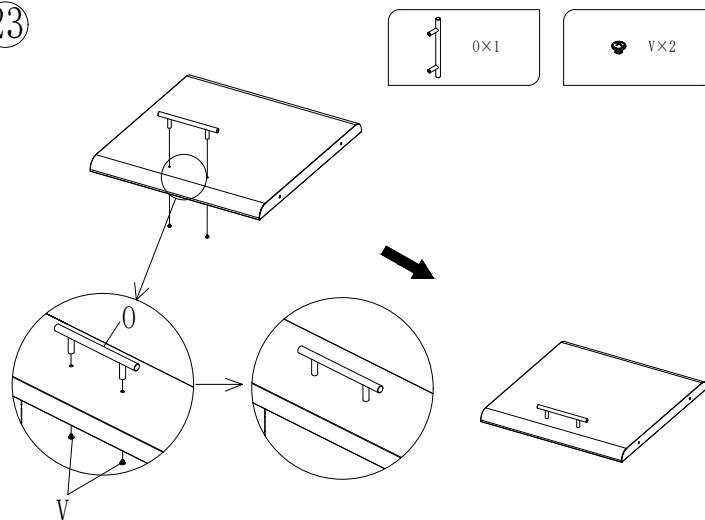 


24

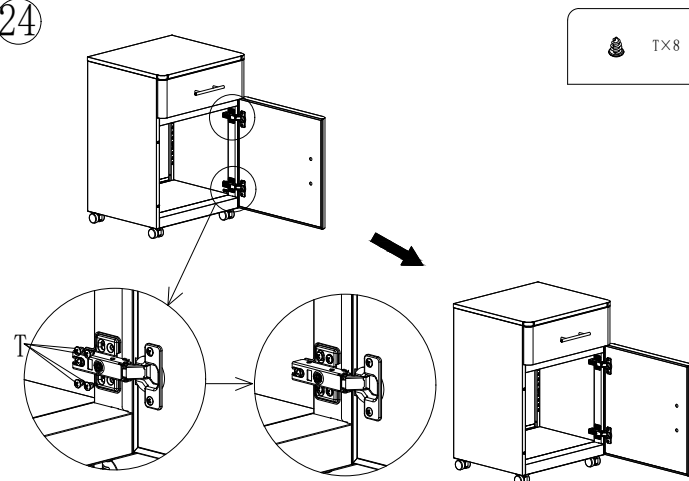 


25

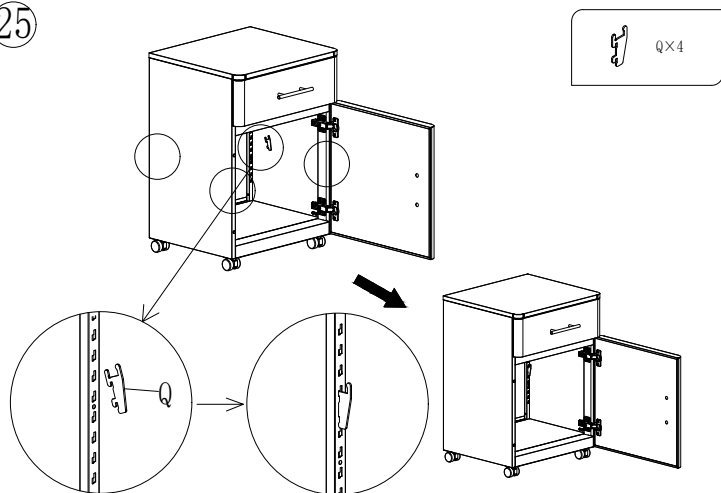 


26

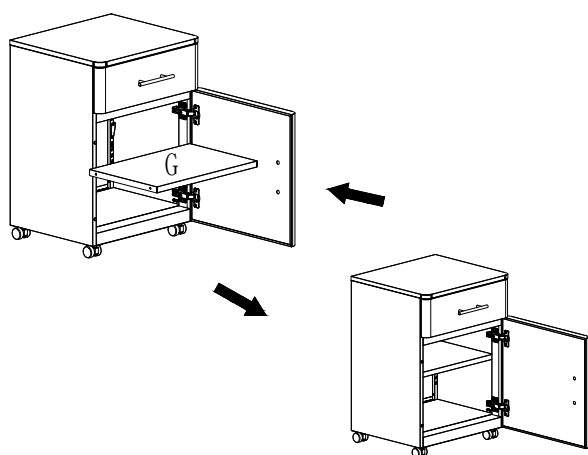 

27

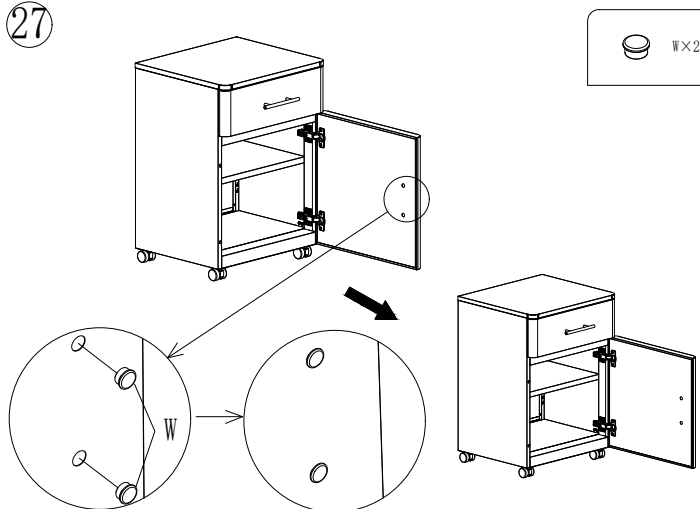 

28

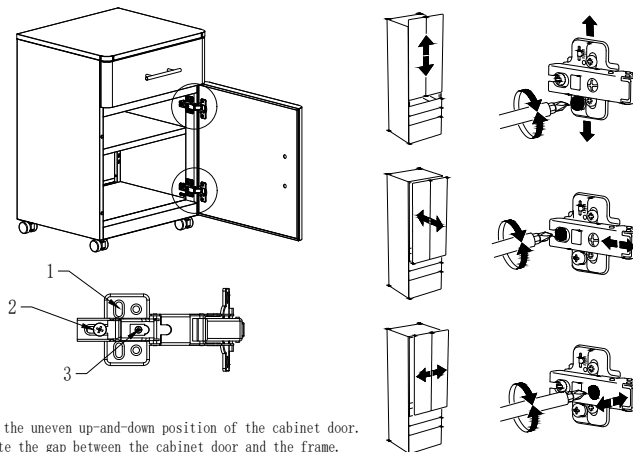 

1. Adjust the uneven up-and-down position of the cabinet door.
2. Regulate the gap between the cabinet door and the frame.
3. Adjust the left-right height imbalance of the cabinet door.