 
 
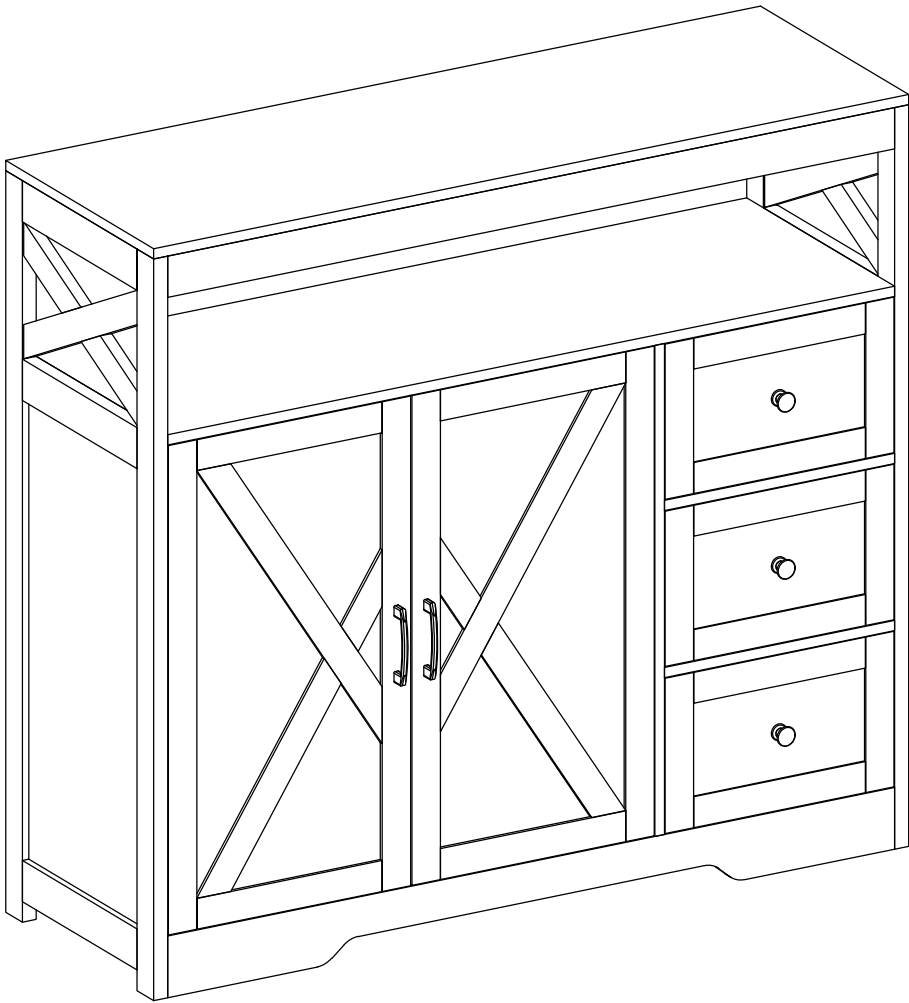 
 





ASSEMBLY INSTRUCTION



A	x 1	B	x 16+1	C	x 50+1	D	x 50+1	E	x 4+1	F	x 2	G	x 4+1
													
M4		Ø6 x 30mm										Ø4 x 18mm	
H	x 14+1	I	x 48+1	J	x 4	K	x 6+1	L	x 6+1	M	x 3	N	x 3+1
													
Ø3.5 x 38mm		Ø3.5 x 10mm				Ø3.5 x 15mm						Ø4 x 12mm	
CR	x 3	DR	x 3	CL	x 3	DL	x 3						
													



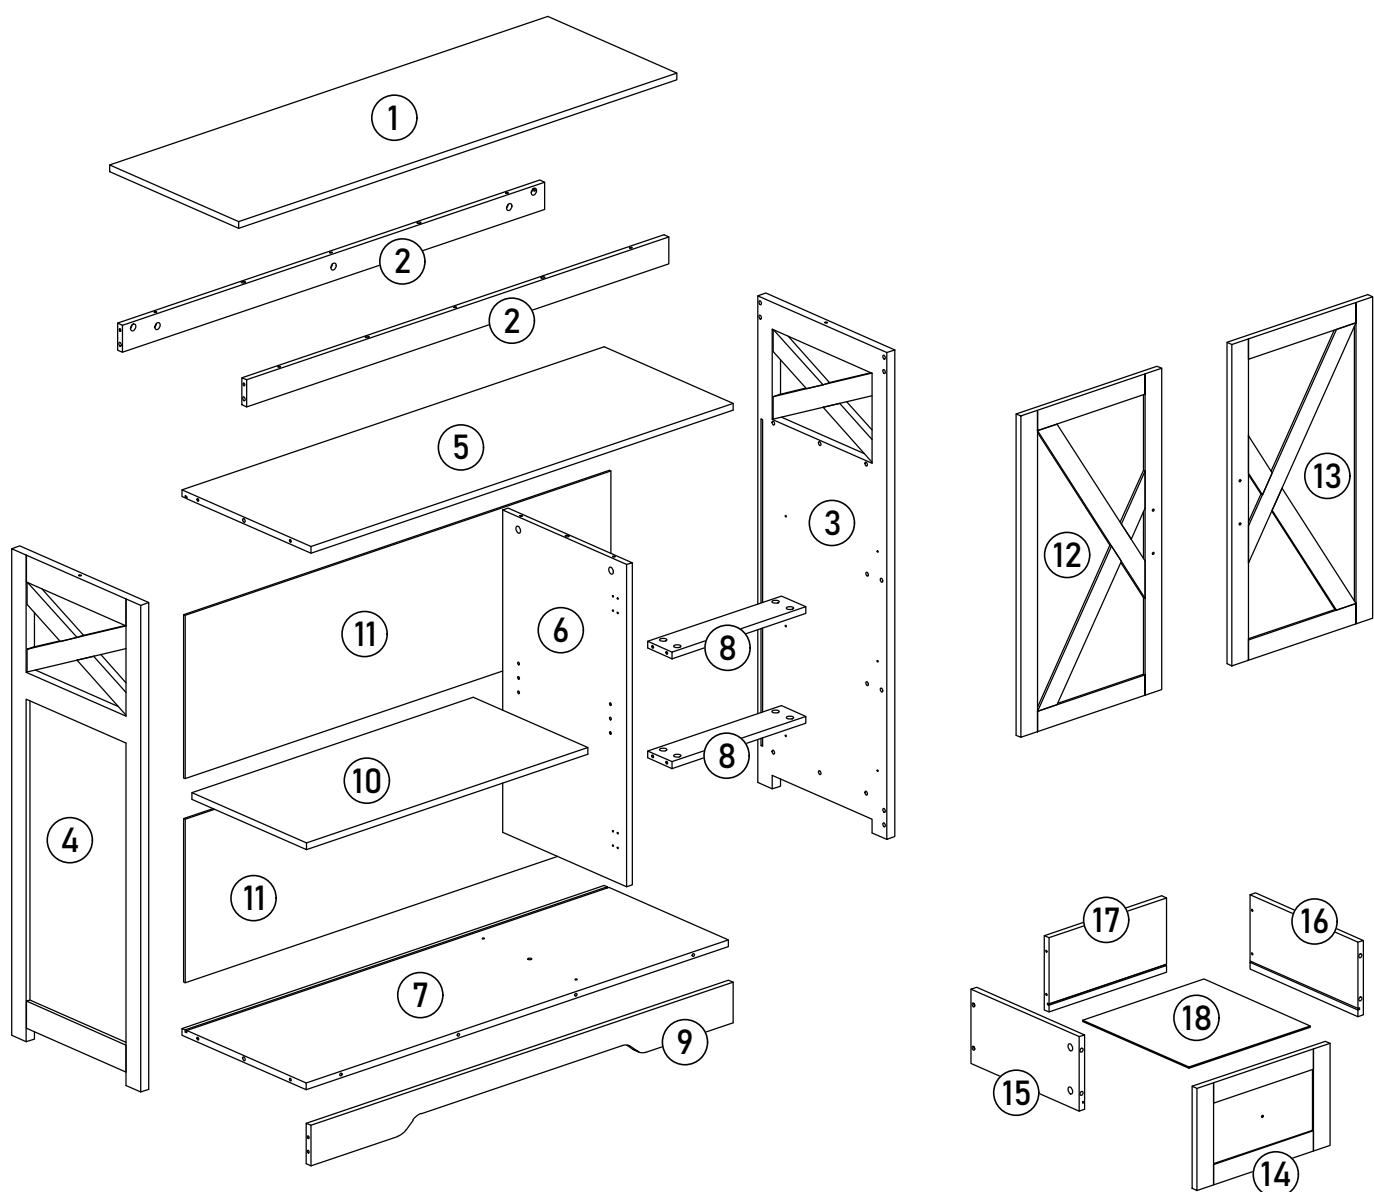


   STEP 1

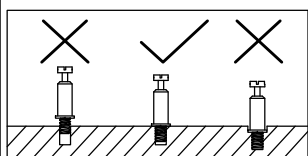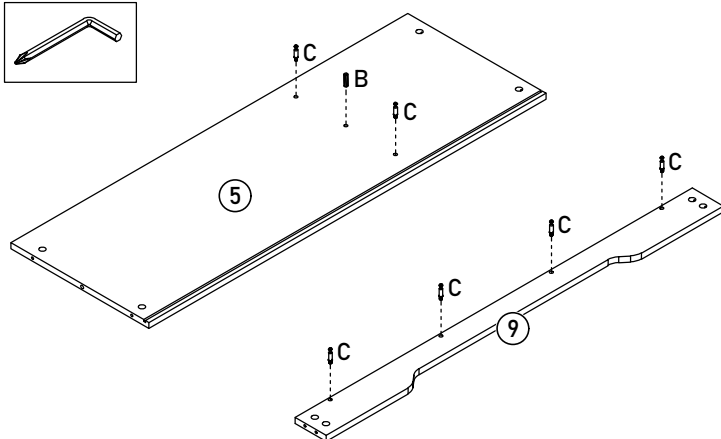



B x 4PCS C x 6PCS

   STEP 2

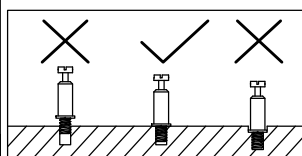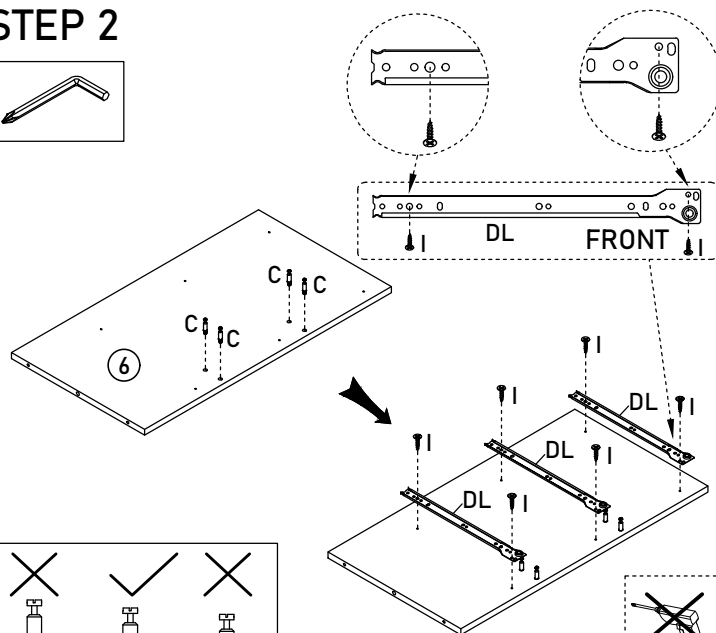



DL x 3PCS C x 4PCS I x 6PCS

  STEP 3

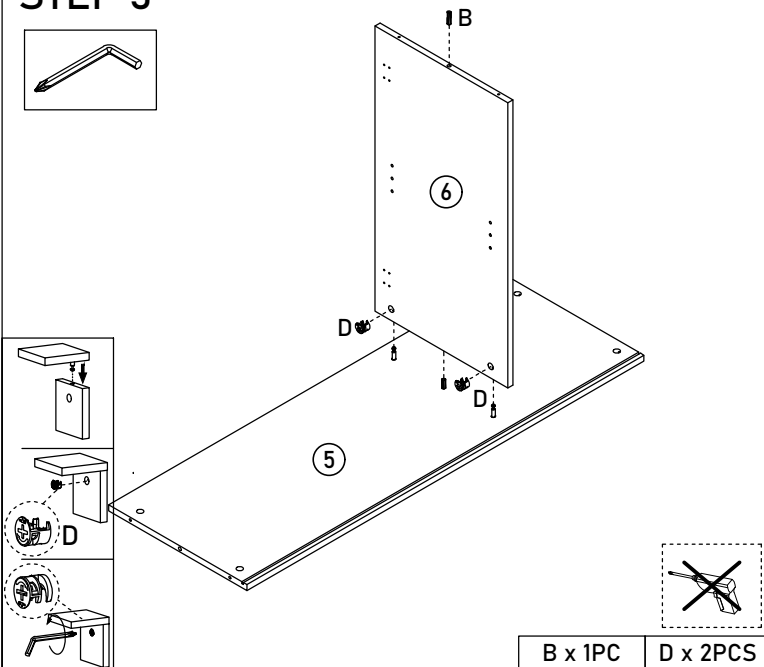



B x 1PC D x 2PCS

  STEP 4

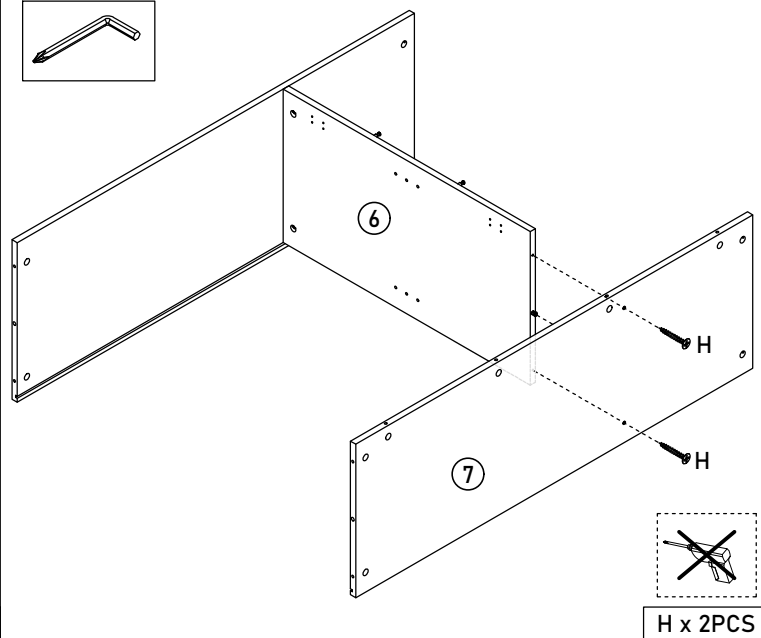



H x 2PCS

  STEP 5

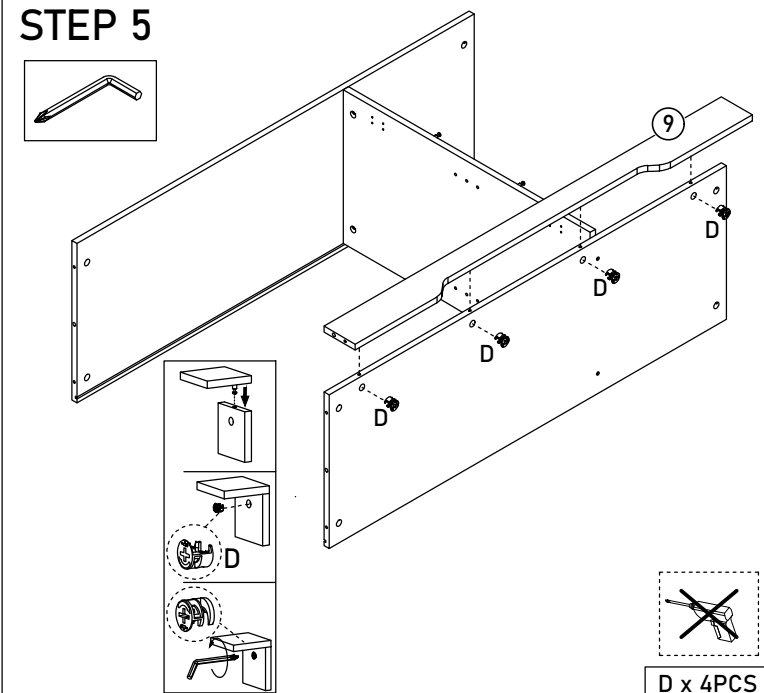



D x 4PCS

  STEP 6

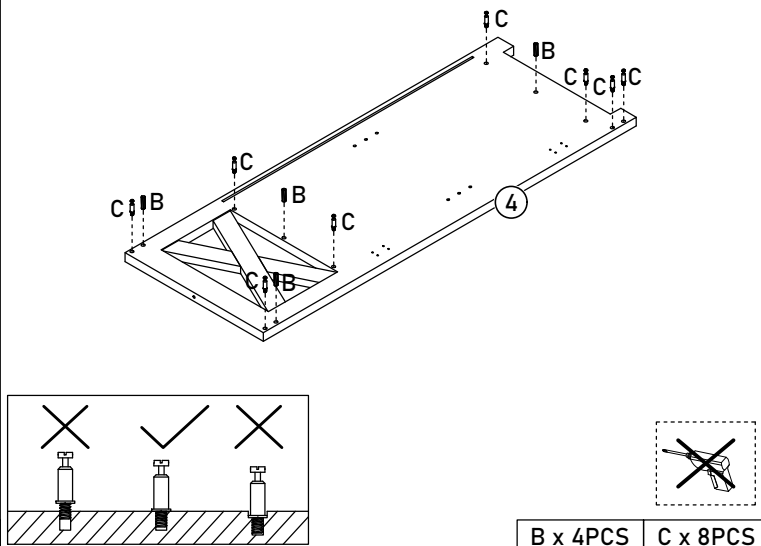



B x 4PCS C x 8PCS

  STEP 7

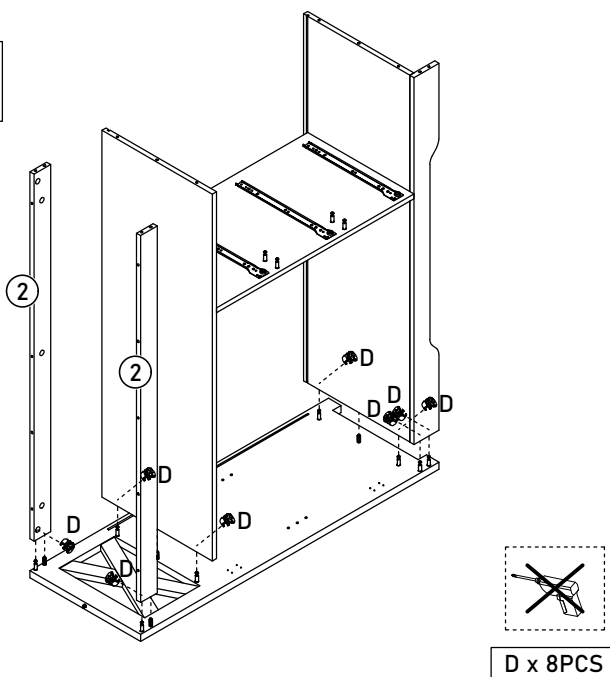



D x 8PCS

  STEP 8

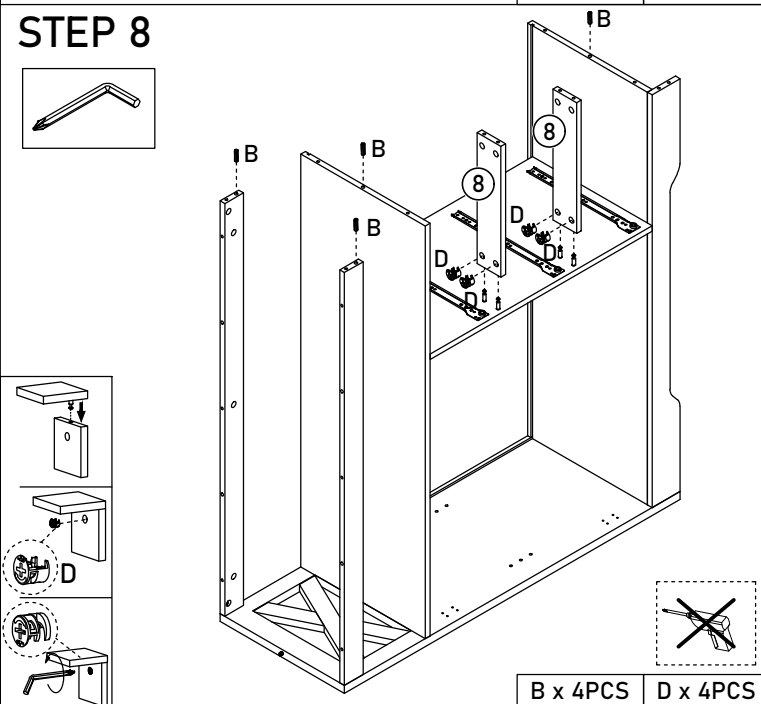



B x 4PCS D x 4PCS

 
 
STEP 9

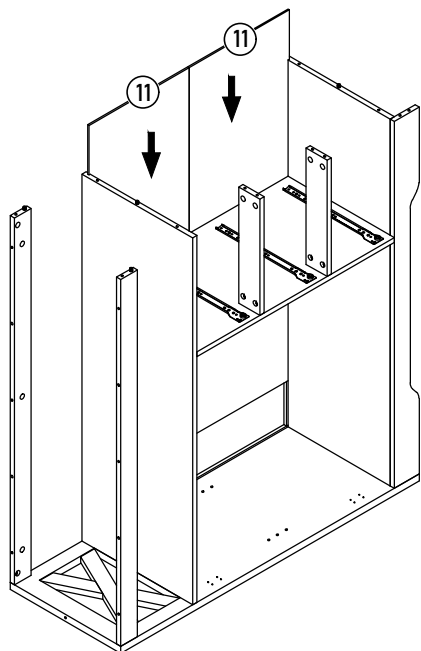

  
STEP 10

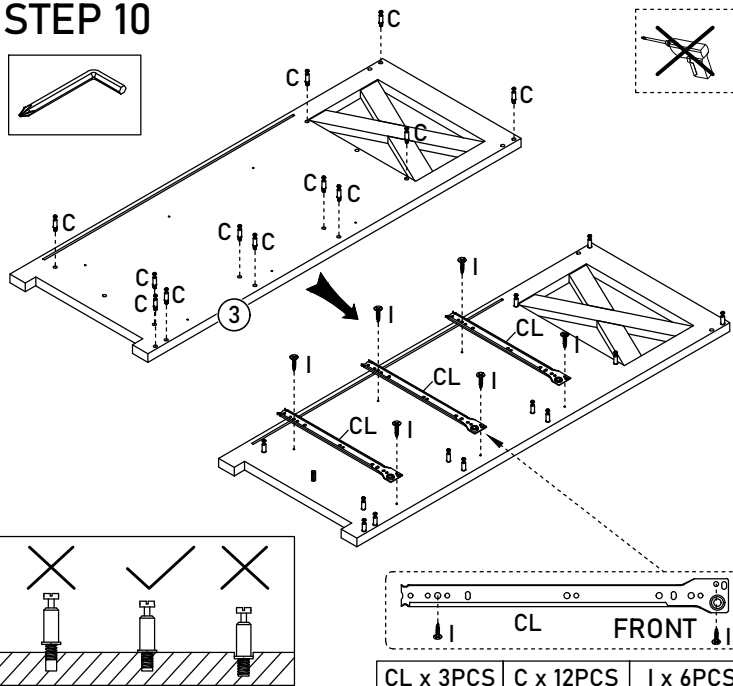

 
 
STEP 11

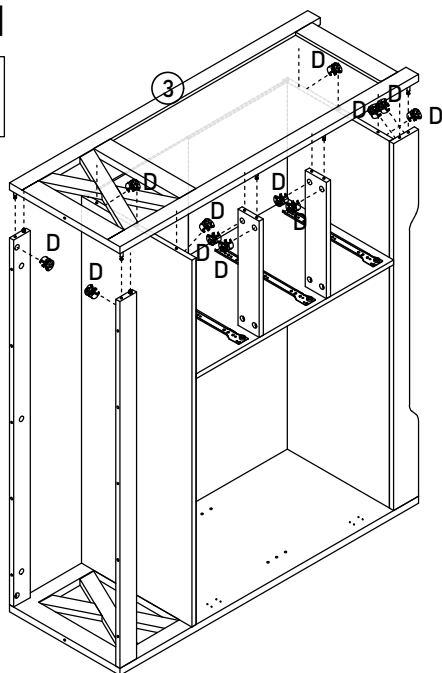


 
STEP 12

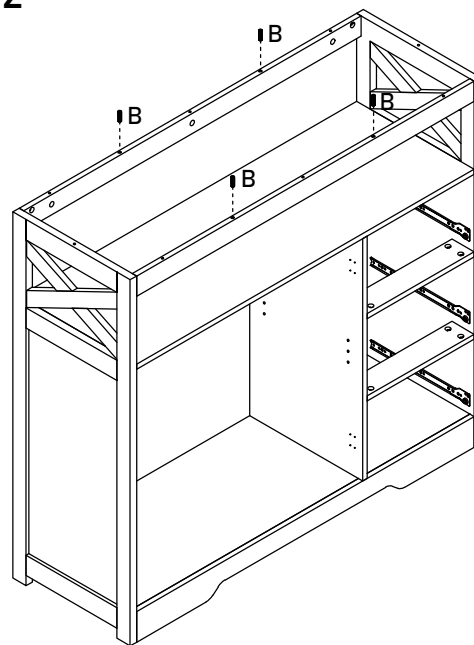

  
STEP 13

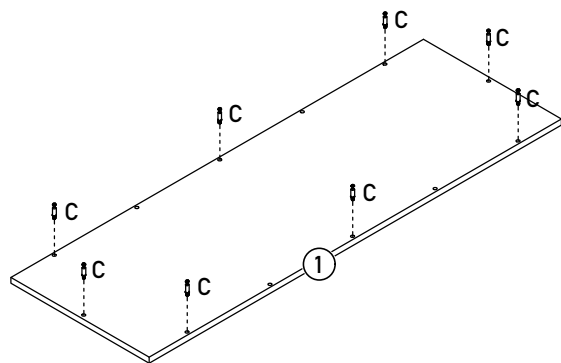

  
STEP 14

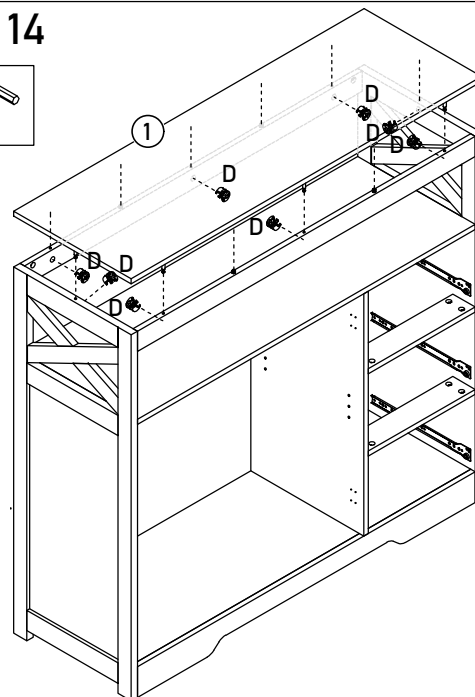

 
STEP 15

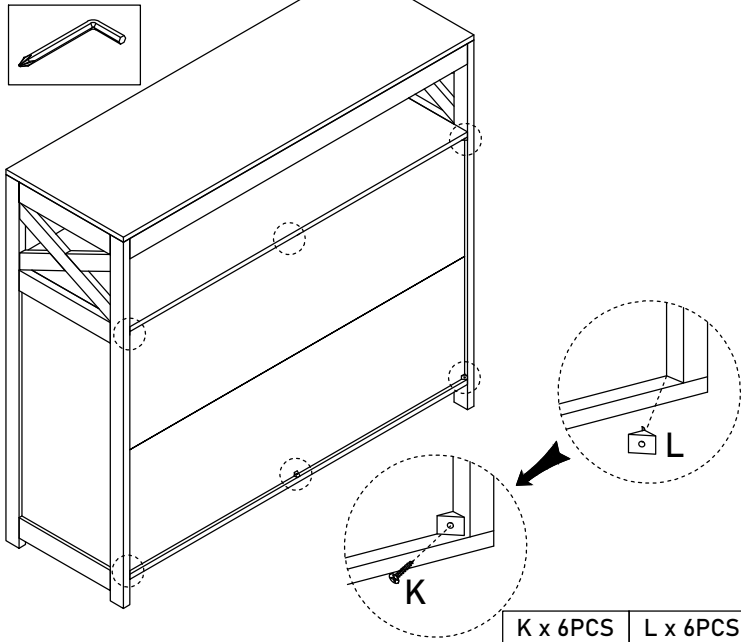

 
STEP 16

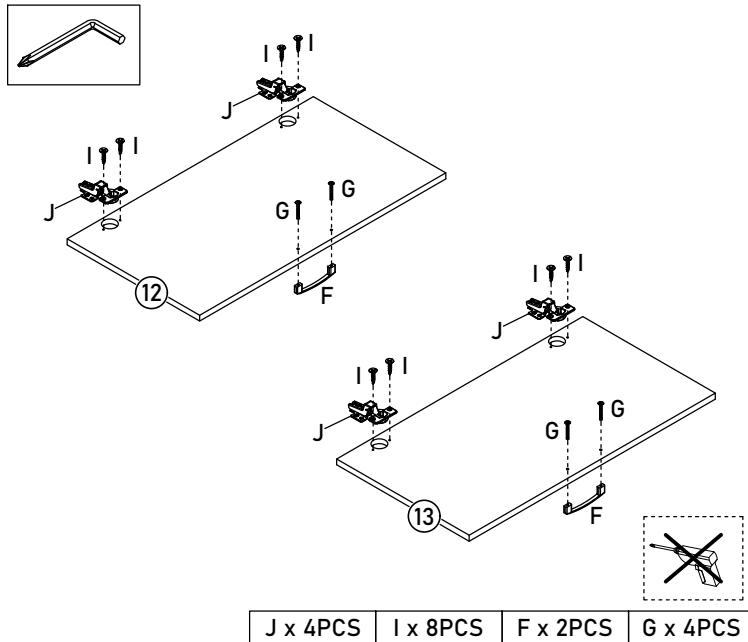

 
STEP 17

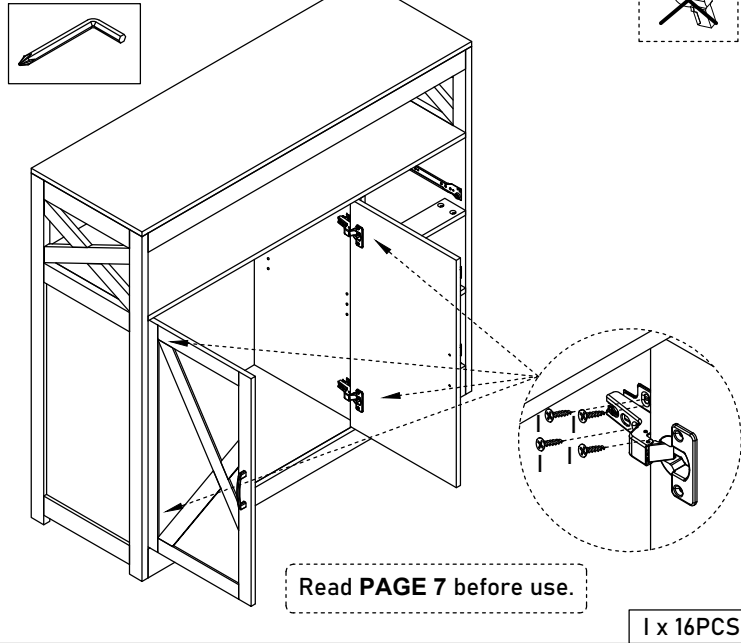

 
STEP 18

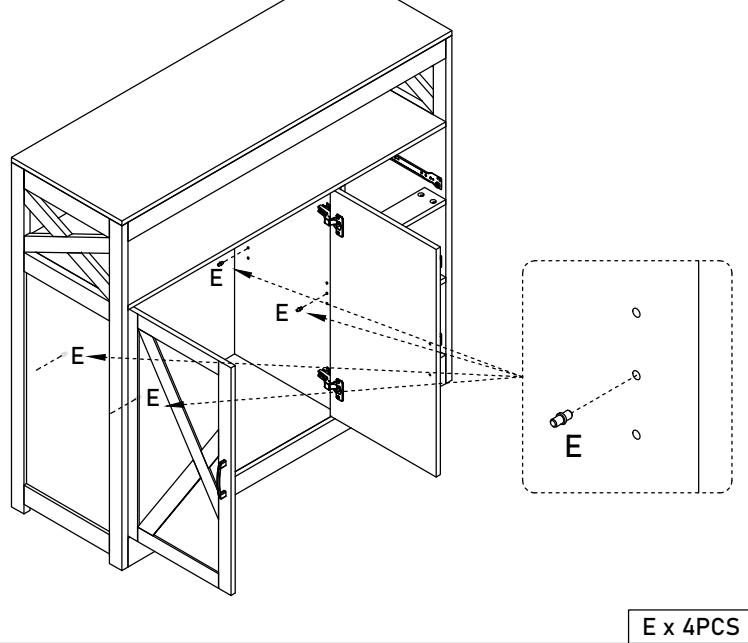

 STEP 19

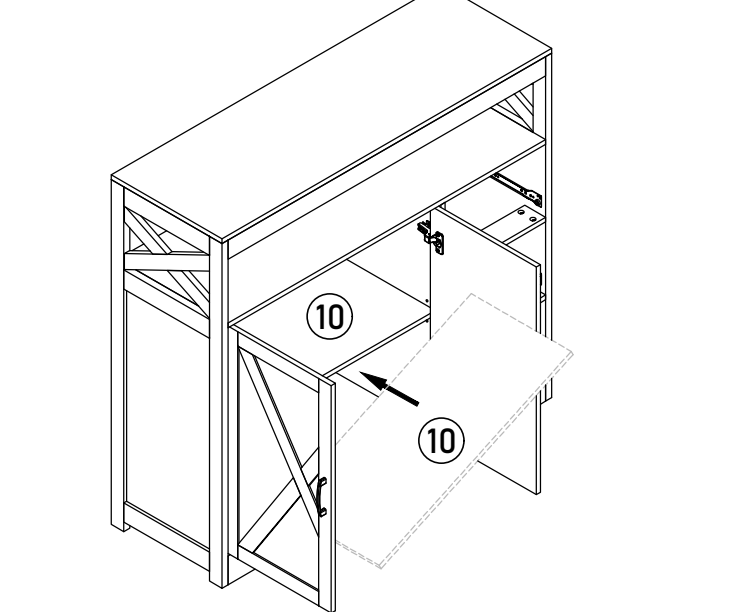


 STEP 20

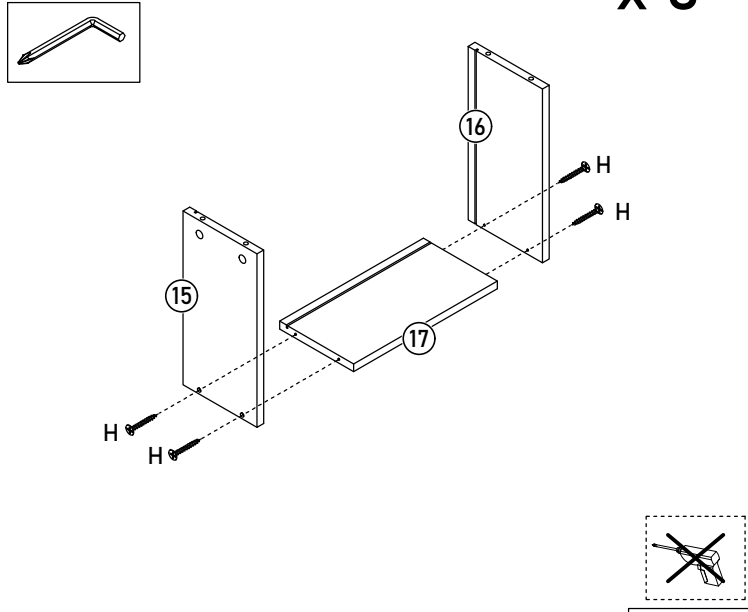






STEP 21

 x 3

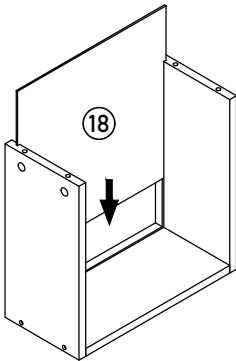

STEP 22

    
 
x 3

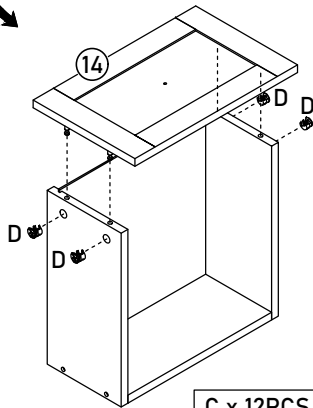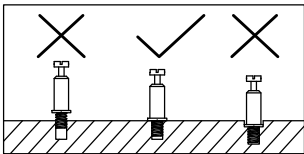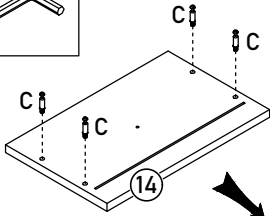

C x 12PCS D x 12PCS

STEP 23


 
 
x 3

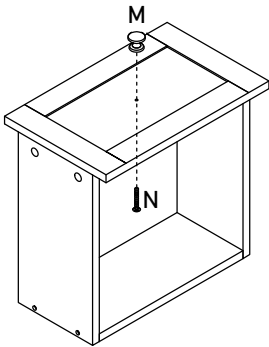

M x 3PCS N x 3PCS


STEP 24

   x 3

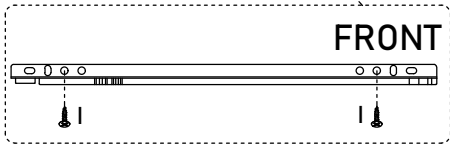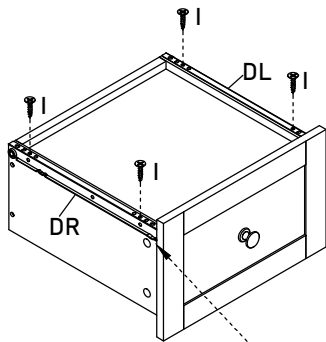



DR x 3PCS DL x 3PCS I x 12PCS

 STEP 25

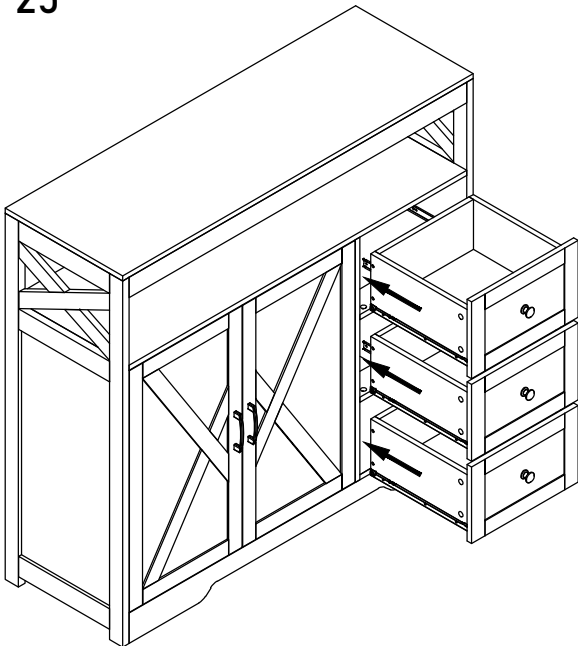


  STEP 26

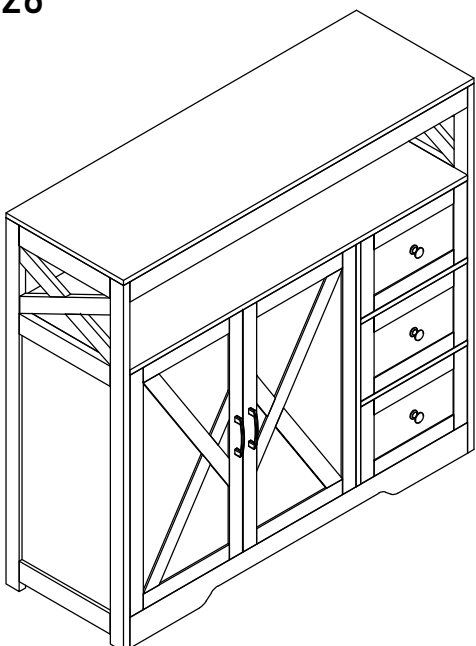


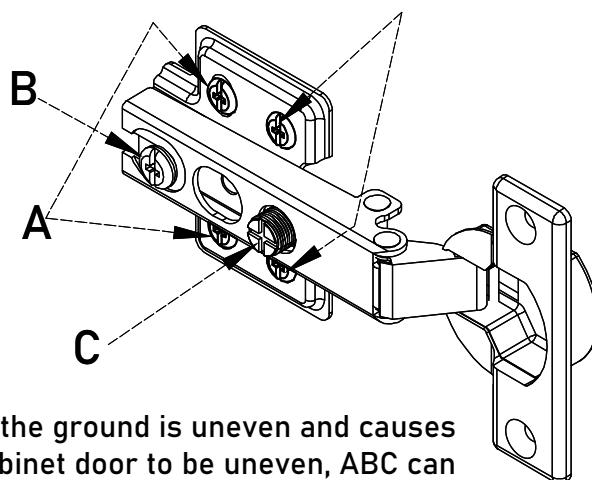

 
When the ground is uneven and causes the cabinet door to be uneven, ABC can be adjusted approp.

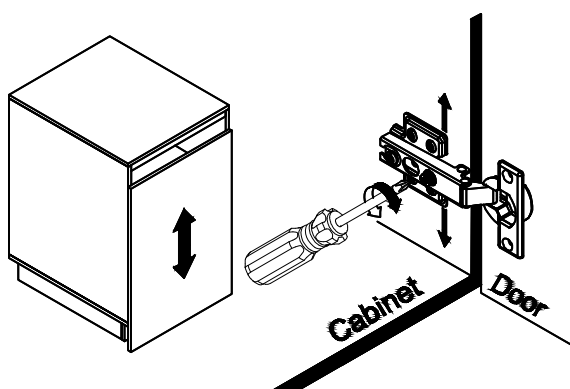

 To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

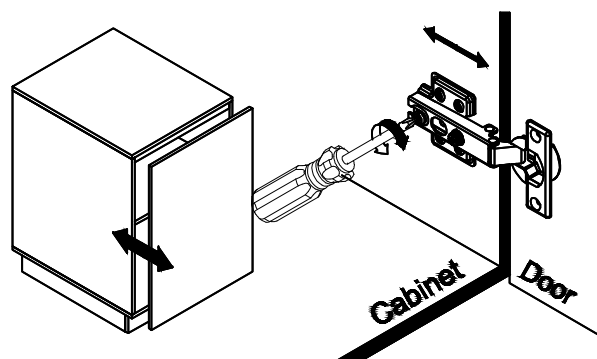

 To adjust depth.
Loosen screw "B" and adjust door, if the door cannot be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C"

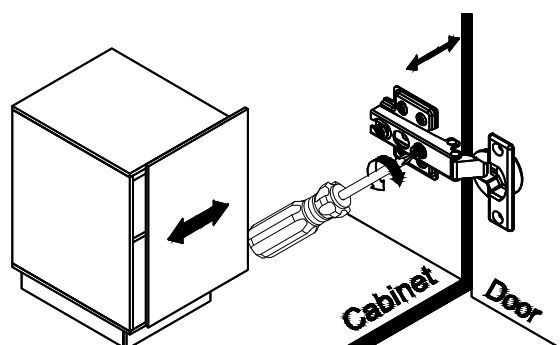

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.