
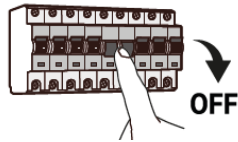


1



WARNING

- 1) Switch off the power supply before installation
- 2) Installation should be done by registered electricians


2

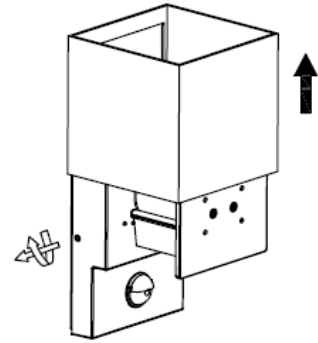


3

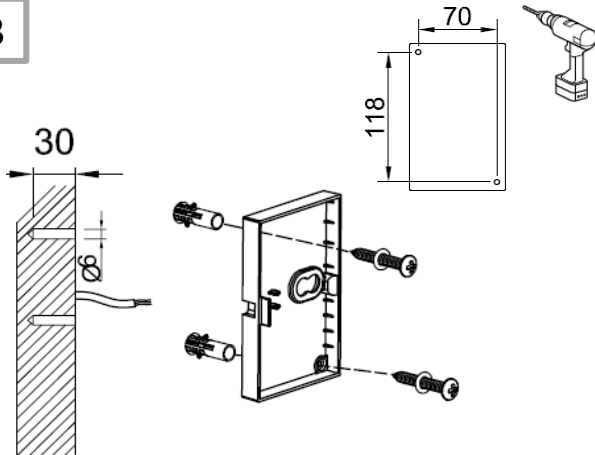


4

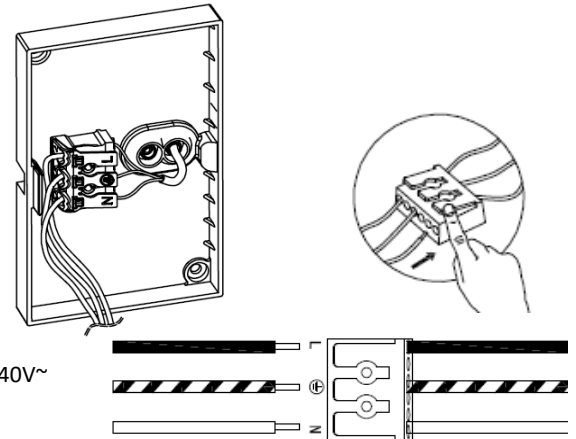
220 - 240V~
50Hz

5

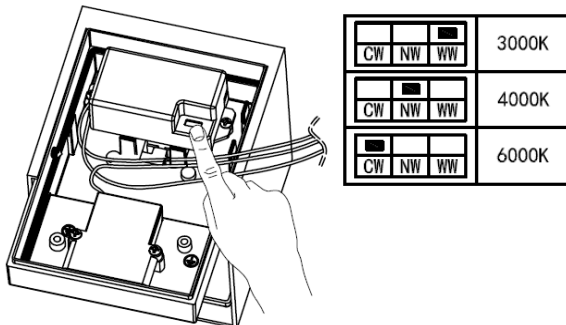

6

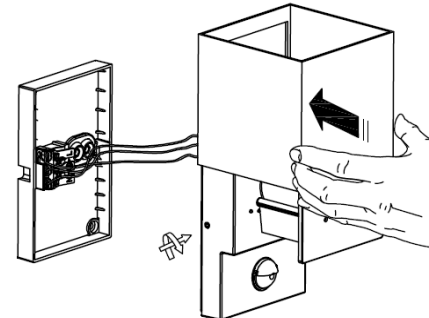

7



Sensor setting:

