


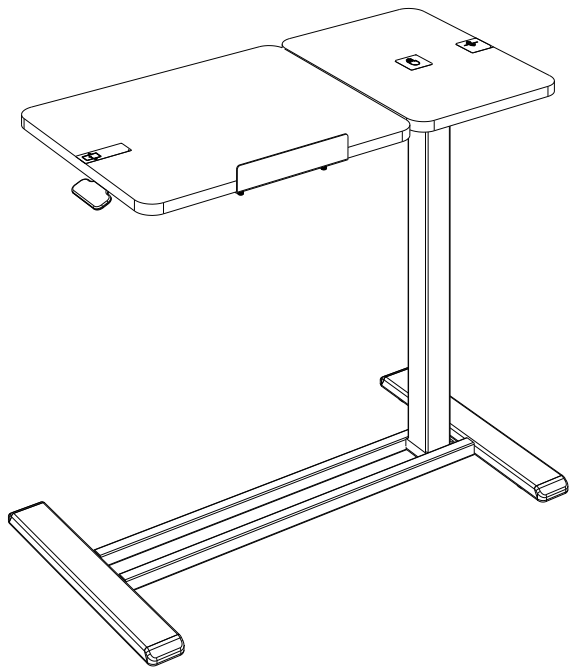

13180012/01
13180012/02
13180012/03
13180012/04
SINI

XXXLutz KG
Roemerstrasse 39
AT-4600 Wels, Austria
MID.YOU
IN THE MIDDLE OF YOUR HOME



Technical Data


Column Stage	2
Max. Load Capacity	≤7KG
Flap Angle	0° /±18° /±36°/ ±54°
Lowest Height	655mm
Highest Height	1050mm
Outer pipe	50x50x1.5mm
Inner pipe	45x45x1.5mm
Desktop dimensions	780x380x16mm
Static load capacity	A+B≤30kg

The table has casters and is therefore movable.



Warning: Don't lean on the table because it could slip away due to the non lockable casters.

For domestic use only. (EN)
Nur für den Haushaltsgebrauch. (DE)
Pouze pro používání v domácnosti. (CZ)
Endast för hushållsbruk. (SE)
Len na používanie v domácnosti. (SK)
Samo za domačo uporabo. (SI)
Kizárólag háztartási használatra alkalmas. (HU)
Samo za korištenje u kućanstvu. (HR)
Само за домашна употреба. (BGR)
Doar pentru uz casnic. (RO)
Réservé à un usage domestique uniquement. (FR)
Tylko do użytku domowego. (PL)
Prodotto destinato al solo uso domestico. (IT)
Isključivo za upotrebu u domaćinstvu. (RS)

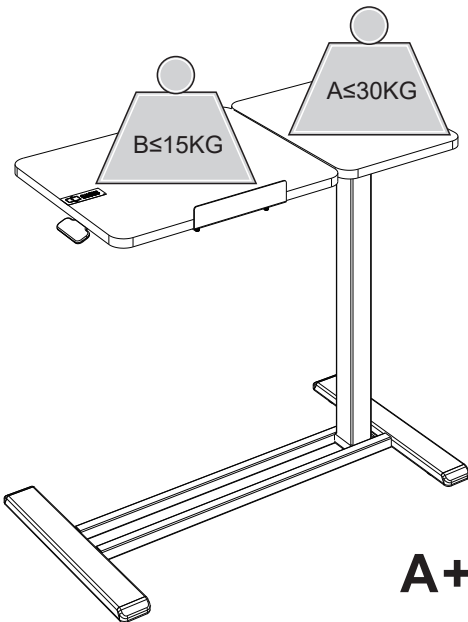

A+B≤30kg


Accessory List

A x4 M6x20mm	B x4 M6x12mm	C x2 M4x12mm	D x1 4x4mm
------------------------	------------------------	------------------------	----------------------

Part List

No.	Part	Qty	No.	Part	Qty
①		1	③		1
②		1	④		1


Installation Instruction

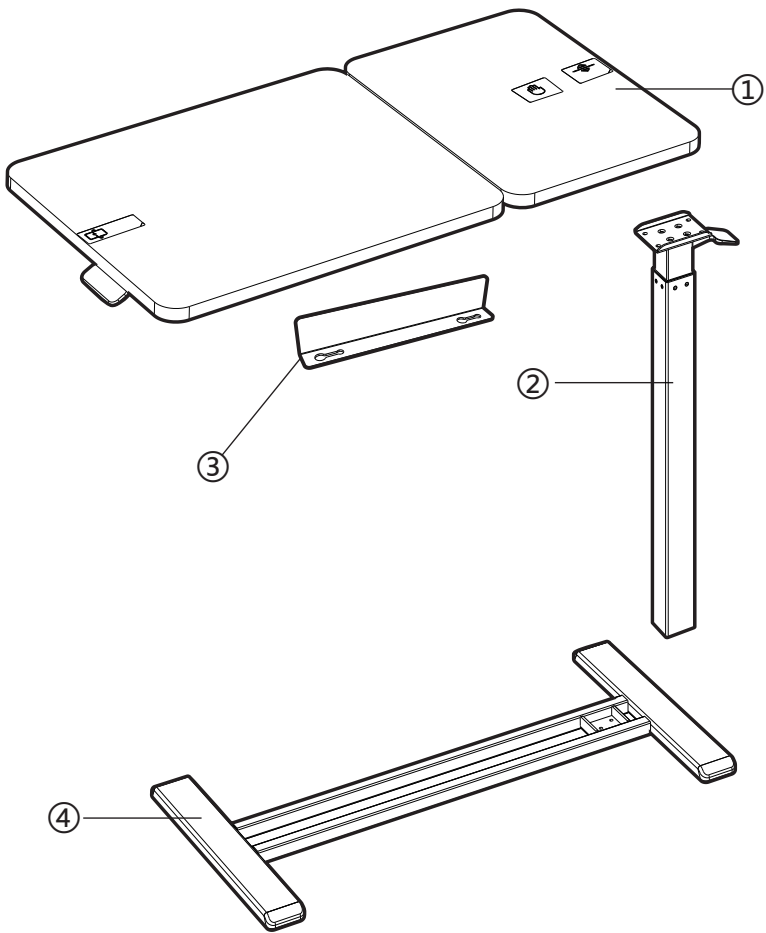


STEP1

B x4

D x1

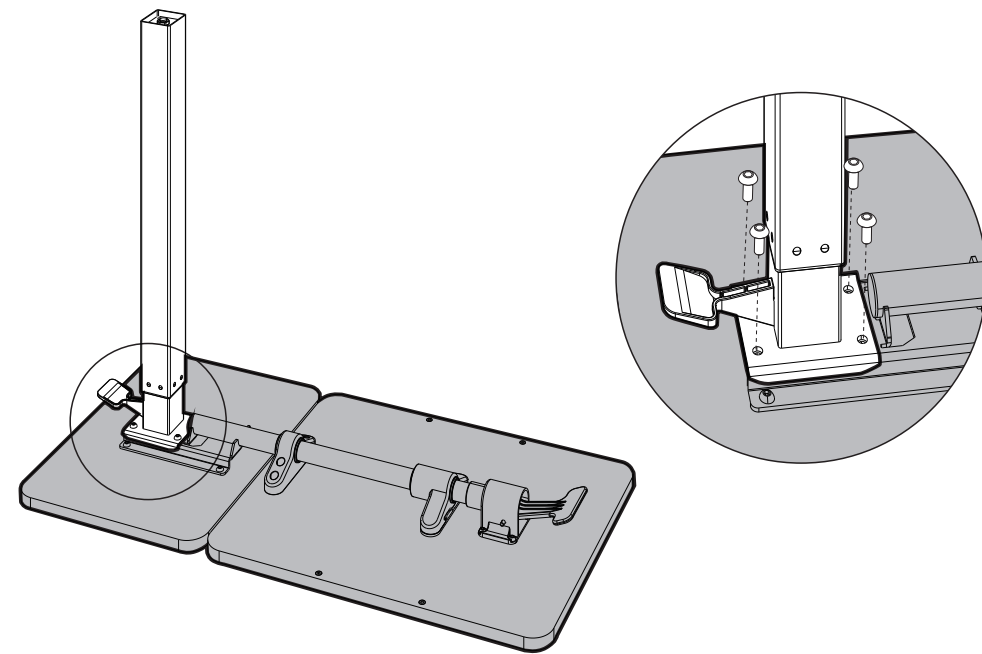


STEP3

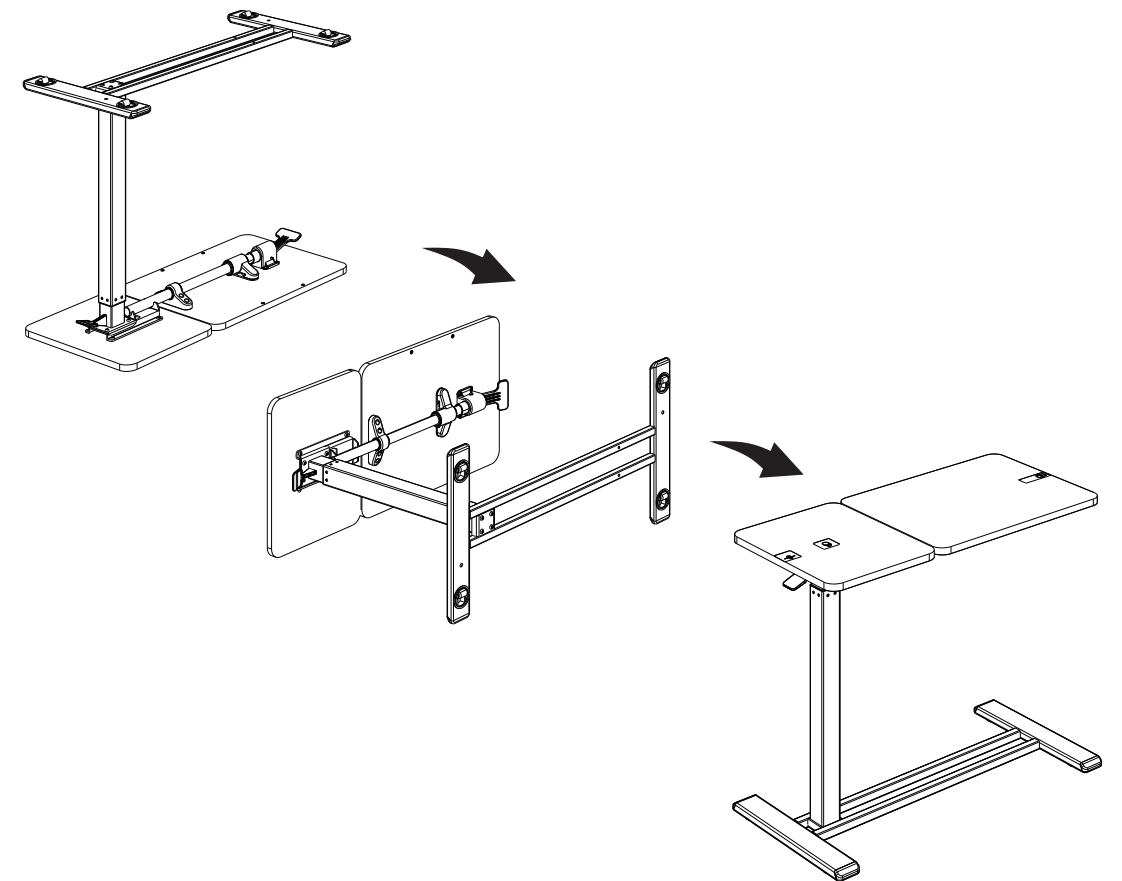

STEP2


A x4

D x1

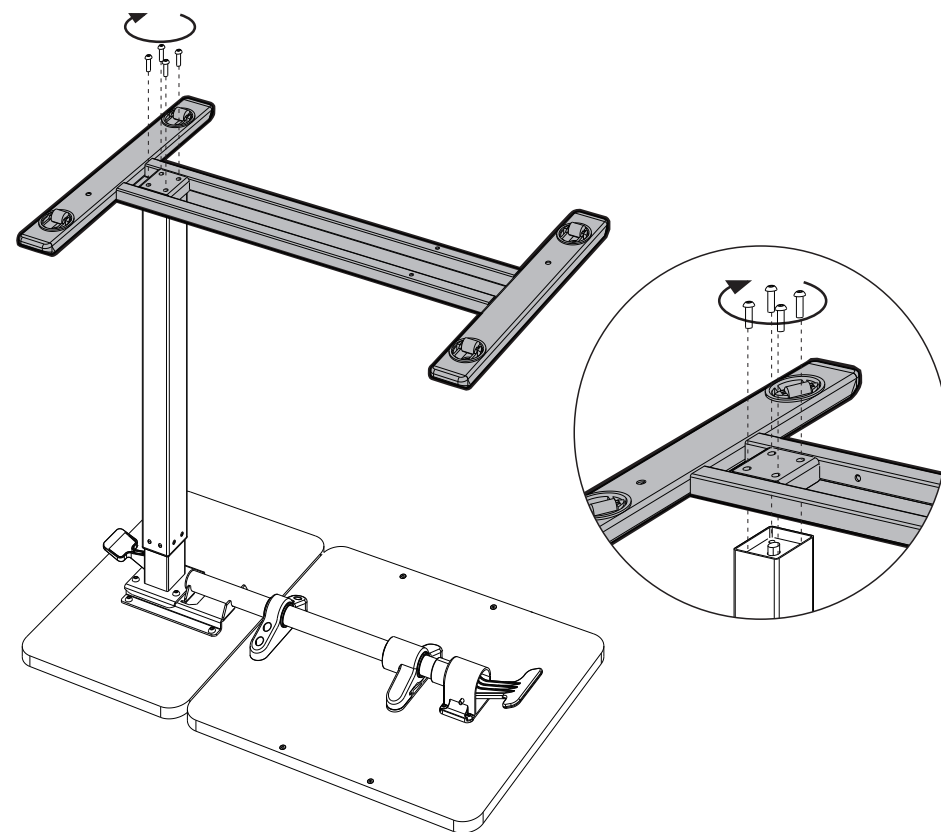




STEP4

C x2

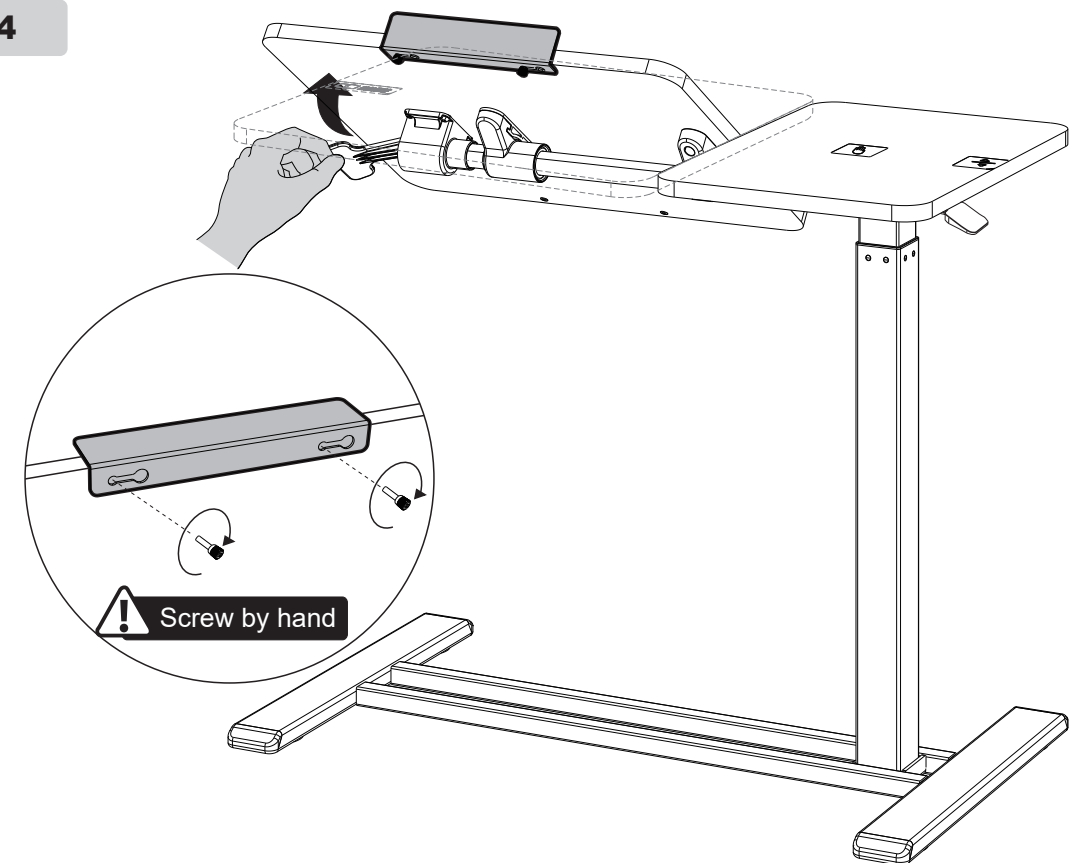

STEP5

Flip the tabletop: 0° /±18° /±36° / ±54°

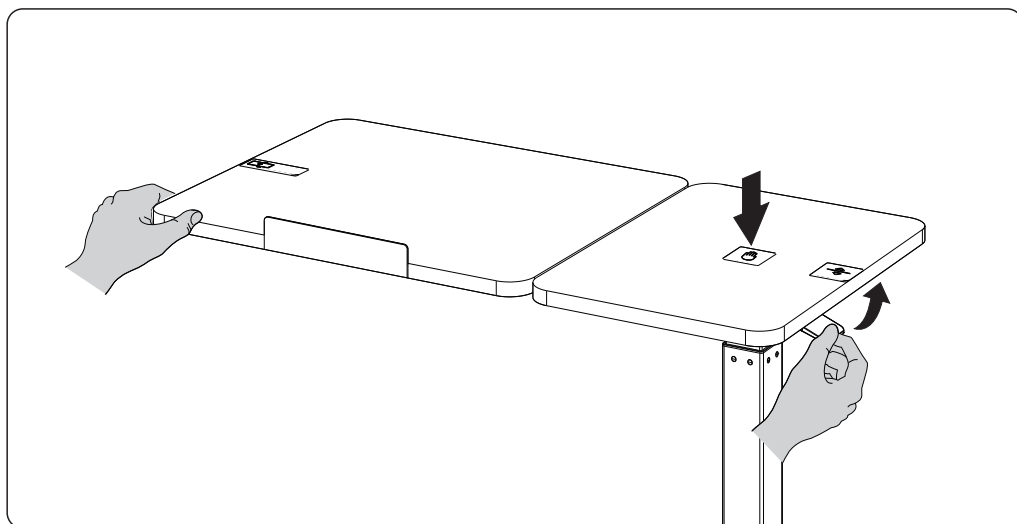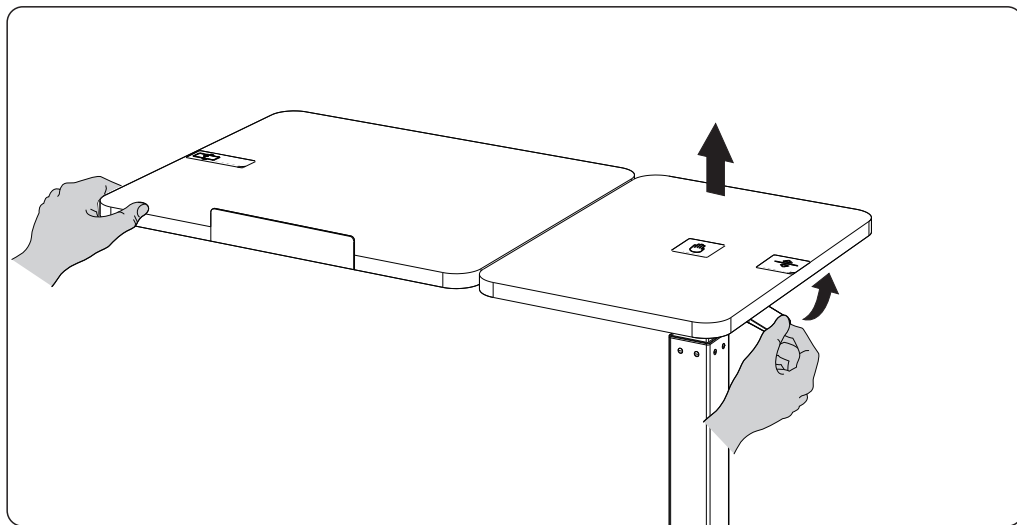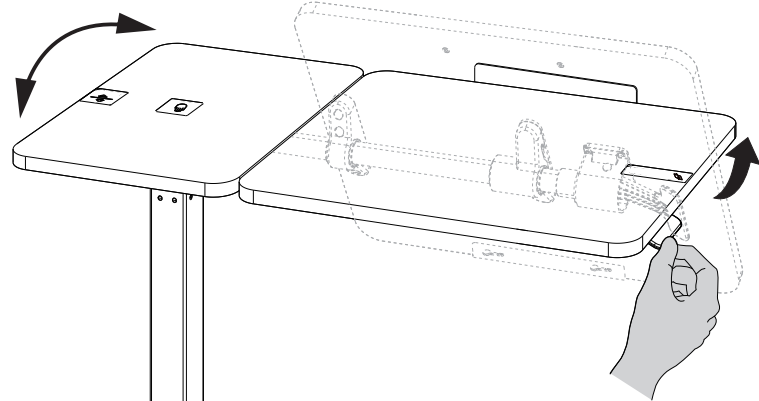

Warning

This product contains small parts that could pose a choking hazard if swallowed. Please keep these small accessories out of reach of children and store them in a safe place.

- Please make sure to read and fully understand the instruction manual before installation. If you do not understand any of the installation steps, please contact a professional installer.
- Children are not allowed to play on this product. Playing on the product can lead to unpredictable behaviors and the manufacturer is not responsible for any resulting risks or consequences.
- Please ensure that children aged seven and below, as well as individuals with physical sensory or mental impairments, use this product under proper supervision and guidance. Children should not have unrestricted access to play with it.
- Children must not clean or perform user maintenance on this product without adult supervision.
- Please ensure that there are no potential hazards in your operating environment, such as randomly discarding tools. Handle packaging materials with caution at all times to avoid possible dangers, such as the risk of suffocation for children playing with plastic bags.
- If necessary, please keep the original packaging of the equipment for future transportation purposes.

Waste disposal




This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.





13180012/01
13180012/02
13180012/03
13180012/04
SINI

XXXLutz KG
Roemerstrasse 39
AT-4600 Wels, Austria
MID.YOU
IN THE MIDDLE OF YOUR HOME

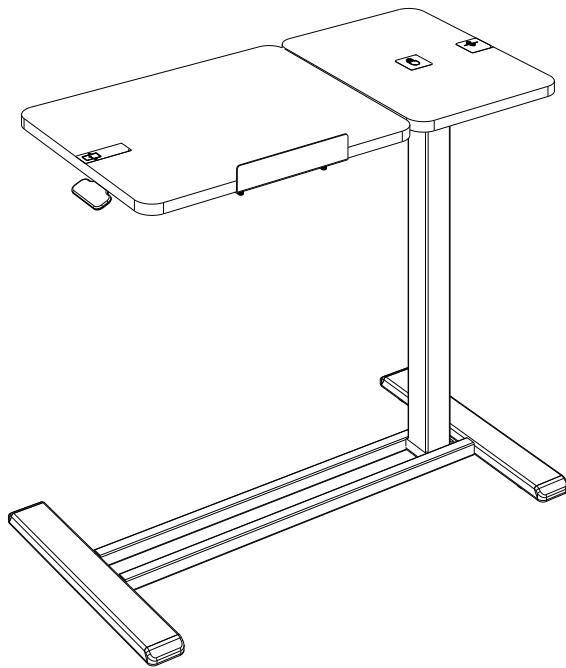

Technische Daten


Anzahl Säulen	2
Max. Belastbarkeit	≤7KG
Klappenwinkel	0° /±18° /±36°/ ±54°
Minimale Höhe	655mm
Maximale Höhe	1050mm
Außenrohr	50x50x1.5mm
Innenrohr	45x45x1.5mm
Desktop-Größe	780x380x16mm
Statische Tragfähigkeit	A+B≤30kg

Der Tisch hat Rollen und ist daher beweglich.



Warnung: Lehn dich nicht auf den Tisch, da er durch die nicht verriegelbaren Rollen wegrutschen könnte.

For domestic use only. (EN)
Nur für den Haushaltsgebrauch. (DE)
Pouze pro používání v domácnosti. (CZ)
Endast för hushållsbruk. (SE)
Len na používanie v domácnosti. (SK)
Samo za domačo uporabo. (SI)
Kizárólag háztartási használatra alkalmas. (HU)
Samo za korištenje u kućanstvu. (HR)
Само за домашна употреба. (BGR)
Doar pentru uz casnic. (RO)
Réserve à un usage domestique uniquement. (FR)
Tylko do użytku domowego. (PL)
Prodotto destinato al solo uso domestico. (IT)
Isključivo za upotrebu u domaćinstvu. (RS)

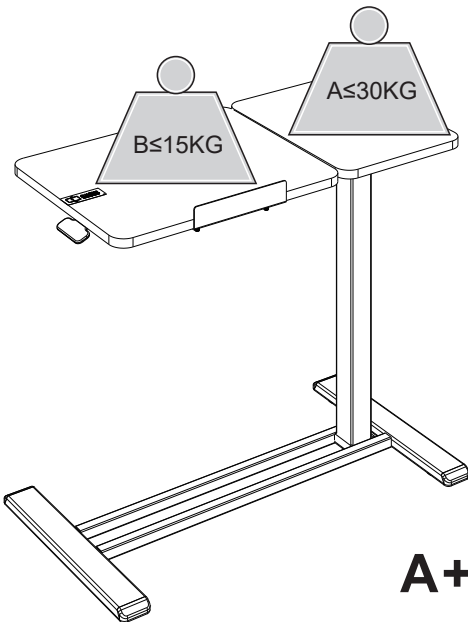

A+B≤30kg





Zubehörliste

A x4 M6x20mm	B x4 M6x12mm	C x2 M4x12mm	D x1 4x4mm
------------------------	------------------------	------------------------	----------------------

Teileliste

No.	Part	Qty	No.	Part	Qty
①		1	③		1
②		1	④		1

 
Aufbauanleitung

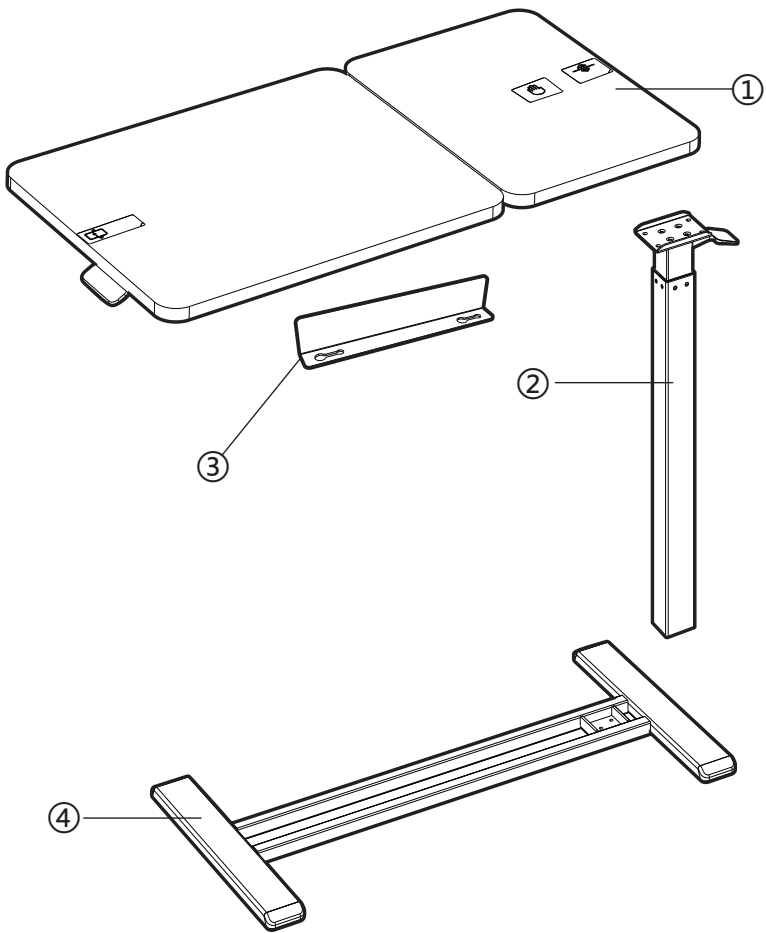


SCHRITT 1

B x4

D x1

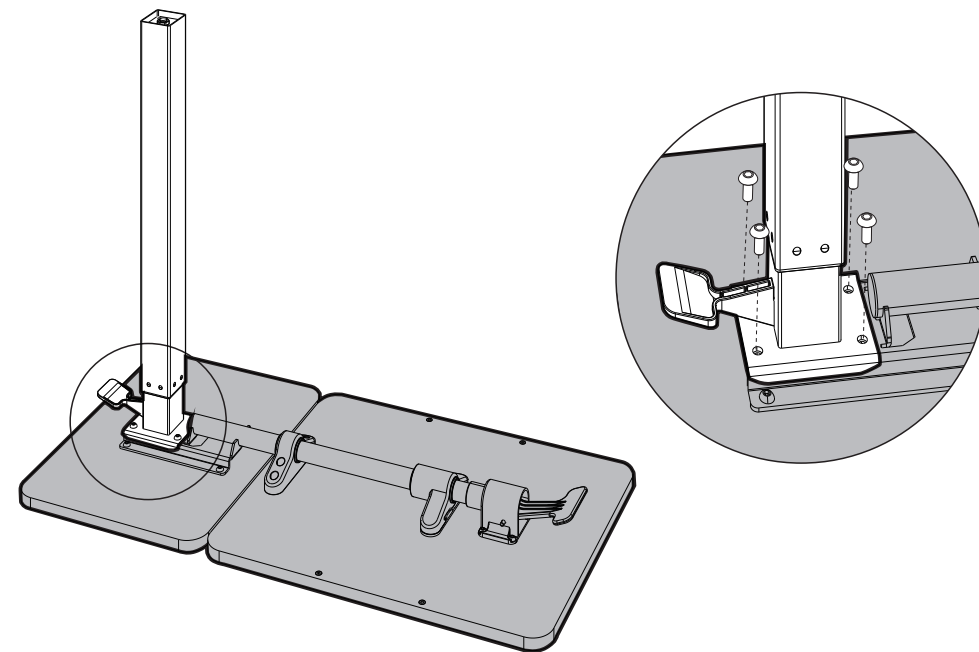


SCHRITT 3

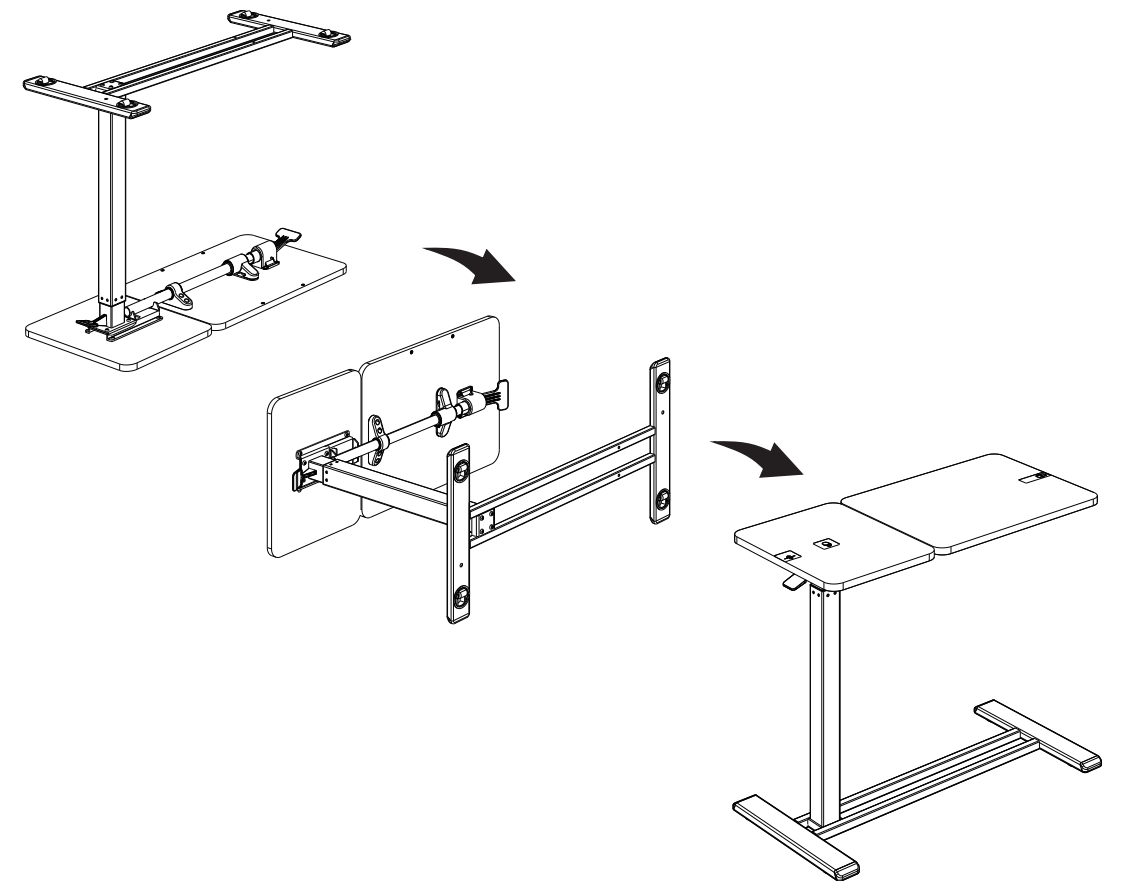

SCHRITT 2


A x4

D x1

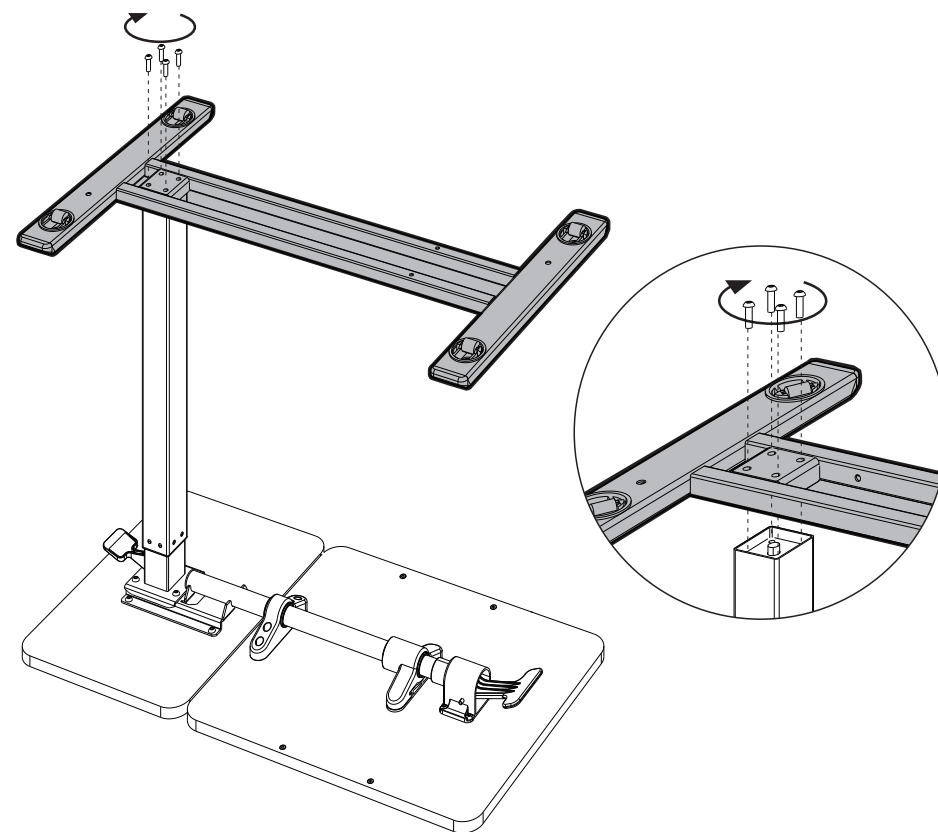




SCHRITT 4

C x2

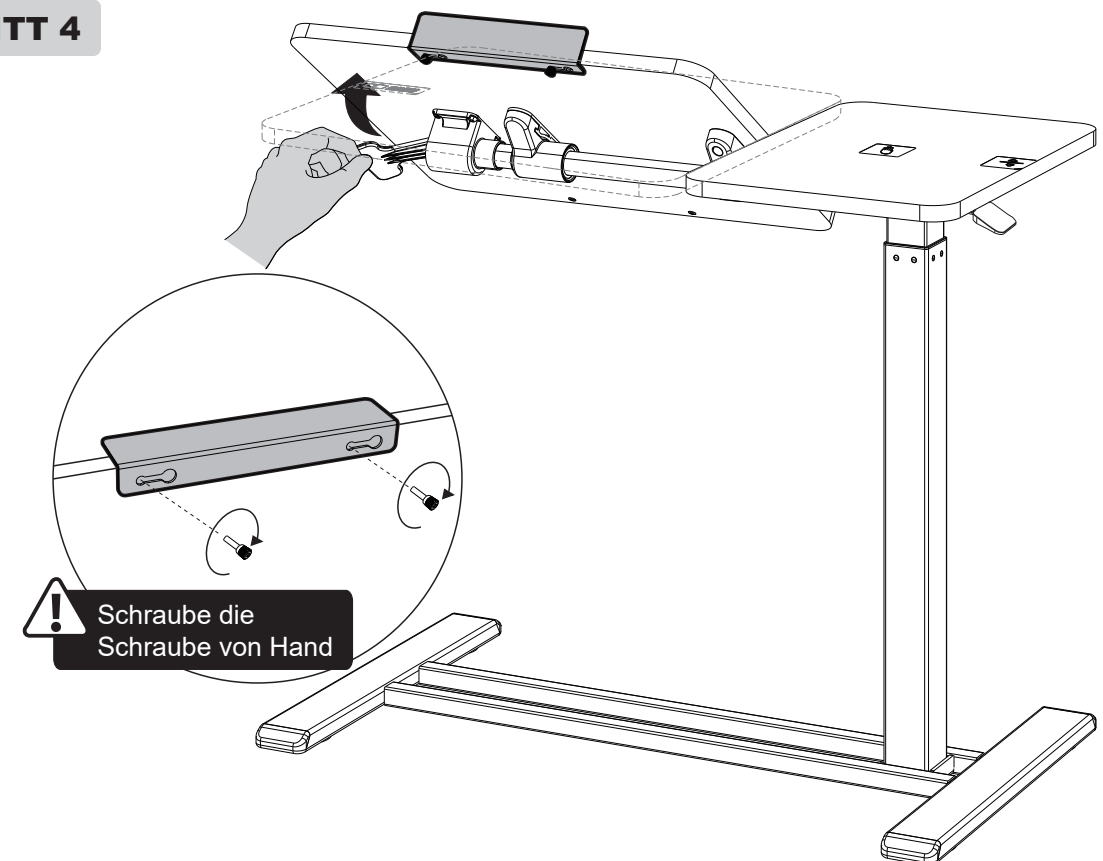

SCHRITT 5

Drehen Sie die Tischplatte: 0° /±18° /±36° /±54°

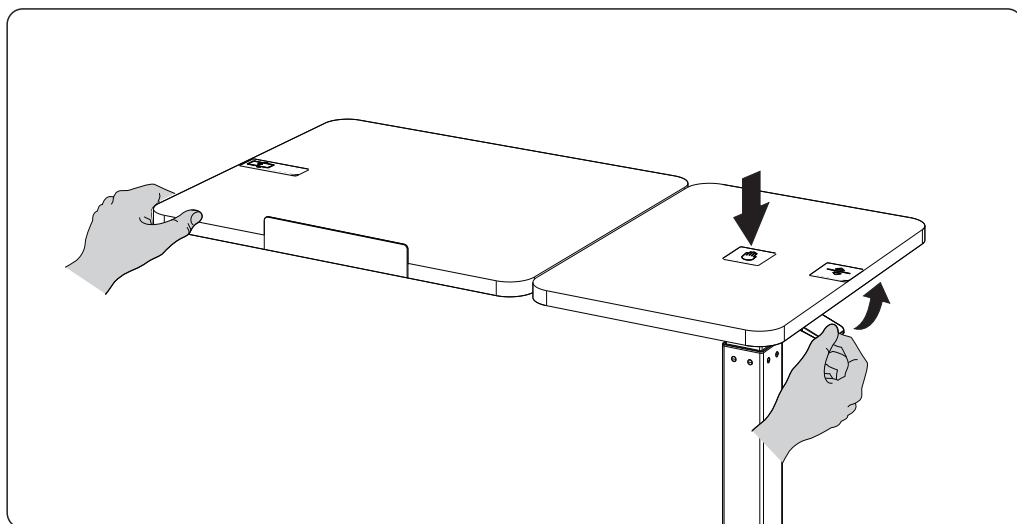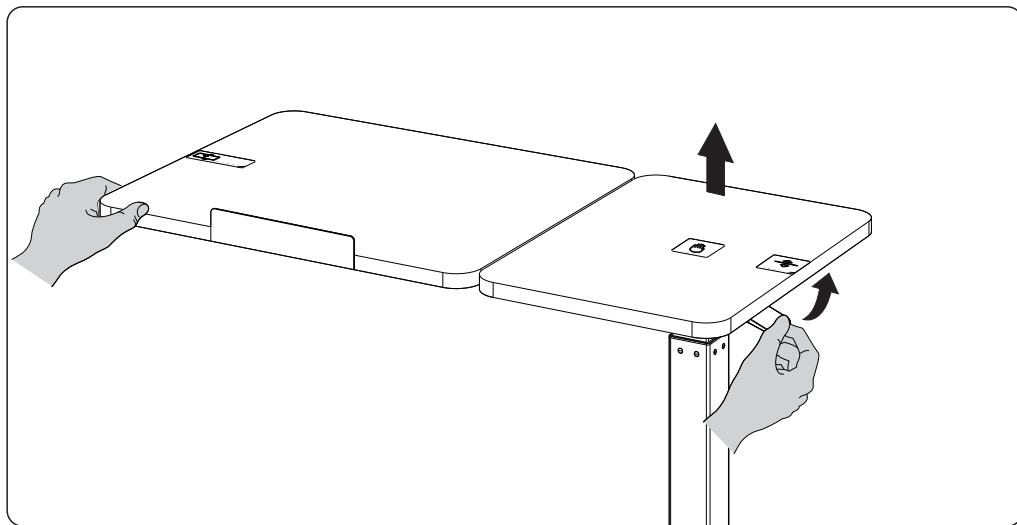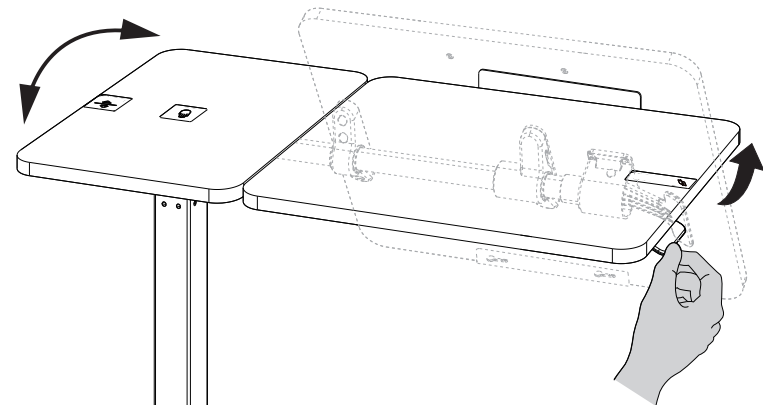

 Warnung

Dieses Produkt enthält kleine Teile, die beim Verschlucken eine Erstickungsgefahr darstellen können. Bitte haltet diese klein Accessoires außerhalb der Reichweite von Kindern und an einem sicheren Ort aufbewahren.

- Bitte lesen Sie die Instruktionsanleitung vor der Installation vollständig und verstehen Sie diese vollständig. Wenn Sie einen der Installationsschritte nicht verstehen, wenden Sie sich bitte an einen professionellen Installateur.
- Kinder dürfen auf diesem Produkt nicht spielen. Das Spielen mit dem Produkt kann zu unvorhersehbarem Verhalten führen, und der Hersteller ist nicht für etwaige Risiken oder Konsequenzen verantwortlich.
- Bitte stellen Sie sicher, dass Kinder ab sieben Jahren sowie Personen mit körperlichen oder geistigen Beeinträchtigungen dieses Produkt unter angemessener Aufsicht und Anleitung verwenden. Kinder sollten keinen uneingeschränkten Zugang zum Spielen damit haben.
- Kinder dürfen dieses Produkt weder ohne Aufsicht eines Erwachsenen reinigen noch Wartung durchführen.
- Bitte stellen Sie sicher, dass in Ihrer Betriebsumgebung keine potenziellen Gefahren bestehen, wie etwa das zufällig wegwerfende Wegwerfen von Werkzeugen. Behandeln Sie Verpackungsmaterialien jederzeit mit Vorsicht, um mögliche Gefahren wie das Erstickungsrisiko von Kindern beim Spielen mit Plastiktüten zu vermeiden.
- Falls nötig, bewahren Sie bitte die Originalverpackung der Ausrüstung für zukünftige Transportzwecke auf.

Entsorgung



Dieses Symbol weist darauf hin, dass dieses Produkt nicht im Hausmüll entsorgt werden darf. Um Schäden für die Umwelt oder die menschliche Gesundheit durch unkontrollierte Abfallbeseitigung zu verhindern, ist dieses Gerät verantwortungsbewusst zu recyceln, um die nachhaltige Wiederverwendung von Materialressourcen zu unterstützen. Bitte geben Sie das Altgerät bei den vorgesehenen Sammelstellen ab oder wenden Sie sich an den Händler, bei dem Sie das Produkt gekauft haben. Dieser kann das Produkt einer umweltgerechten Entsorgung zuführen.

