

# Hisense

life reimagined

## **USER'S OPERATION MANUAL**

Before operating this unit, please read this manual thoroughly, and retain for future reference

**CPC221F7ABE CPC271F7ABE CPC381N7ABD**

**EN**

**English**

# CONTENTS

SAFETY AND WARNING INFORMATION ·····	1~7	BEFORE REQUESTING SERVICE ·····	14 ~ 15
DISPOSAL OF THE APPLIANCE ·····	8	REQUIRED INFORMATION ·····	15
SAFETY PRECAUTIONS ·····	9 ~ 11	PART NAMES AND FUNCTIONS ·····	16-18
HOW TO USE ·····	12~ 13	TEMPERATURE ADJUSTMENT ·····	19
CLEANING ·····	13	SPECIFICATIONS ·····	19
IN CASE OF THE FOLLOWING ·····	14		

## SAFETY AND WARNING INFORMATION



For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life will be properly informed on usage and safety notices. For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

### Safety for children and others who are vulnerable

- According to EN standard  
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- According to IEC standard  
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

- Keep all packaging away from children as there is risk of suffocation
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child

### General safety



This appliance is intended to be used in households and similar applications such as -staff kitchen areas in shops, offices and other working environments;

-farm houses and by clients in hotels, motels and other residential type environments;

-bed and breakfast type environments;

-catering and similar nonretail applications

- WARNING — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- WARNING —If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- WARNING — Keep ventilation openings in the appliance enclosure or in any built-in structure clear of obstruction.
- WARNING — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING — Do not damage the refrigerant circuit.
- WARNING — Do not use

electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- **WARNING** — The refrigerant and insulation are flammable. When disposing of the appliance, do so only at an authorized waste disposal center. Do not expose to flame.
- **WARNING** — When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING** — Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- **WARNING** — Damaged supply cord must be replaced by a special cord or assembly available from the manufacturer or its service agent.

### **Replacing the LED light:**

• **WARNING** — The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance.

## **Refrigerant**

The refrigerant isobutene (R600a/R290/R134a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.

During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a/R290) is flammable.

- **WARNING** — Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.



**Warning: risk of fire/ flammable materials**

If the refrigerant circuit is damaged:

- Avoid naked flames and sources of ignition.
- Thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire, and/or electric shock.

### **Electrical safety**

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the main plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. You must not operate the appliance without the interior lighting lamp cover.
7. The fridge is only supplied with power supply of single phase alternating current of 220 ~ 240 V/50Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C.

Automatic voltage regulator of more than 350W to the fridge. The fridge must employ a special power socket instead of common one with other electric appliances. Its plug must match the socket with ground wire.



### **Daily use**

- Do not store flammable gas or liquids in the appliance. There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e.g. electric ice cream makers, mixers etc.).
- When unplugging always pull the plug from the mains socket, do not pull on the cable.
- Do not place hot items near the plastic components of the fridge.
- Do not place food products directly against the air outlet on the rear wall.
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.
- The manufactures storage recommendations should be

- strictly adhered to. Refer to relevant instructions for storage.
- Do not place carbonated or fizzy drinks in the freeze compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance .
  - Frozen food can cause frost burns if consumed straight from the freezer compartment.
  - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
  - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
  - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
  - If the **refrigerating appliance** is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
  - Do not place the appliance in direct sunlight.

- Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
- The appliance is intended for keeping food and/or beverages in normal households as explained in this instruction booklet. The appliance is heavy. Care should be taken when moving it.
- Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Never use the base, drawers, doors etc. to stand on or as supports.
- Frozen food must not be refrozen once it has been thawed out.
- Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.
- To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.

## **Caution!**

### **Care and cleaning**

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.

### **Installation important!**

- For electrical connection carefully, follow the instructions given in this manual.
- Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.

- Adequate air circulation should be allowed around the appliance reducing the risk of overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.

- Wherever possible the back of the product should not be close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation

- The appliance must not be locate close to radiators or cookers.

- Make sure that the mains plug is accessible after the installation of the appliance.

### **Service**

- Any electrical work required to do the servicing of the appliance should be carried out by qualified electrician or competent person. This product must be serviced by an authorized Serviced Center, and only genuine spare parts must be used.

Note: Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.(This clause applies only to the EU region.)

When refrigerating food, please be careful not to contact the surface of the inner box directly.

When frozen food, in order to prevent moisture loss, prevent the odor, should separate the different food sealed storage, and can only use non-toxic, tasteless, impermeable, waterproof sealing material.

Hot food should be cooled to room temperature first, then put into the freezer, otherwise it will affect the storage status of other foods and increase the power consumption.

Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making icecream and making ice cubes.

One-, two- and three-star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp.[°C]	Appropriate food
1	Fridge	0 ~ +10	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, drinks and other foods are not suitable for freezing.
2	(***)*-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
3	***-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
4	** -Freezer	≤ -12	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 2 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
5	*-Freezer	≤ -6	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 1 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.

## DISPOSAL OF THE APPLIANCE

### Disposal of the appliance

It is prohibited to dispose of this appliance in domestic household waste.

### Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging in a suitable waste collection container to recycle it.

Before disposal of appliance.

1. Disconnect the main plug from the main socket.
2. Cut off the main cable and discard it.

	Correct disposal of this product
	<p>This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the store where you purchased the product.</p>

# SAFETY PRECAUTIONS 1

- Please thoroughly study these SAFETY PRECAUTIONS before operating the unit.
- The purpose of the SAFETY PRECAUTIONS in this manual is to :
  1. ensure safe and proper use of the unit
  2. prevent risks that could lead to serious injury to you or other
- The safety precautions are divided into WARNINGS and CAUTIONS. In both cases, improper handling of the unit could result in death or serious injuries. To ensure your safety and the safety of others, please adhere strictly to both.
- Possibly resulting in electrical shock or fire.

	<b>WARNING</b> Improper handling of the unit could lead to death or serious injury.
	<b>CAUTION</b> Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark  contains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this product can easily find it.







## ◆ PRECAUTIONS FOR INSTALLATION

 <b>WARNING</b>	
	Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

## ◆ Safety for children and others who are vulnerable

- this appliance is not intended for use by persons(including children) with reduced physical,sensory or mental capabilities,or a lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.children should be supervised to sesure that they do not play with the appliance.
- keep all packaging away from children as there is risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket,cut the connection cable(as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.If this appliance,featuring a magnetic door seals,is to replace an older appliance having a spring lock(latch) on the door or lid,be sure to make the spring lock unusable before you discard the lod appliance.This will prevent it from becoming a death trap for a child

## ◆ PRECAUTIONS FOR USE

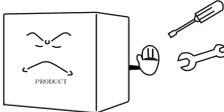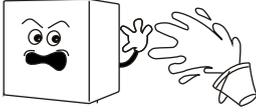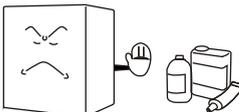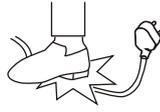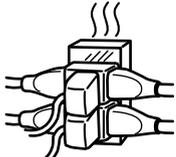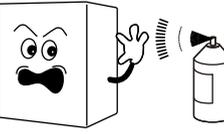
 <b>WARNING</b>	
 <p><b>DONT TAMPER</b></p> <p>All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.</p> 	 <p><b>ELECTRICAL SHOCK HAZARDS</b></p> <p>Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.</p> 
 <p><b>DANGER OF EXPLOSION</b></p> <p>Never put flammable or volatile substances into the unit as explosion and fire could result.</p> 	 <p><b>PROHIBITED</b></p> <p>Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, resulting in electrical shock or fire.</p> 
 <p><b>PROHIBITED</b></p> <p>Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could lead to electrical shock, overheating and a fire.</p> 	 <p><b>FLAMMABLE</b></p> <p>Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.</p> 

# SAFETY PRECAUTIONS 2

## ⚠ WARNING




The cooler is intended for storage and display of beer and beverages for sale. Do not use for other purpose than the intended as this could adversely affect items placed in the unit.

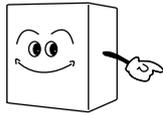

Beer, beverages




Never attempt to insert fingers, sticks, etc. into the cold air suction outlet. A circulation fan is rotating at high speed inside the outlet. Injury, electrical shock and improper operation could result.

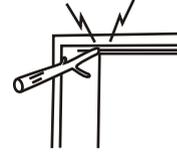


PROHIBITED

For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.

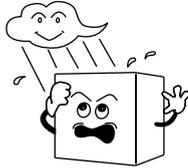


PROHIBITED

Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.

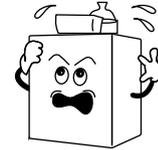


Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.

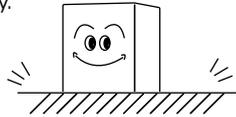


CAUTION AGAINST EXPLOSION

If you find gas leakage, please don't touch the chest freezer, and close gas and open the door for ventilation. Gas leakage cause explosion, fire, and fire injury.

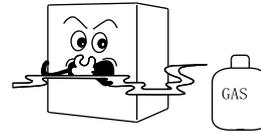


Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.

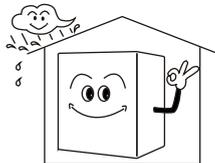

Away from hot air sources  
Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.



Leave disassembly and disposal of the unit to qualified experts.

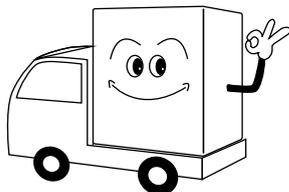


Should the unit need temporary storage, make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.

# SAFETY PRECAUTIONS 3


## ⚠️ WARNING

### WELL VENTILATED PLACE


Please make more than 10cm space between Chest freezer and wall. If there are no space, cooling capacity can drop down.

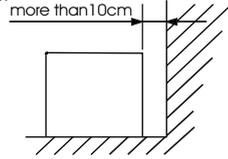


If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.

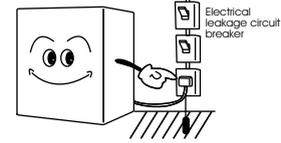

Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.

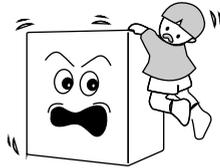

Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.

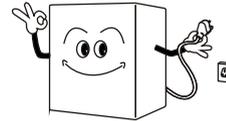


Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.




Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.



When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possible resulting in overheating and fire.

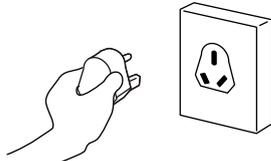


Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

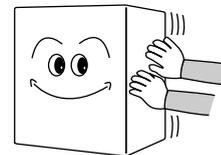

Do not throw items onto the shelves and do not place items totaling more than 30Kg on each shelf. The shelf could fall down, possibly cause injury.



Be sure attach and secure shelves correctly. An improperly attached shelf could fall down and cause injury.

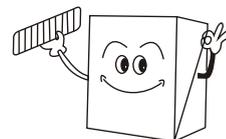

# HOW TO USE

---

## BEFORE USE

- Remove shipping package, tape, etc, and leave doors open ventilation for a while.
- The unit is cleaned before shipment. However, clean the compartment interior once after delivery.
- Please insert power supply plug into the wall outlet ,single-phase to cat voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

## WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

- Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.

## TEMPERATURE ADJUSTMENT

- Thermostat was adjusted using temperature at factory. To adjust it, turn right could cause temperature in showcase down. To raise the temperature, turn it left. Excessive refrigeration will increase electricity consumption unnecessarily.

## DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- Water in the drain tray is evaporated automatically. In humidity, large amount of water in the drain tray, so please throw away drain water once a day.

## EFFICIENT USE

Please follow the below instruction, you could save energy.

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in the place which is well-ventilated.

## SHELF HEIGHT ADJUSTMENT

The shelf height can be adjusted.

Arrange the shelves in accordance with the dimensions of the items to be placed in the cooler.

# HOW TO USE 2

## PLACING ITEMS IN THE UPRIGHT COOLER

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
- Place items evenly on all shelves.
- Please do not display goods on the bottom. Please put goods on the shelf.

# CLEANING



**WARNING**

To prevent any electrical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.

## 1 EXTERIOR AND COOLER COMPARTMENT


Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent . Then wipe with a cloth that has been dipped in water .



**WARNING**

**WARNING:** Do not splash water directly onto the cooler and do not wash with water . Short - circuit and electrical shock could result .

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder , soap powder , benzine , oil or hot water as these will damage the painting and plastic components.

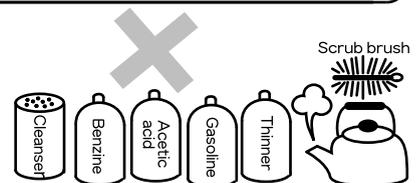

## 2 CHECKS

To ensure the safety, perform the following checks after cleaning.

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

# IN CASE OF THE FOLLOWING

## 1 POWER FAILURE

- Keep opening and closing of the door to a minimum.
- Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

## 2 WHEN NOT USED FOR A LONG PERIOD

- Remove all items from the compartment and disconnect the power cord plug from the wall outlet.
- Clean the compartment interior and wipe away all water.  
To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

## 3 TRANSPORTATION

- Disconnect the power cord plug from the wall outlet.
- When moving the cooler, make sure that the feet do not damage the power cord.
- Do not let the feet hit against floor steps, thresholds, etc.

## 4 TEMPORARY STORAGE

- Affix a piece of wood, etc. Between the door and main unit to prevent complete closing of the door.
- Make sure not to store the unused cooler at a location where children play.  
Should a child enter the compartment and the door is closed, the child may not be able to open the door from the inside.

- **Note:**

This appliance performs well within the climate class from SN to ST or T (The climate type marked on the parameter nameplate on the back of the product shall prevail) showed in the table below. It may not work properly if being left at a temperature above or below the indicated range for a long period.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

# BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. Transfer the items stored in the cooler to a box or other container. Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in "REQUIRED INFORMATION" below.



**CAUTION**

To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

# BEFORE REQUESTING SERVICE

<p>No refrigeration at all</p>	<ul style="list-style-type: none"> <li>● Is the power supply interrupted?</li> <li>● Is the power cord plug disconnected from the wall outlet?</li> <li>● Are the shop's power fuses blown and/or the circuit breaker activated?</li> </ul>
<p>Inadequate refrigeration</p>	<ul style="list-style-type: none"> <li>● Is the temperature setting appropriate?</li> <li>● Are items obstructing the cold air inlet and suction outlet?</li> <li>● Are stored items packed too tight?</li> <li>● Is the door open or is it opened and closed frequently?</li> <li>● Is the condenser clogged?</li> </ul>
<p>Excessive noise</p>	<ul style="list-style-type: none"> <li>● Are all feet in firm contact with the floor?</li> <li>● Is the rear panel of the cooler contacting the wall or other objects?</li> <li>● Are other objects in contact with the cooler?</li> </ul>
<p>Condensation on cooler exterior</p>	<ul style="list-style-type: none"> <li>● Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away condensation with a dry cloth.</li> </ul>


Showcase sometimes stop running when thermostat turns off.

# REQUIRED INFORMATION

- |  |   |
|--|---|
| <p>① Nature of malfunction<br/>(as accurately as possible)</p> | <p>④ Customer's name, address,<br/>phone number</p> |
| <p>② Product number</p>  | <p>⑤ Year and date of purchase</p>                  |
| <p>③ Serial number</p>   | <p>⑥ Desired date for service visit</p>             |
- } (inscribed on badge)

# PART NAMES AND FUNCTIONS

Model NO.: CPC221F7ABE

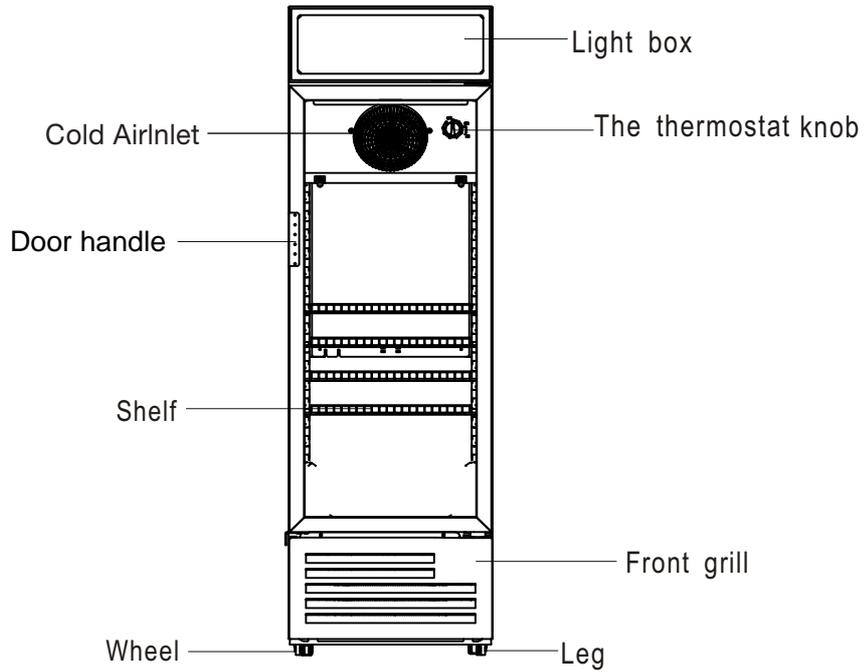

**Note!**


- To get the best energy efficiency of this product, please place all shelves, drawers on their original position as the illustration above.



The above image is for reference only, configuration is subject to actual product.

# PART NAMES AND FUNCTIONS

Model NO.: CPC271F7ABE

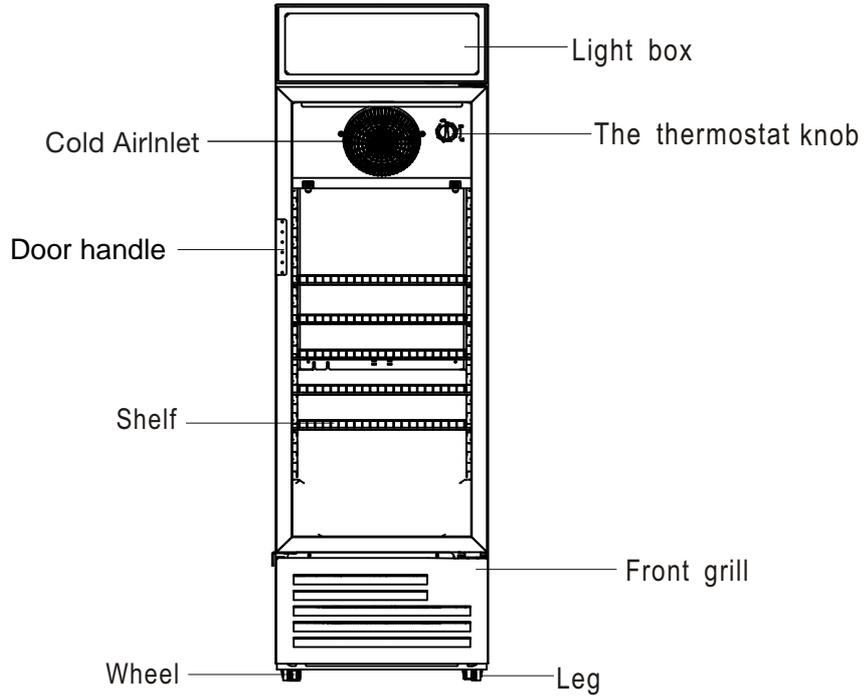

**Note!**


- To get the best energy efficiency of this product, please place all shelves, drawers on their original position as the illustration above.



The above image is for reference only, configuration is subject to actual product.

# PART NAMES AND FUNCTIONS

Model NO.: CPC381N7ABD

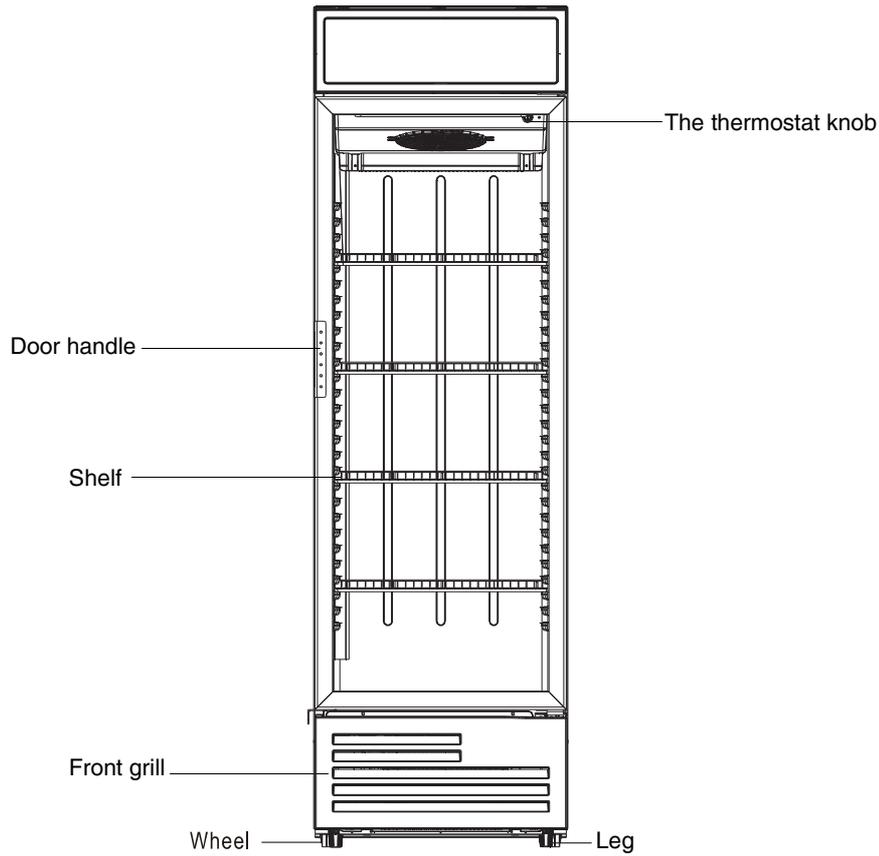

**Note!**


- To get the best energy efficiency of this product, please place all shelves, drawers on their original position as the illustration above.



The above image is for reference only, configuration is subject to actual product.

# TEMPERATURE ADJUSTMENT

- Thermostat was adjusted using temperature at factory. So, please do not touch it. Excessive refrigeration will increase electricity consumption unnecessarily. Normally thermostat set to 4.

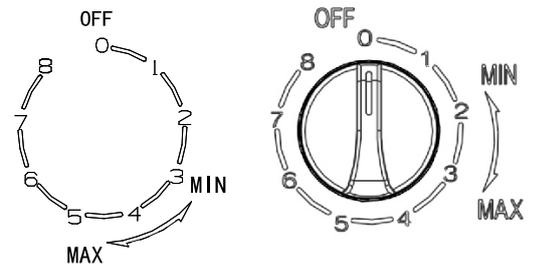

- If need to adjust the temperature, please open the door, and turn the temperature control dial in the direction of MAX. If too cold, turn dial in the direction of MIN.
- When stop running temporarily, please turn the temperature control dial to 0/OFF.

**NOTE:** High temperature setting will accelerate food waste.

# SPECIFICATIONS

Product Name	BEVERAGE COOLER		
Product No.	CPC271F7ABE		
Outer Dimensions (mm)	Width	Depth	Height
	549	524	1910
Provided accessories	5 shelves		
Performance	Actual compartment temperature 0-10°C (ambient temperature T (43°C) / ST(38°C) , humidity 65%, unloaded state, not exposed to direct sunlight)		

Product Name	BEVERAGE COOLER		
Product No.	CPC221F7ABE/CPC381N7ABD		
Outer Dimensions (mm)	Width	Depth	Height
	549/600	524/615	1730/2000
Provided accessories	4 shelves/4 shelves		
Performance	Actual compartment temperature 0-10°C (ambient temperature T (43°C) / ST(38°C) , humidity 65%, unloaded state, not exposed to direct sunlight)		

**!** The specifications may change, please refer to the circuit name plate on the back of your beverage cooler .

**!** The thermostat in the factory has been transferred to the best position, generally do not need to do adjustment.

