


7231

((

Ver.1.0 26.-07-2018

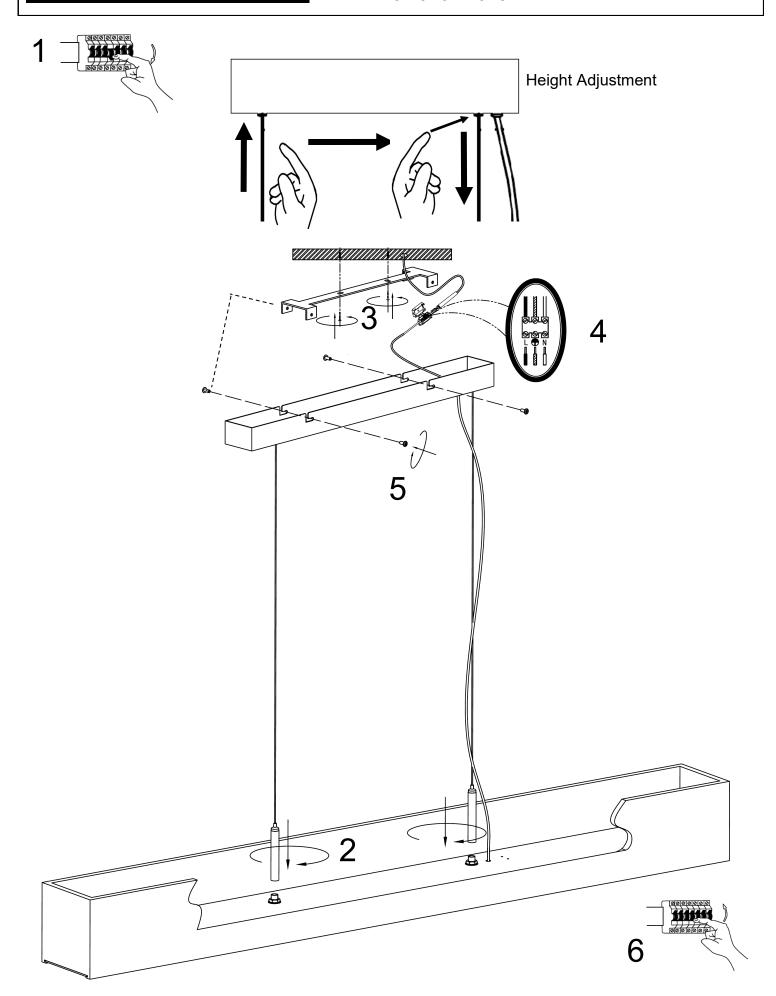

SAFETY INFORMATION: (Please retain for future reference)

- Always turn off the mains supply before commencing the installation of this fitting.
- This is a Class 1 product and requires an Earth connection 230 (240) Volts 50Hz AC.

MAINS SUPPLY LIGHT FITTING EARTH - Un sleeved copper or (Green / Yellow) NEUTRAL - Possible colours : Black or Blue NEUTRAL

- This product must be installed in accordance with the national building and wiring regulations, if in doubt consult a qualified electrician.
- We do not recommend any modifications of the fitting, (*with the exception of cable and chain shortening) as this may invalidate the warranty and render the fitting unsafe.
- This fitting is suitable for installation in Indoor locations only.
- Do not mount the fitting in a damp atmosphere.
- Ensure sufficient access to the fitting to enable safe maintenance.
- The Luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 0.2m is not expected
- Only Use artificial plants for decoration
- DO NOT attempt to water artificial plants or fill the wooden interior with water.

LAMP INFORMATION:

- Do not stare at the operating lamp
- The LED lamps are not replaceable, when the lamps reach the end of their life the whole luminaire shall be replaced

DIMMING:


This fitting maybe dimmed when using a compatible LED dimmer switch

ADDITIONAL INFORMATION:

• The fitting has a 'rise and fall' mechanism to allow height adjustment. To shorten the fitting hold each wire in turn and gently push upwards to the desire height, the support wire will freely move into the ceiling can. If required the fitting can be lengthened back to the original height, push the small metal release pins in individually, this will release the clamp and allow each support wire to become free to lengthen.

AFTERCARE AND MAINTENANCE:

- Always disconnect power supply when servicing or cleaning.
- Clean only with a dry or slightly damp cloth.
- Do no use any abrasive cloths or cleaners as this may damage the product

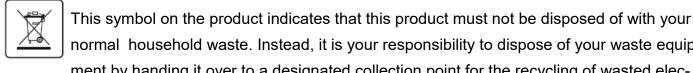

normal household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of wasted electrical and electronic equipment. For more information about recycling please contact your local council or your household waste disposal service or the shop where you purchased the product.