Box-System-Hover/-XL 160/180/200 x 200





NL Handleiding voor de montage

 


RO Instructiunile de instalare

F Instructions d'installation

(CZ) Návod k instalaci

- (GB) Assembly instructions
- PL Instrukcja montazu
- (RU) Инструкция по монтажу
- Istruzioni per l'installazione
- SK Návod na inštaláciu
- H Telepítési utasítások











21090110

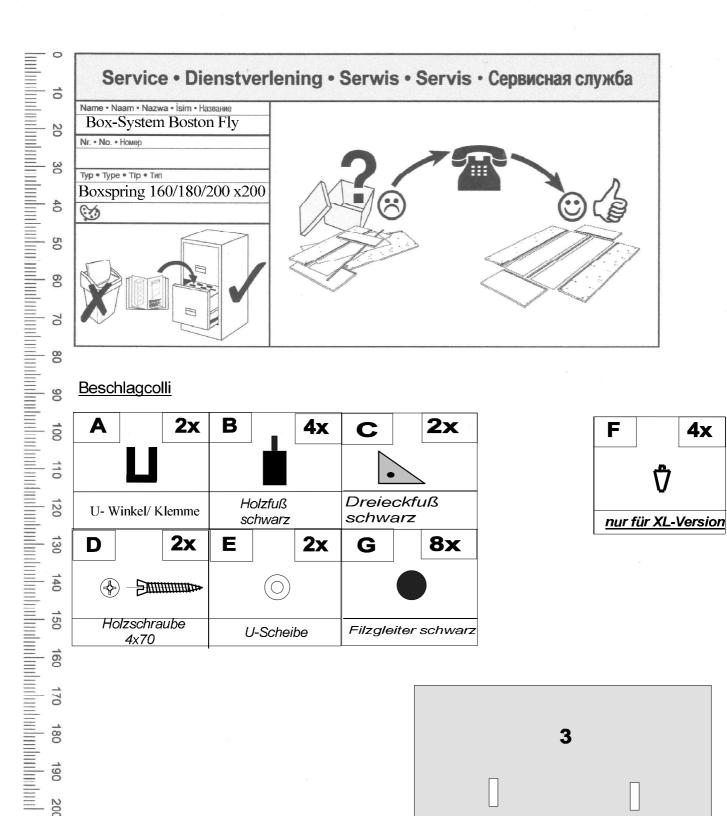

U-Scheibe


Holzschraube

4x70

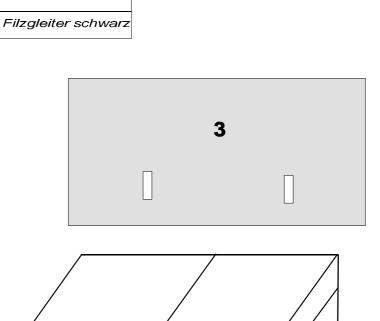


x


1.

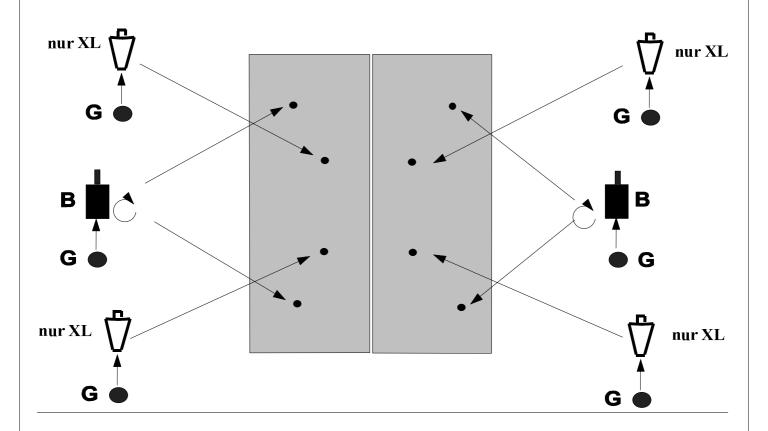


2.

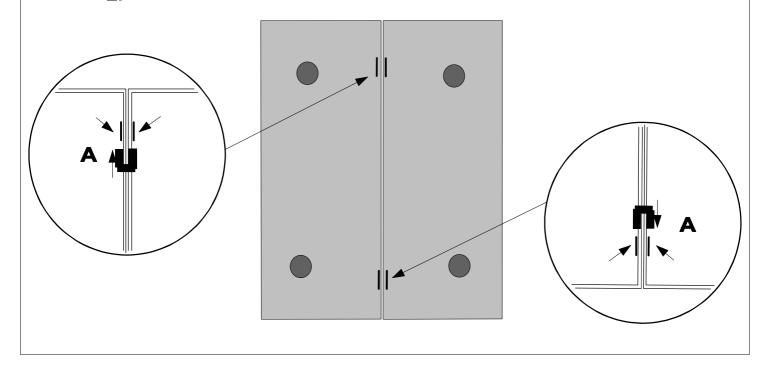

3.

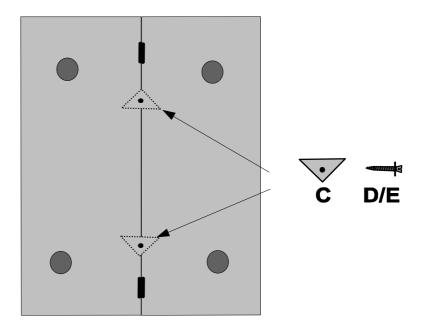


4.

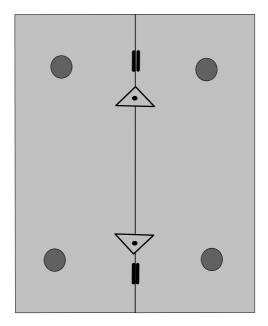

5. Montage der LED-Beleuchtung

gesonderte Anleitung

6. Kopfteilmontage

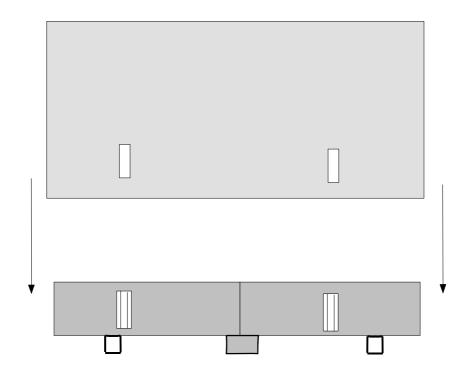

Kopfteil in entsprechende Halterungen an den Bettkästen einhängen, anschließend Matratzen auflegen.




Bitte dieses Bett beim Umstellen immer anheben und nicht auf dem Fußboden verschieben!!!! Es besteht die Gefahr von Schäden durch Verschieben.

Montageanleitung


(Bitte aufbewahren)

Beleuchtungsset für Unterflurbeleuchtung mit Fußschalter und PIR-Sensor

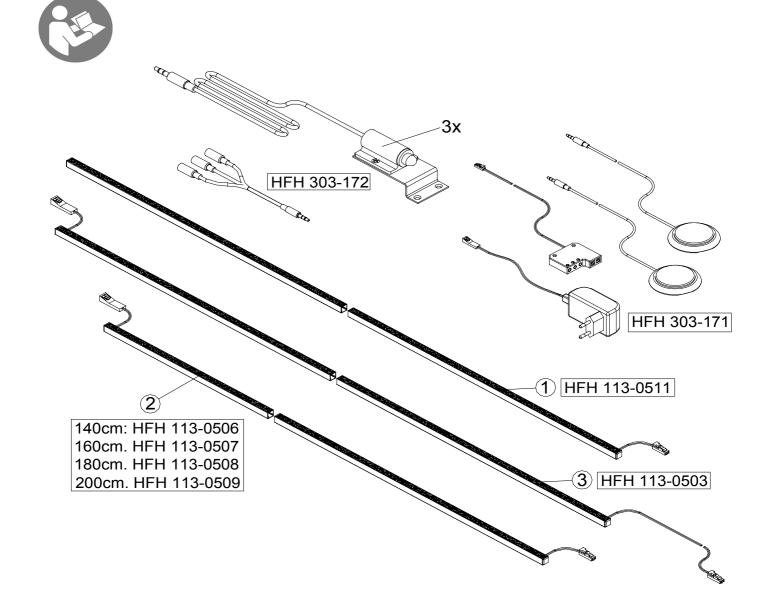

 
Dieses Produkt enthält Lichtquellen der Energieeffizienzklasse F










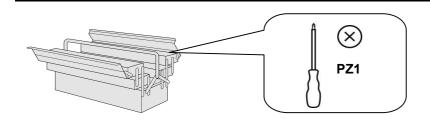








Unterflurbeleuchtung mit PIR-Sensor

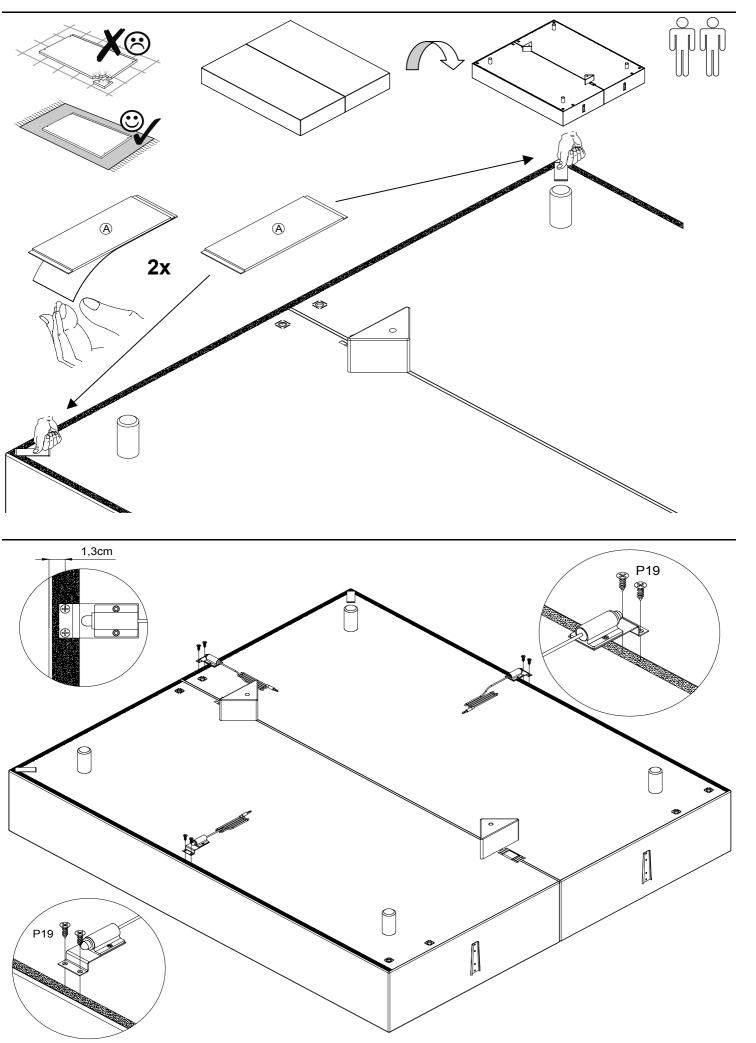


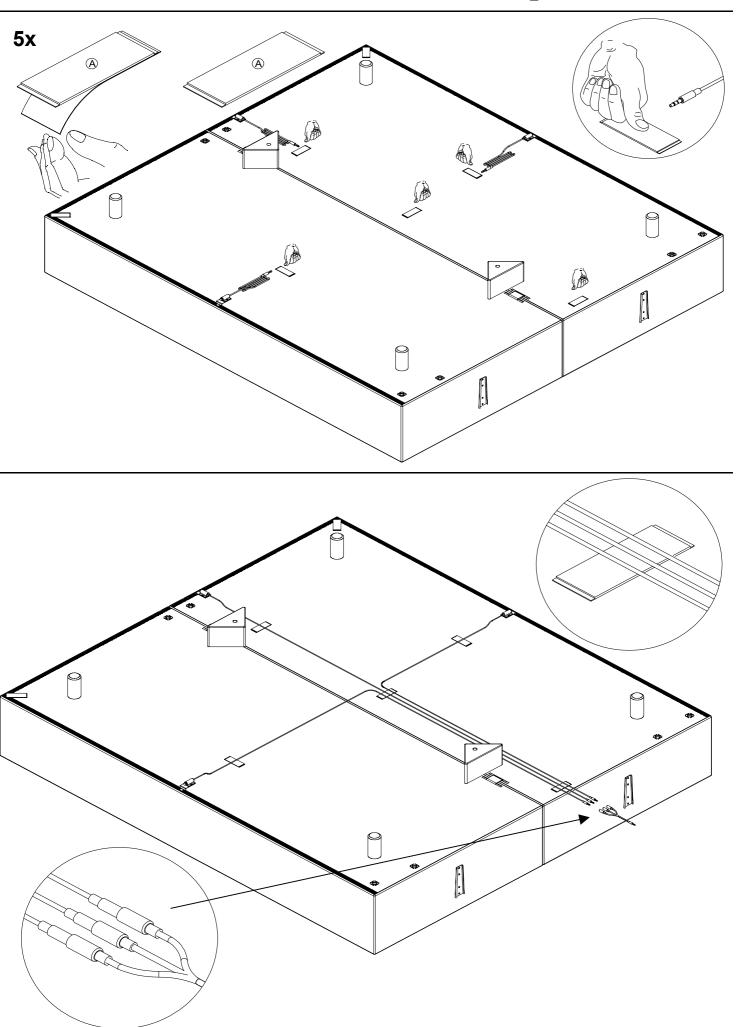


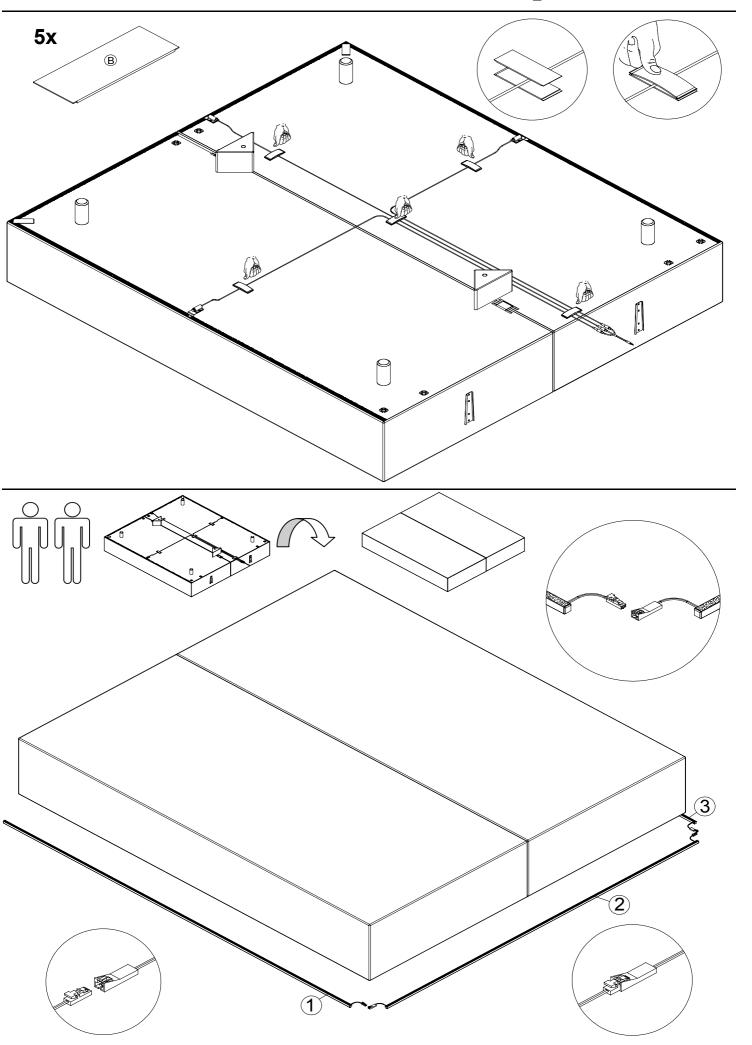


Unterflurbeleuchtung mit PIR-Sensor

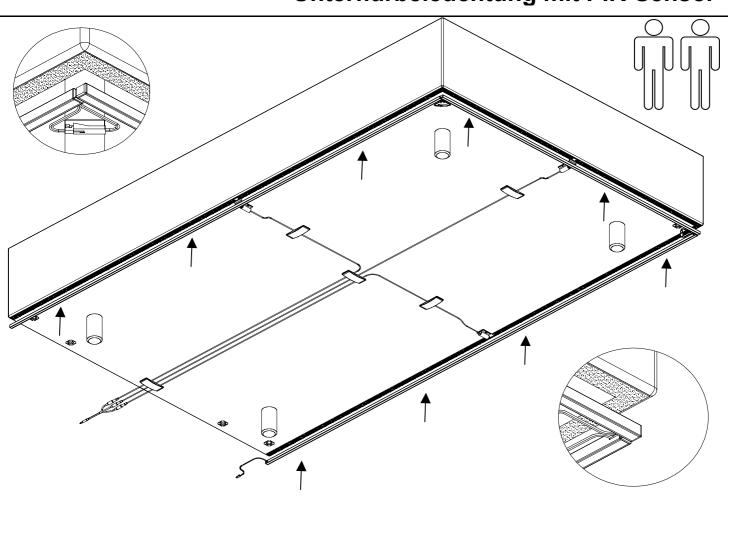

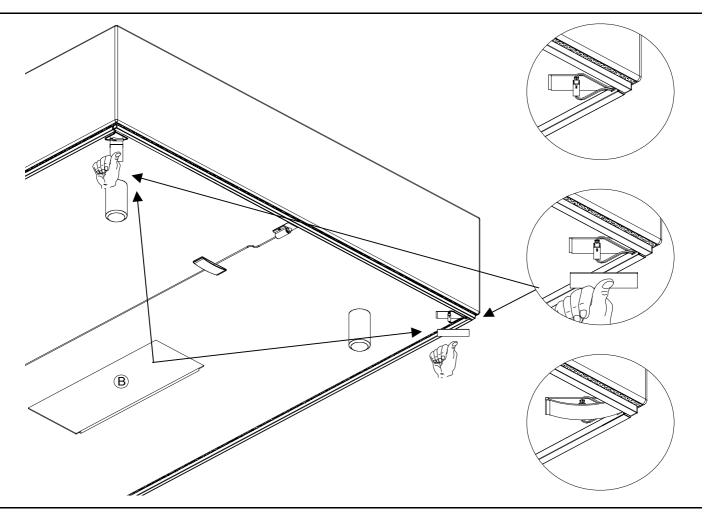

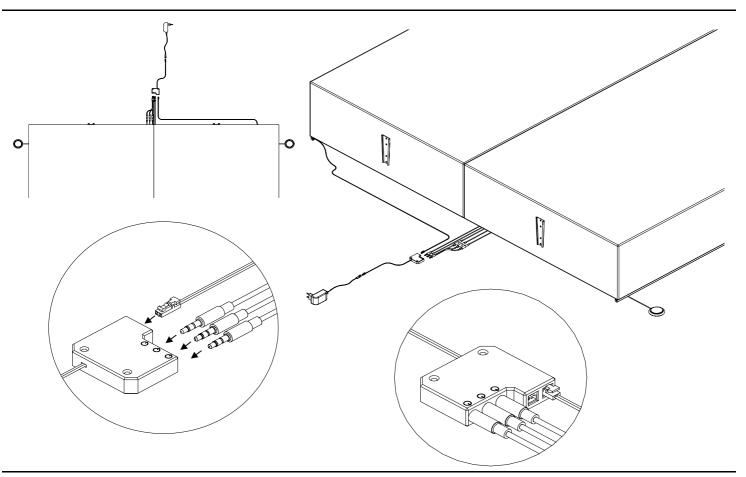

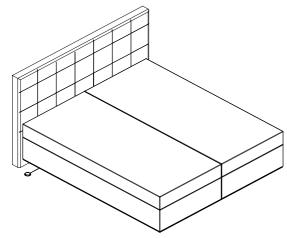


Vorbereitung der Lichtsteuerung:

- 1: Taste kurz drücken, Beleuchtung wird eingeschaltet
- 2: Taste lang drücken, um gewünschte Helligkeit der Unterflurbeleuchtung festzulegen
- 3: Taste kurz drücken, Beleuchtung wird ausgeschaltet

Verwendung der Lichtsteuerung:

Bei Bewegungen im Erfassungsbereich der PIR-Sensoren schaltet sich die Beleuchtung automatisch in der voreingestellten Helligkeitsstufe ein.

Wird der Erfassungsbereich verlassen, schaltet sich die Beleuchtung nach ca. 40 Sekunden automatisch aus.

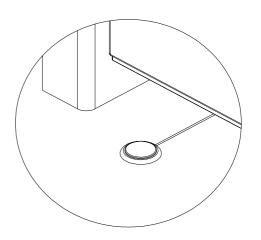

Preparation of the light control:

- 1: Short press on the key, the lighting is switched on
- 2: Long press on the key, to set the brightness of the underfloor illumination.
- 3: Short press on the key, the lighting is switched off

Use of the light control:

In the case of movements inside the detection area of the PIR sensors the lighting switches automatically on in the chosen brightness.

If you leave the detection area, it switches automatically off after ca. 40 seconds.