 
 
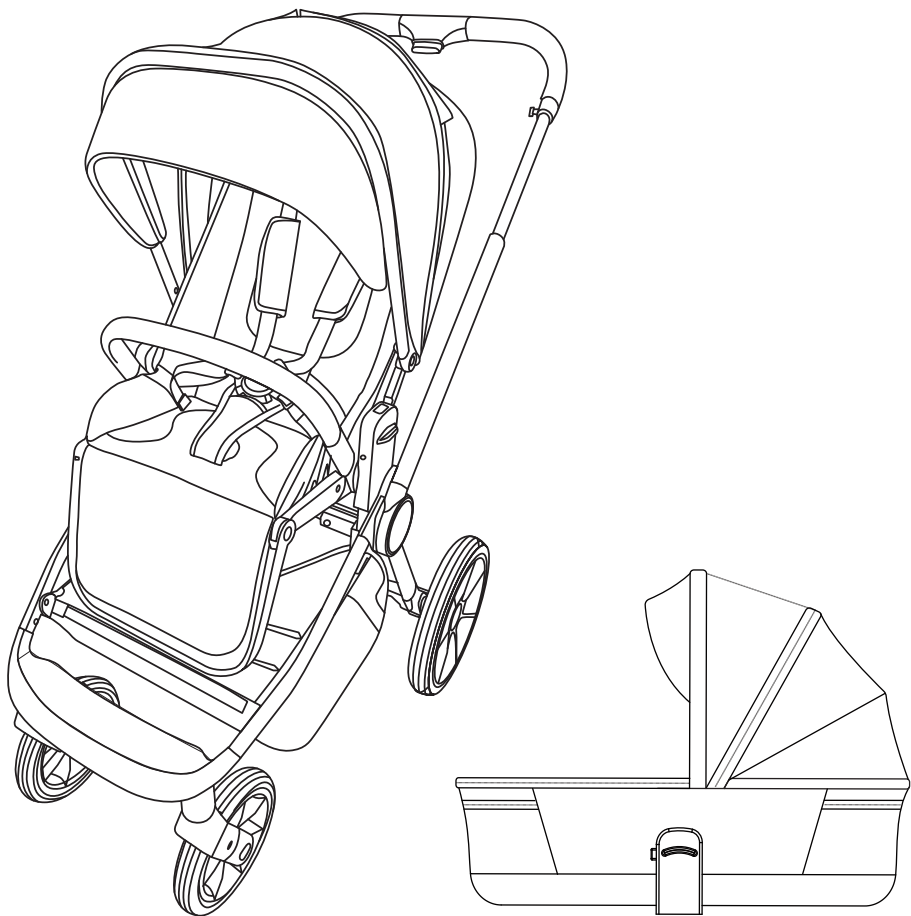 
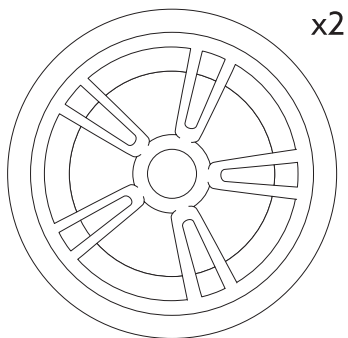 
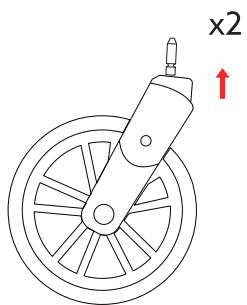 
 
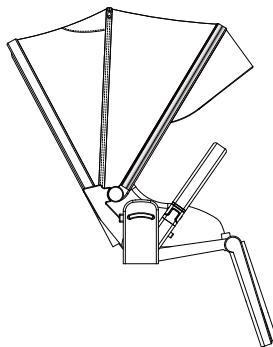 



E70+P96 instructions manual

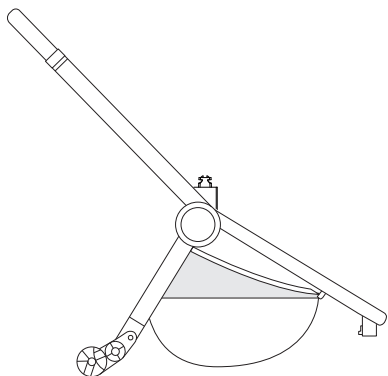


IMPORTANT
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

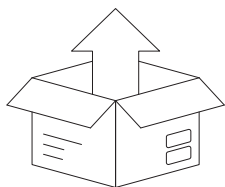

 
1.

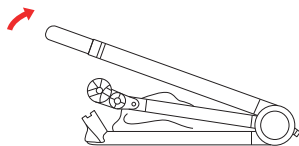

 
2.

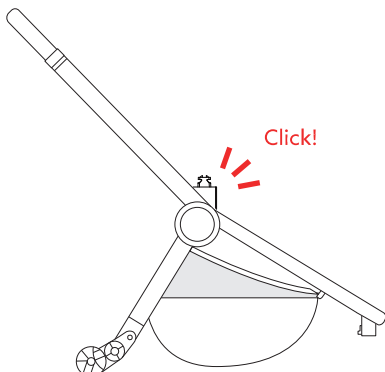

 
3.

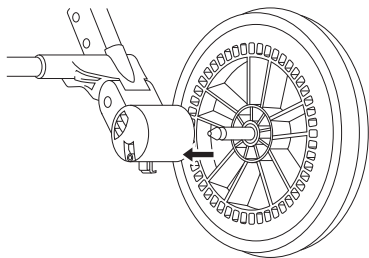

 
4.

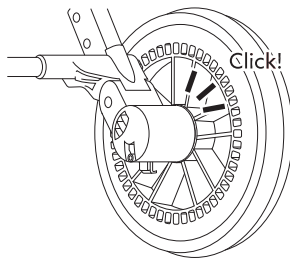

 
5.

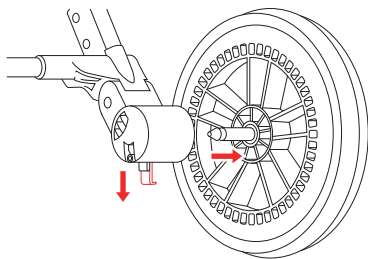

 
6.

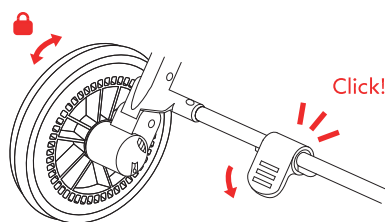

 
7.

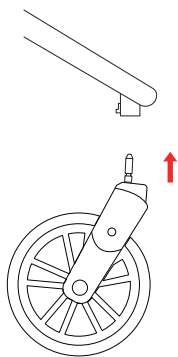

 
8.

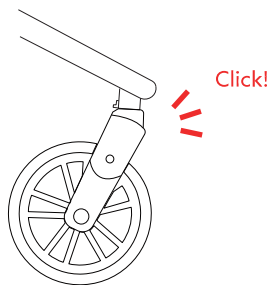

 
9.

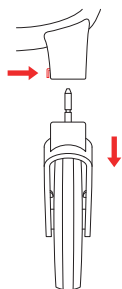

 
10.

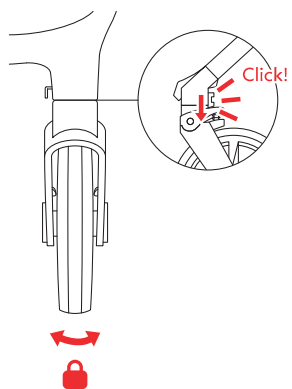

 
11.

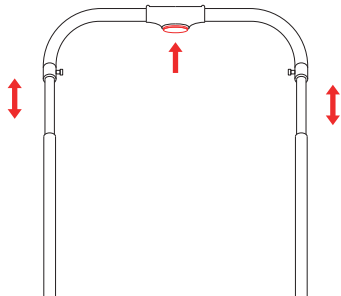

 
12.

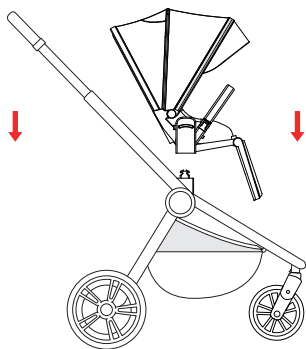

 
13.

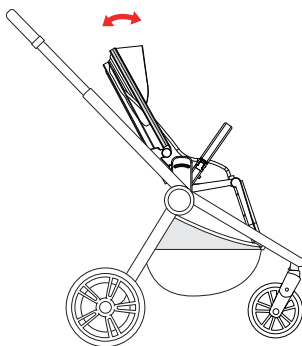

 
14.

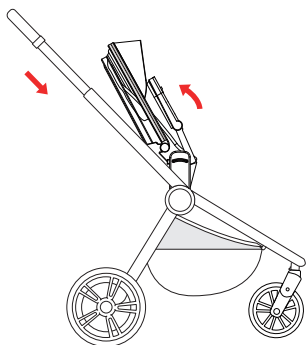

 
15.

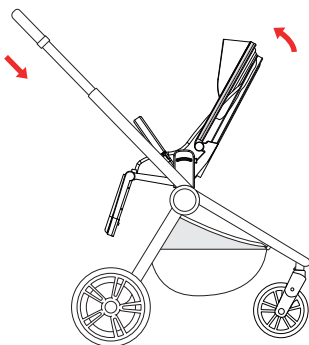

 
16.

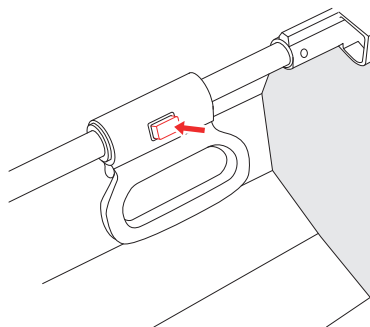

 
17.

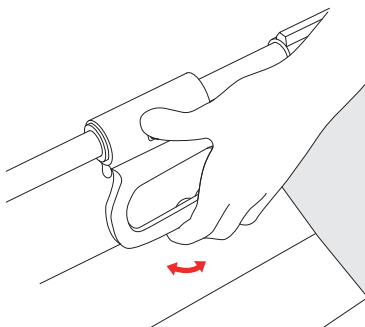

 
18.

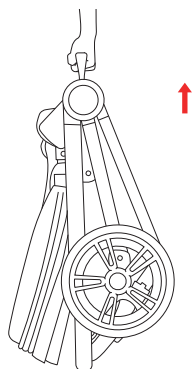

 
19.

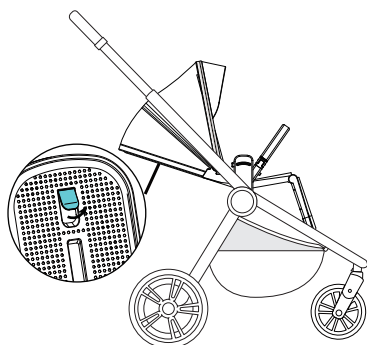

 
20.

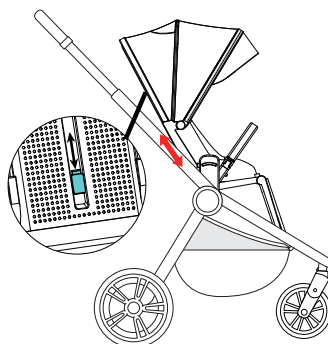

 
21.

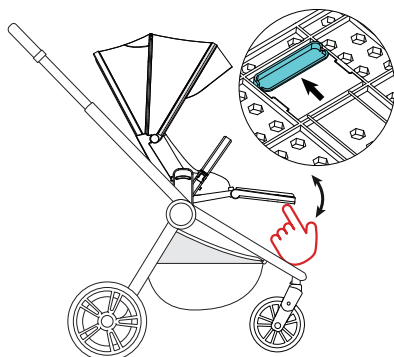

 
22.

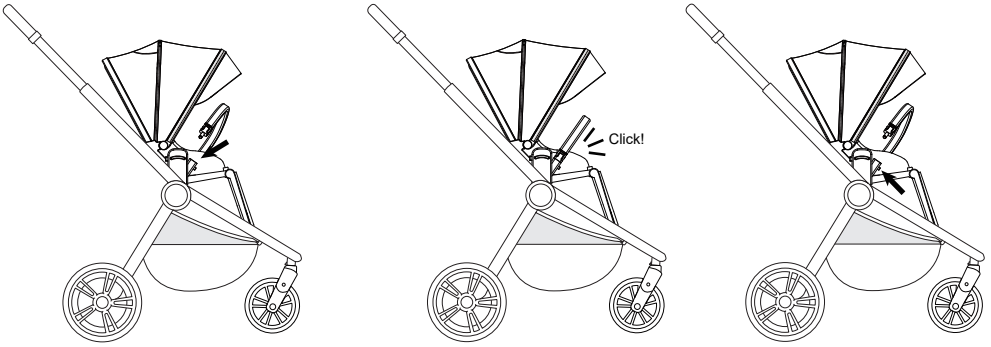

 
23.

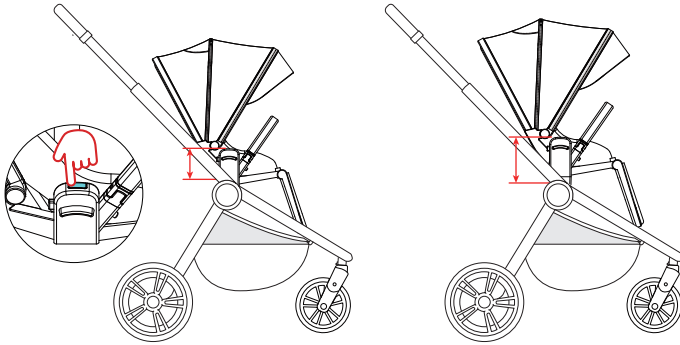

 
24.

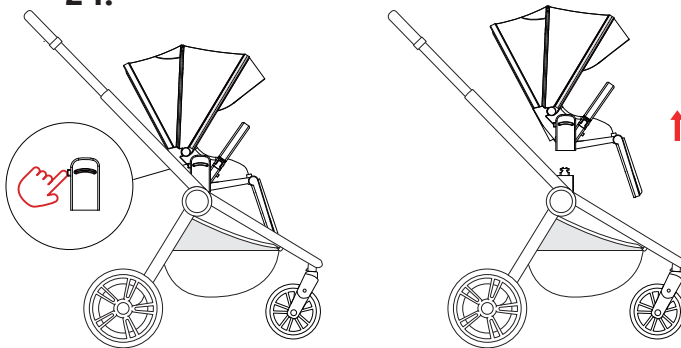

 
25.



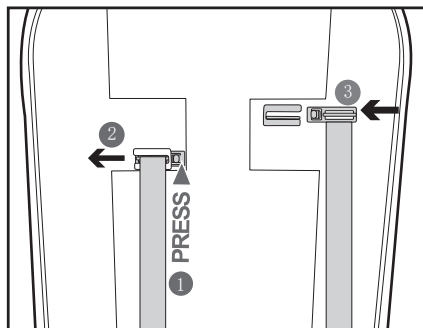


 26.

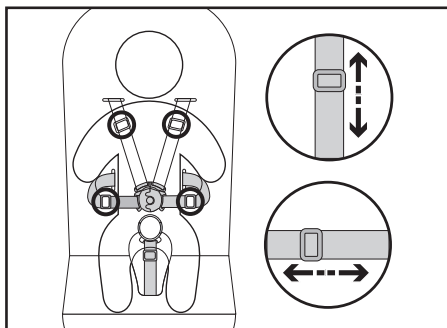

   
 
27.

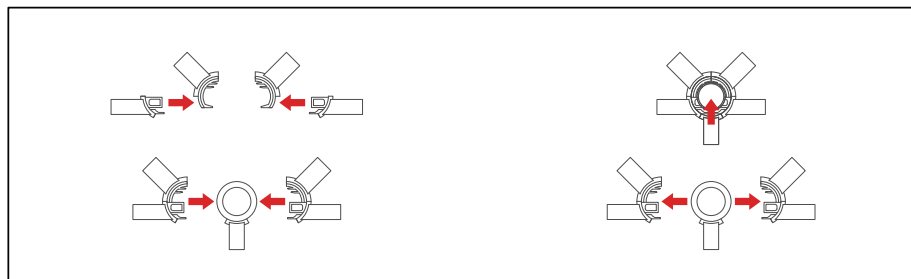

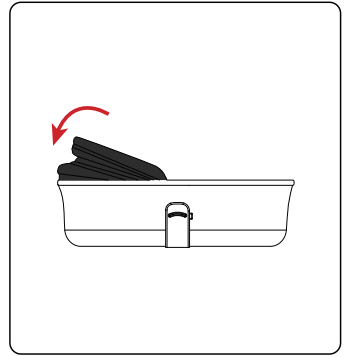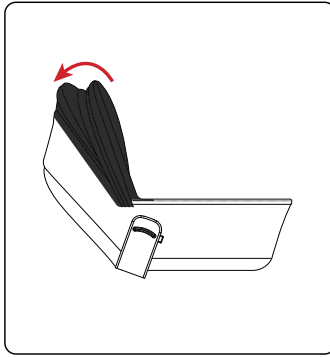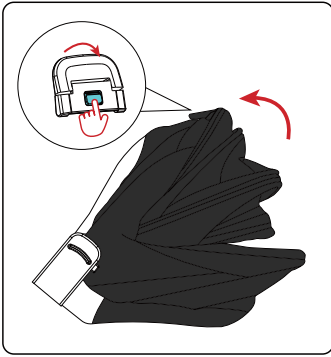



Unfold the carrycot:

  Press the button on one side, meanwhile lifting up the handle forward to open the carrycot.

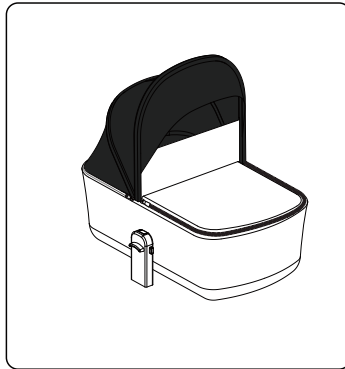
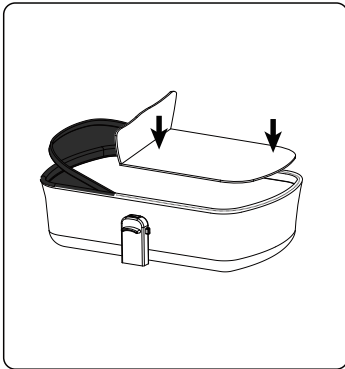


Assembly of the foot-cover for carrycot:

 
 
Fix the foot-cover by the zipper onto the carrycot as arrows.

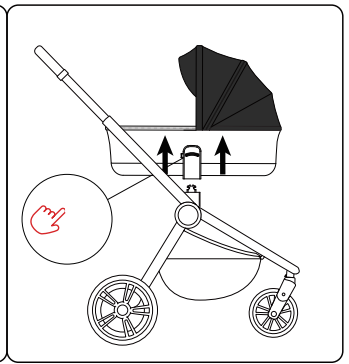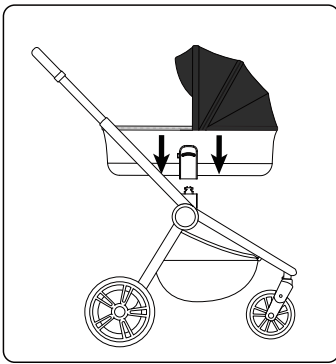





Assemble the carrycot onto the frame: Place the base of carrycot in parallel with the fixed seat interface of the frame until the clamping sound is heard;
Remove the carrycot from the frame: Press the quick releasing button to remove the carrycot as shown in picture.

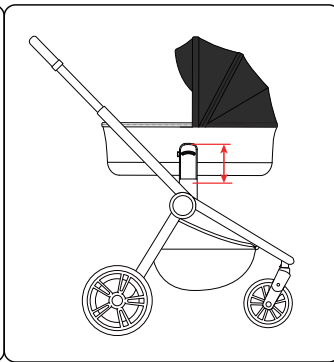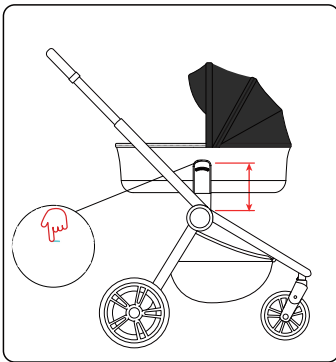

Carrycot adjustment:
Press the adjustment button to adjust the height of carrycot in 2 positions as shown in picture.

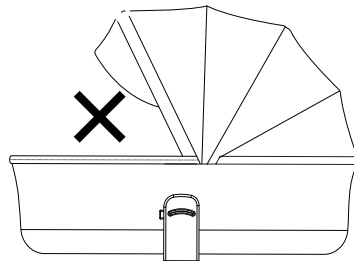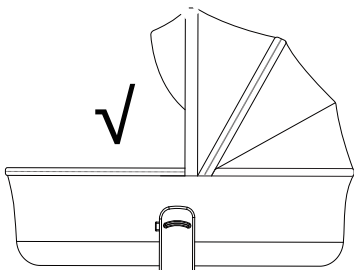

The canopy tube can be lifted vertically, and the fourth section of the canopy cannot be lifted directly under the extended state.

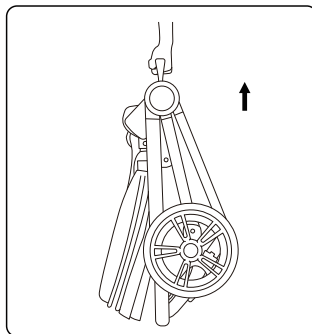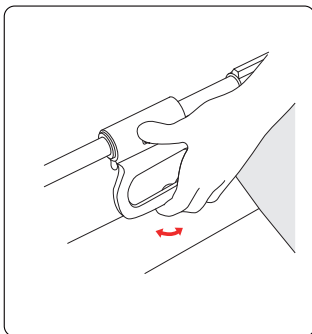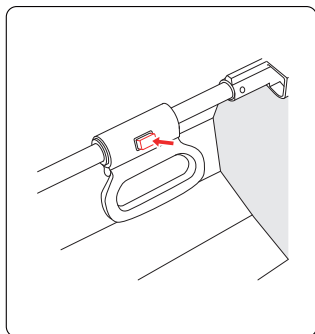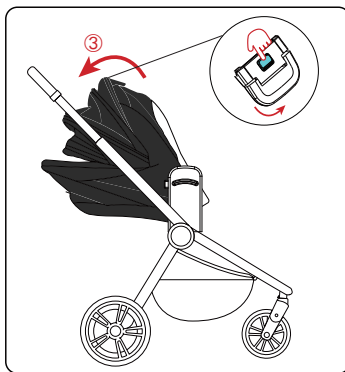

Folding the carrycot with the frame together

①Close the canopy, ②Telescope the handle bar to the shortest position, ③press the button on the carrycot head, not released, and lift the pulling handle forward to fold the carrycot in the direction of the handle.

④press the second lock under the carrycot while rotating the handle to release the locking mechanism, and finally retract the frame.



IMPORTANT

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

STROLLER-WARNINGS:

- Never leave the child unattended.
- Use a harness as soon as the child can sit unaided.
- Always use the restraint system.
- Maximum load of basket is 3kg.
- This product is not suitable for running or skating.
- This vehicle is intended for one child from 0 months and up to 22kg or 48 months, whichever comes first.
- Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- To avoid injury ensure that the child is kept away when unfolding and folding this product.
- The parking device shall be engaged when placing and removing the children.
- Do not let the child play with this product.
- Pushchair designed to be used from birth shall recommend the use of the most reclined position for new born babies.
- A statement that any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
- A statement that accessories which are not approved by the manufacturer shall not be used.
- Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.
- Ensure that all the locking devices are engaged before use.

CARRYCOT WARNINGS:

- This product is suitable only for a child who cannot sit up unaided, roll over and cannot push itself up on its hands and knees. Maximum weight of the child: 9 kg. This requirement does not apply to products complying with ECE 44/R129.
- Only use the mattress supplied with the carry cot. Do not add additional mattress.
- This product is compatible with the chassis of the **E7046** stroller.
- Only use on a firm, horizontal level and dry surface.
- Do not let other children play unattended near the carry cot.
- Do not use if any part of the carry cot is broken, torn or missing.
- Never leave your child unattended.
- Be aware of the risks presented by an open fire and other heat sources such as electrical heaters, gas flames etc. especially if they are in the immediate vicinity of the carry cot.
- Please check on a regular basis the carrying handle and the base including all feet for wear and damage of any kind.
- Never use the carry cot on a stand.
- Ensure that your child's head is never at a lower level than it's body when placed inside the carry cot.
- Before lifting or transporting the carrycot, check that the carrying handle is in a vertical position and correctly attached on both sides.

CARSEAT WARNINGS

For car seats used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.

- Only use replacement parts supplied or approved by the manufacturer.
- a statement not to place the carry cot close to another product, which could present a danger of strangulation, e.g. strings, blind/curtain cords ...;
- An awareness of hazard of hitting the baby e.g. when putting on floor, going through doors.
- Not leave anything in the carry cot that could present a danger of suffocation e.g. non-rigid toys, pillows ..
- The overheating can endanger the life of your child! Take into account the ambient temperature and the child's clothing and ensure that the child is not too cold or too warm.
- Before use, make sure that the crib is correctly assembled, the internal support brackets must be attached to the 4 clips.
- Before use, make sure that the lining is correctly assembled on the frame, and that the internal support brackets are correctly attached to the clips on the bottom of the carrycot.
- To avoid injuries, make sure that the child is at a safe distance away when opening and closing the carrycot.
- **RISK OF SUFFOCATION:** the carrycot could tip over on soft surfaces and suffocate the child. **NEVER** place the carrycot on beds, sofas or other soft surfaces.
- To ask a health professional for advice on safe sleeping.
- Make sure that everyone using the product is familiar with how it works.

EN1466:2023

MAINTENANCE:

The user is responsible for the regular maintenance of the stroller.

All connecting parts must be tight and secured properly. It is particularly important to ensure that the locking and swiveling mechanisms are treated regularly with dry lubricant. It is important that brakes, wheels and tires are not impaired during use. Inspect them regularly and repair or replace if necessary.

You can also treat the other moving parts with dry lubricant. After spraying on the dry lubricant, wipe the product with a soft cloth.

The frame tubes covered by the locking mechanism and turning mechanism should also be regularly cleaned and sprayed. This will ensure that you enjoy your pushchair without any problems.

Do not make any modifications to the product. If you have any complaints or problems, please contact your supplier or importer.

A service should be scheduled every 24 months.

CLEANING:

Do not use abrasives to clean the frame! Use a damp cloth and a mild detergent and dry thoroughly.

Should the pushchair be exposed to salt water, please rinse it down with fresh (tap) water as soon as possible afterwards.

Please always check the fabric care label before washing, do not tumble dry, do not iron or dry clean. Do not expose to direct sunlight when drying.

We recommend to use a rain cover in wet weather.

If the stroller is wet, leave it unfolded and allow all parts to dry completely to prevent mold. Never store in a damp environment.



100% Polyester