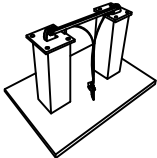
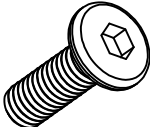


Assembly Instructions


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Pls tighten all the screws a little bit firstly. After all the screws are put in the hole, you can tighten all the screws. Do not tighten the screws one by one.


Caution: Assemble only with assistance from adults. Do not assemble in presence of children and or being assisted by a child.

A	B	C	D	E
				
1PC	1PC	8PCS	10PCS	1PC


1

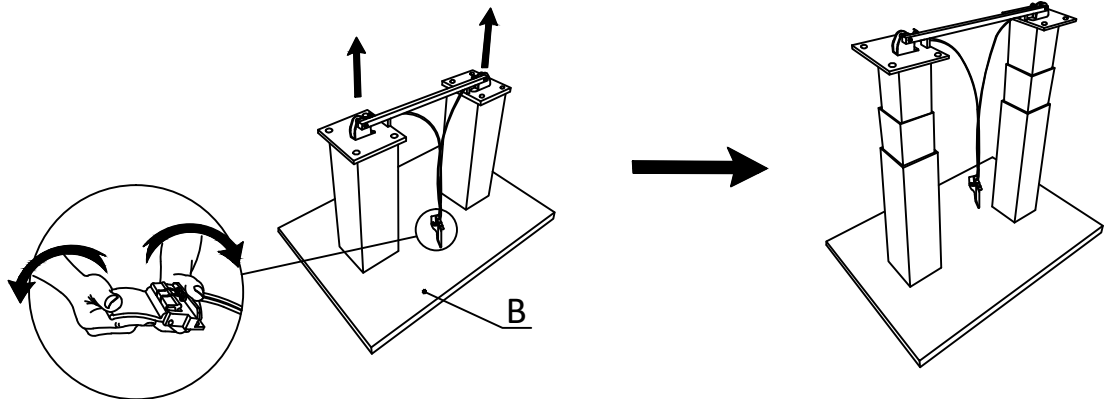


2

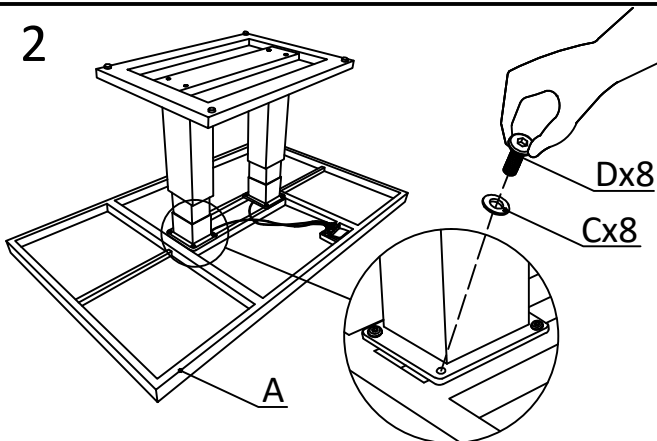


3

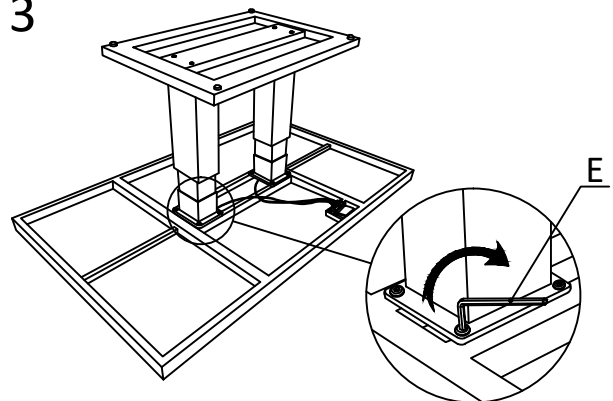

4

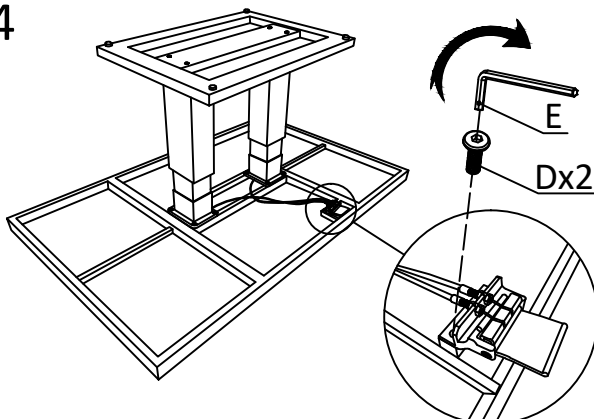

5

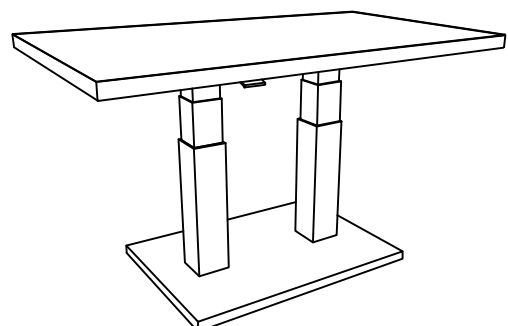


Assembly Instructions

Please read the entire instruction manual before you proceed and check if all parts are present. Clear all the packing material and be careful not to damage anything in the process. If needed, assemble with multiple persons.


Situation 1

Press handle A. The table top will go up automatically. You can choose the height you like.

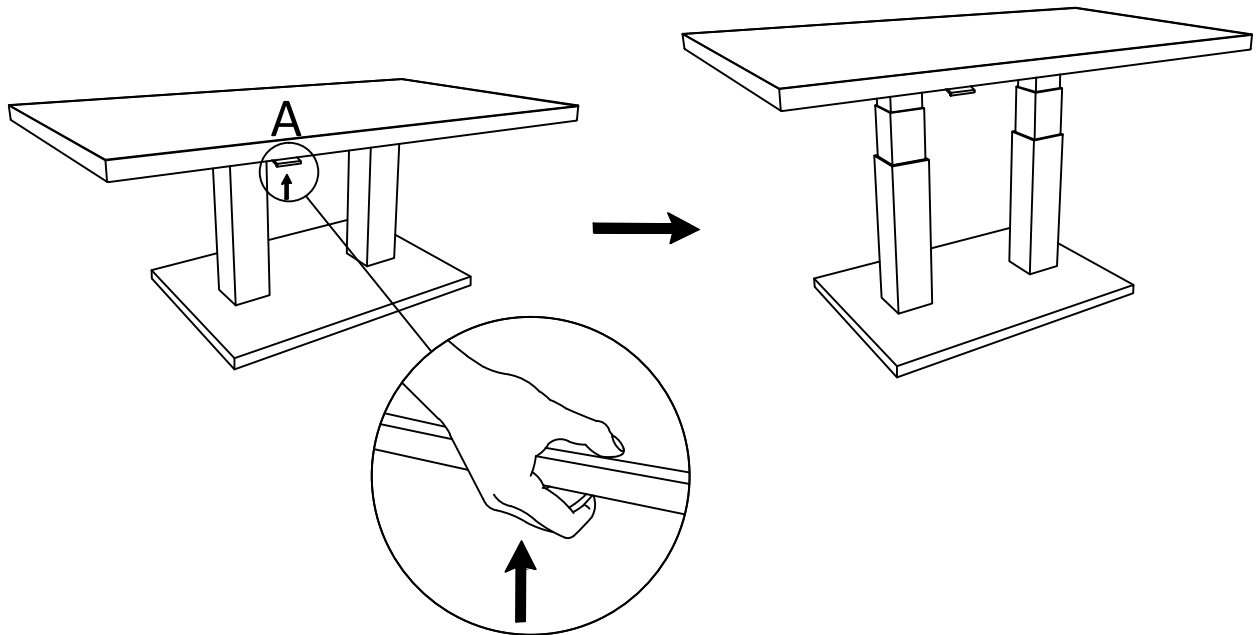

Situation 2

Press handle A, push the top down. Like the photo shows as below.

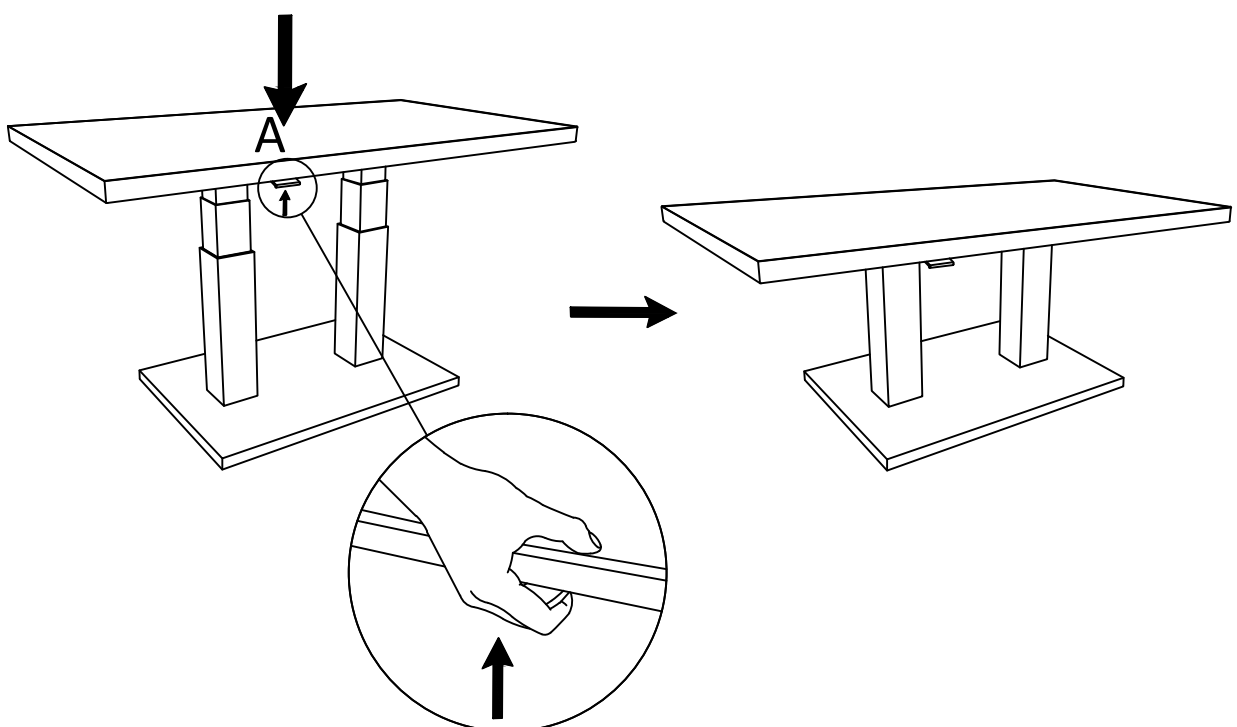

What to do if the gas spring for adjusting the backrest does not work or does not work properly.
 Wat te doen als de gasveer voor het verstellen van de rugleuning niet of niet goed functioneert.
 Was ist zu tun, wenn die Gasfeder zum Verstellen der Rückenlehne nicht oder nicht richtig funktioniert.




Situation A
 Situatie A
 Situation A

Backrest automatically returns to the starting position
 Rugleuning gaat automatisch weer naar de begin positie
 Rückenlehne kehrt automatisch in die Ausgangsposition zurück

Step 1: Loosen the nut (b) 1-2 mm.
 Step 2: Slide the gas spring cable up 1-2mm in the direction indicated by the arrow below.
 Step 3: Tighten the nut (a).

Stap 1: Draai de moer (b) 1-2 mm los.
 Stap 2: Schuif de kabel van de gasveer 1-2mm op in de richting die de pijl hieronder aangeeft.
 Stap 3: Draai de moer (a) aan.

Schritt 1: Lösen Sie die Mutter (b) um 1-2 mm.
 Schritt 2: Schieben Sie das Bowdenzug 1-2 mm in die durch den Pfeil unten angegebene Richtung.
 Schritt 3: Ziehen Sie die Mutter (a) an.

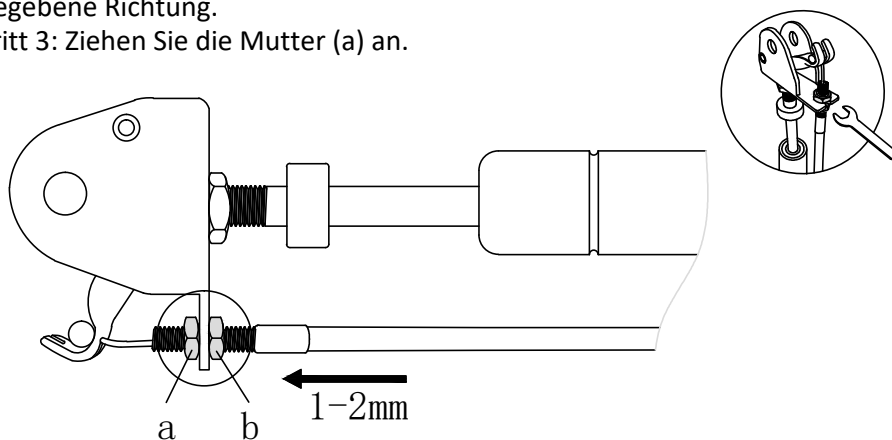

Situation B
 Situatie B
 Situation B

Backrest can't be adjusted, or barely adjusted
 Rugleuning kan niet of nauwelijks versteld worden
 Die Rückenlehne ist nicht oder kaum verstellbar

Step 1: Loosen the nut (a) 1-2 mm.
 Step 2: Slide the gas spring cable up 1-2mm in the direction indicated by the arrow below.
 Step 3: Tighten the nut (b).

Stap 1: Draai de moer (a) 1-2 mm los.
 Stap 2: Schuif de kabel van de gasveer 1-2mm op in de richting die de pijl hieronder aangeeft.
 Stap 3: Draai de moer (b) aan.

Schritt 1: Lösen Sie die Mutter (a) um 1-2 mm.
 Schritt 2: Schieben Sie das Bowdenzug 1-2 mm in die durch den Pfeil unten angegebene Richtung.
 Schritt 3: Ziehen Sie die Mutter (b) an.

