








ROSELLA

BIELIŽNIARKA

SKROS04




       
- | | |
|----------------------------------|------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ |

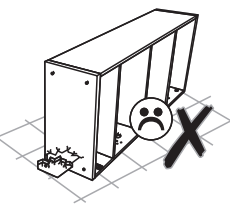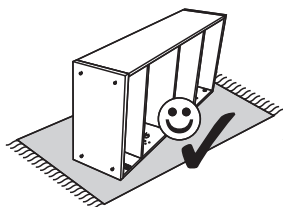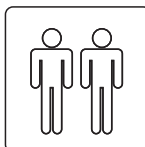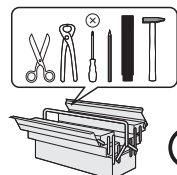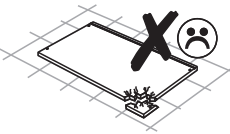
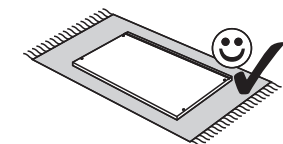
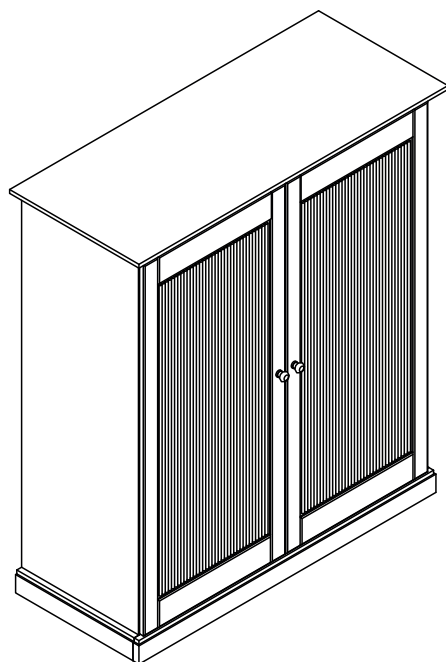


2 - 2,5

 
 
1

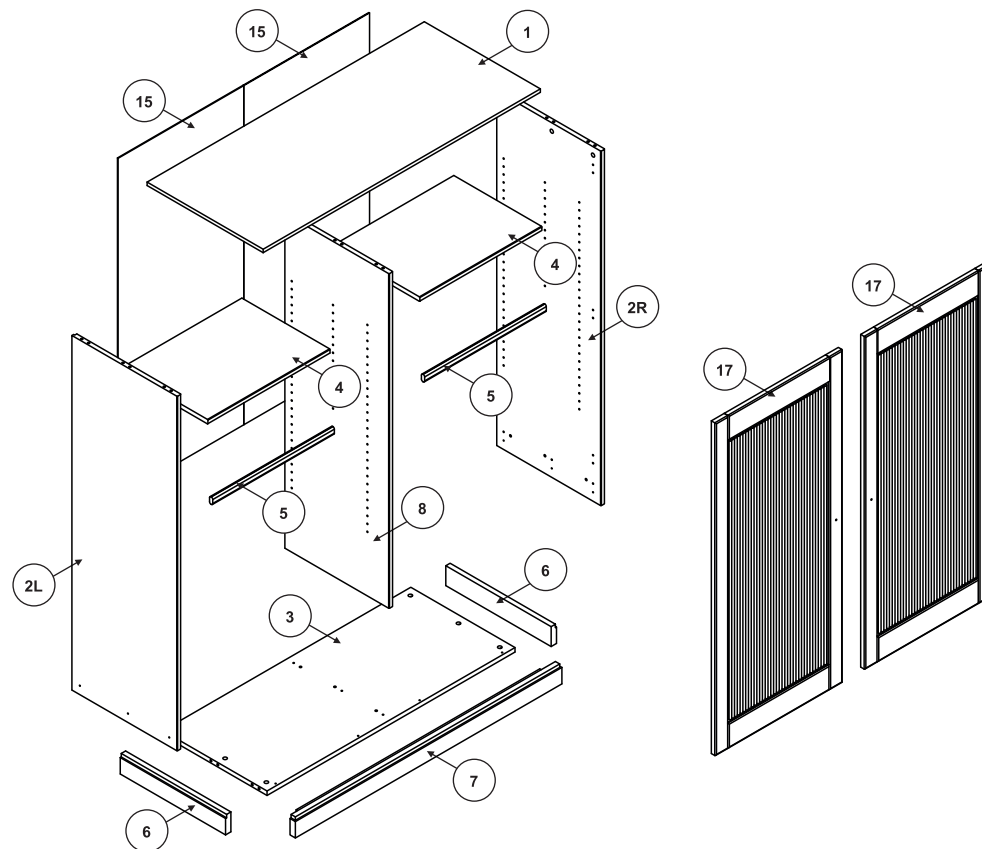




												N	3x16		
													x6		
A	8x32	B	34mm	C	15x10	Y	5mm	PA		RA		NA	3,5x16	MA	
	x18		x18		x18		x8		x6		x6		x20		x6
NB	3,5x35	NC	3,5x30	KK		YB	1x20	MF		YC	M4x25	O		F	
	x4		x6		x2		x40		x2		x2		x2		x4

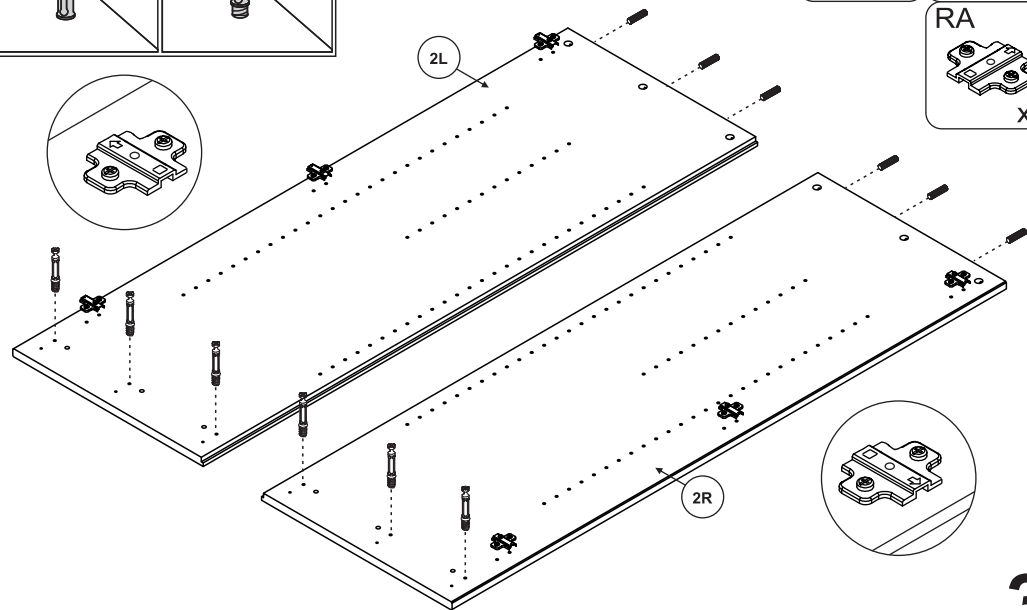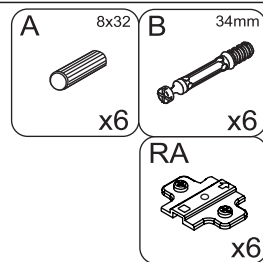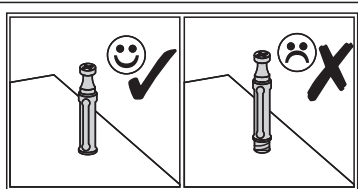   



3

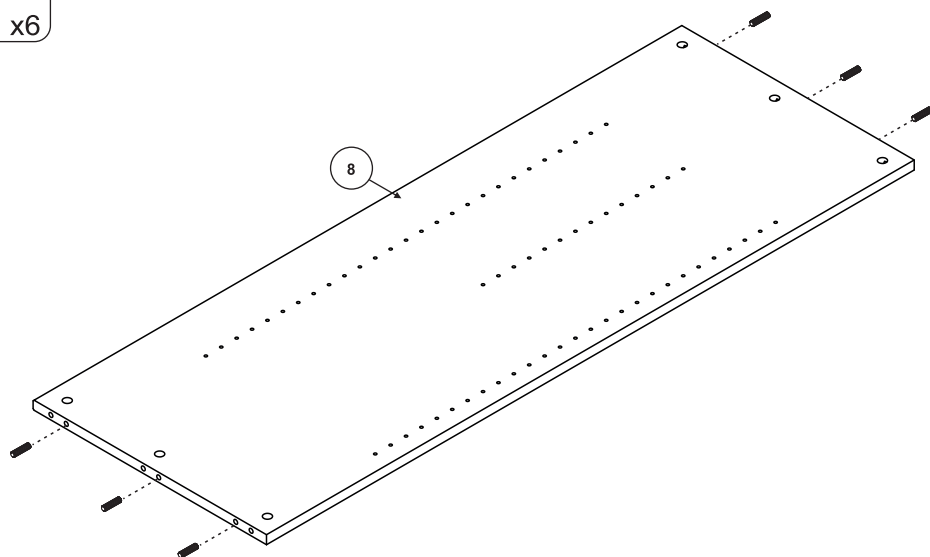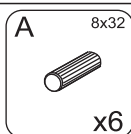  


4


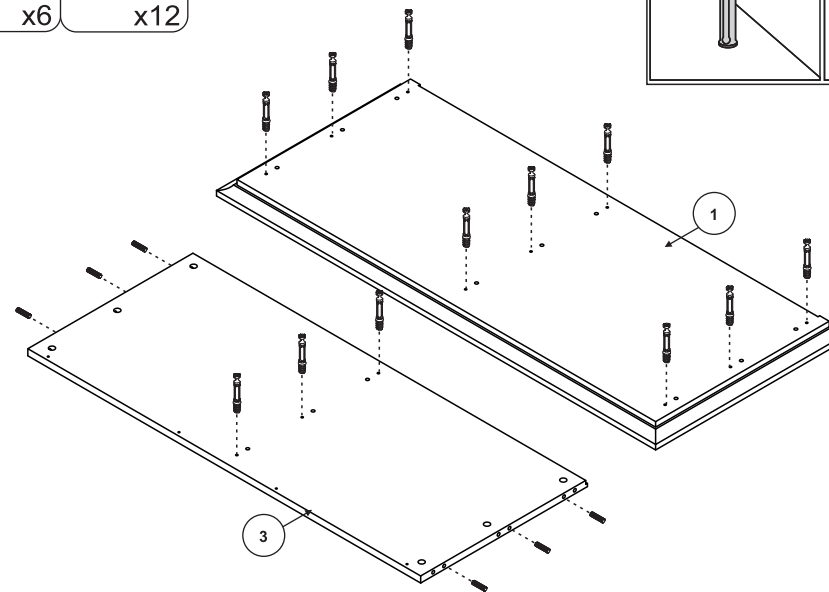 
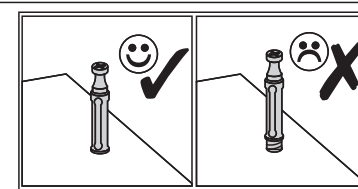 
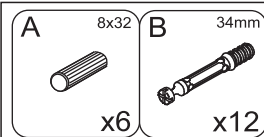 


5

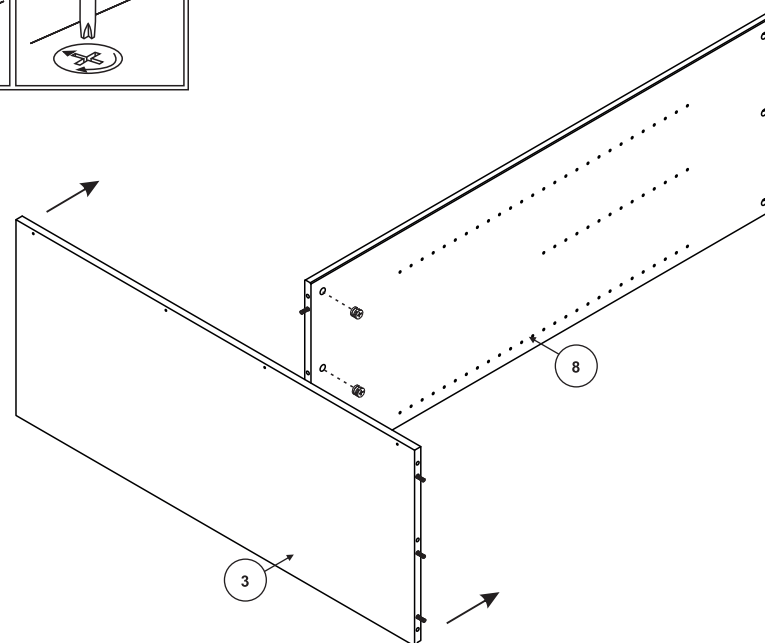 
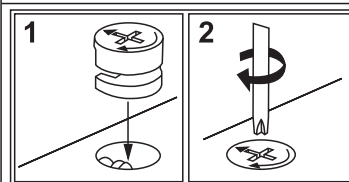 


6



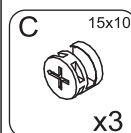 


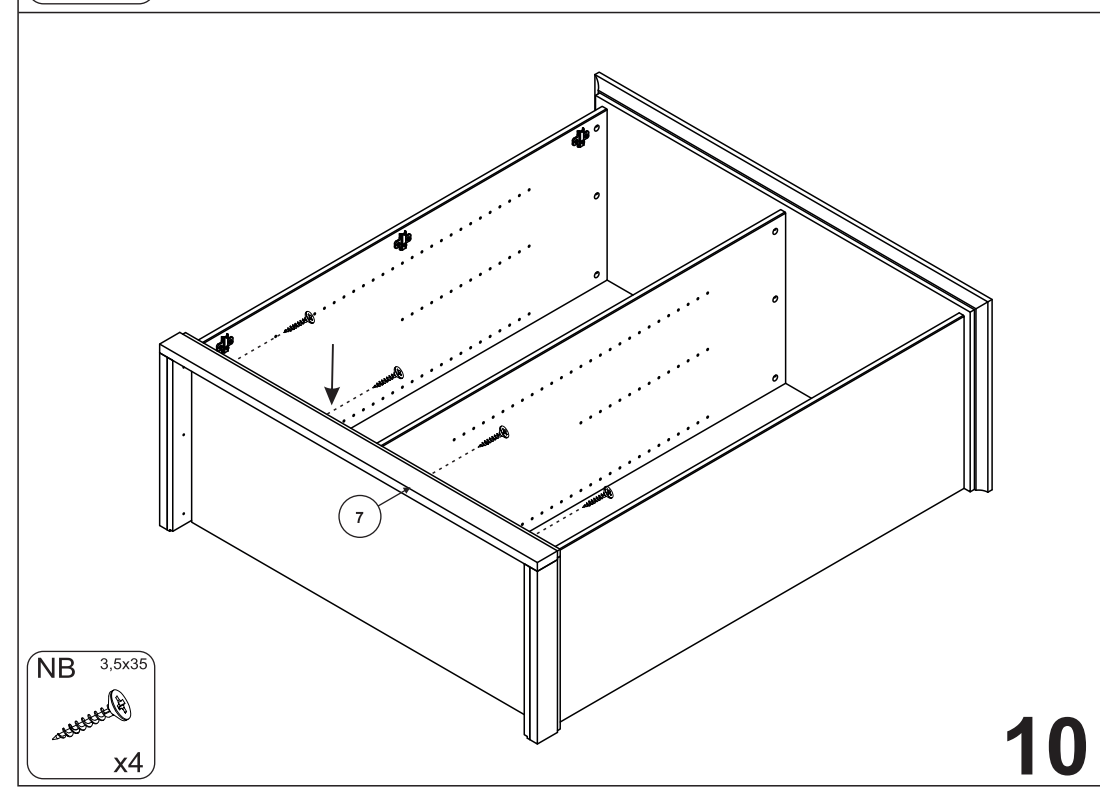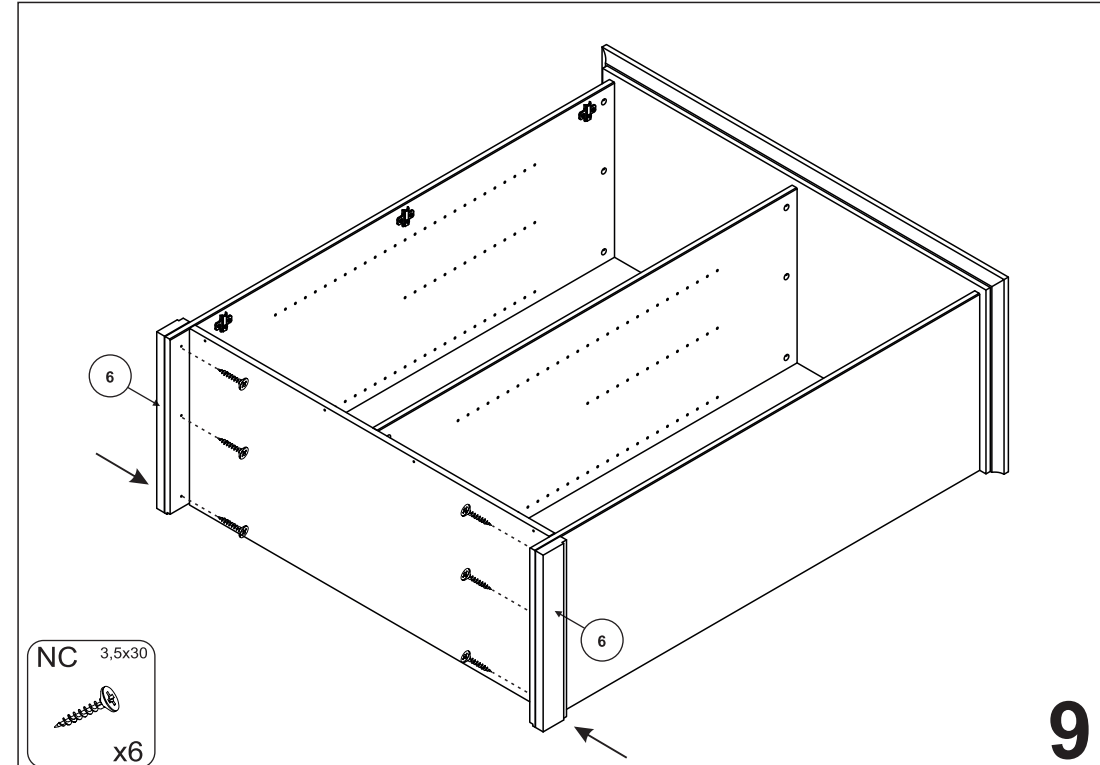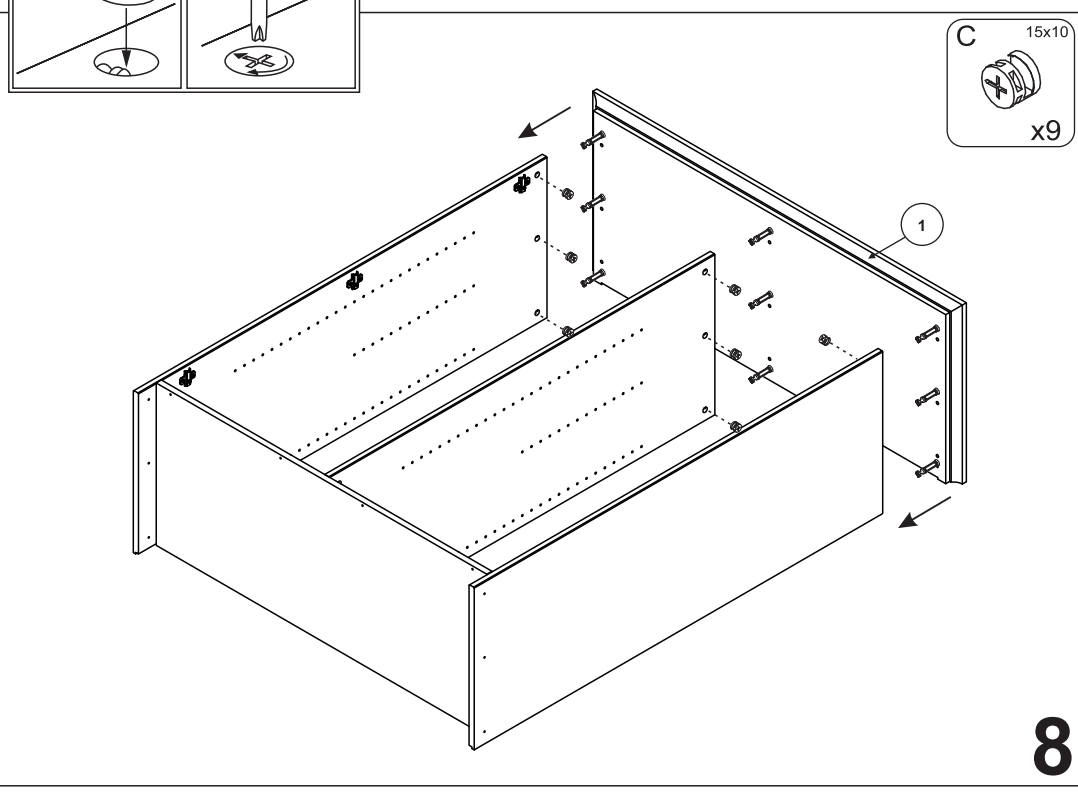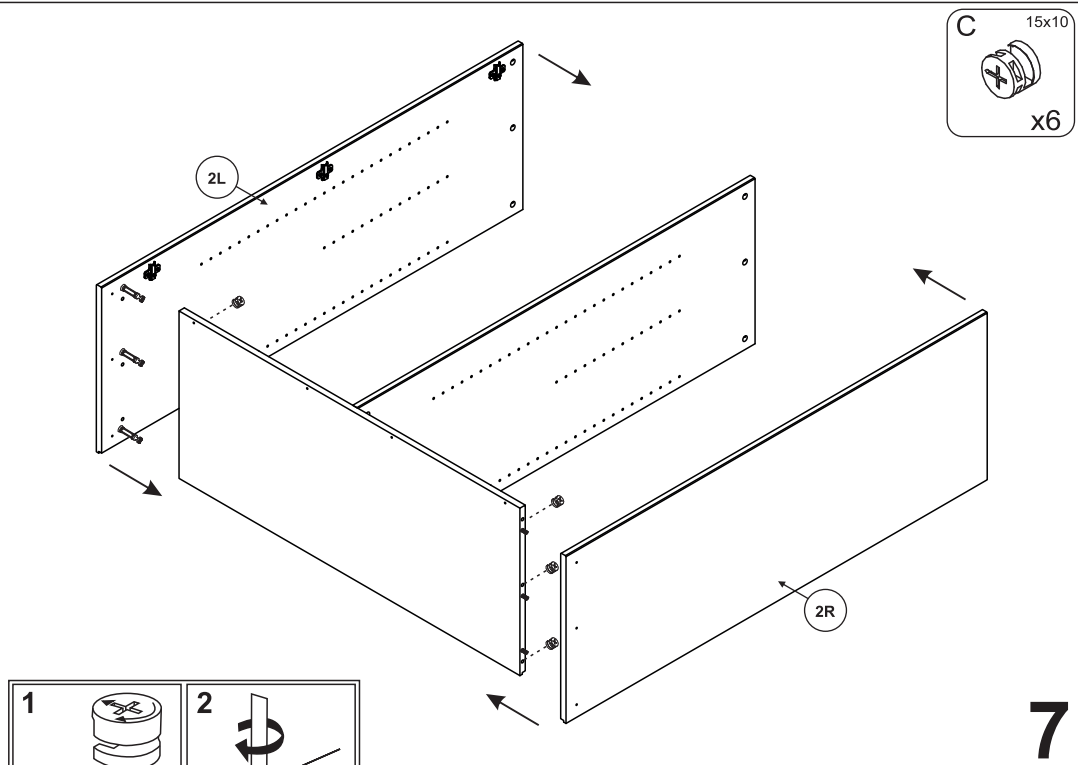    




11

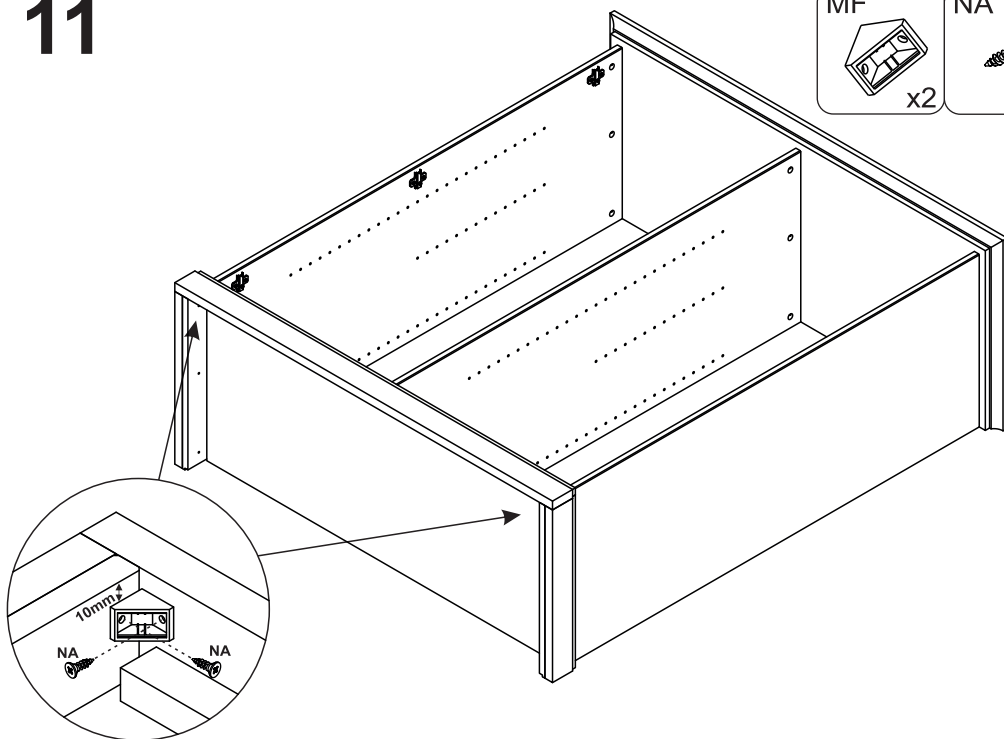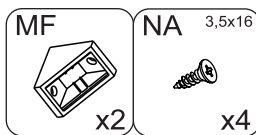  



13

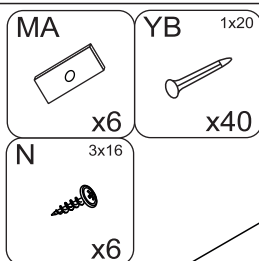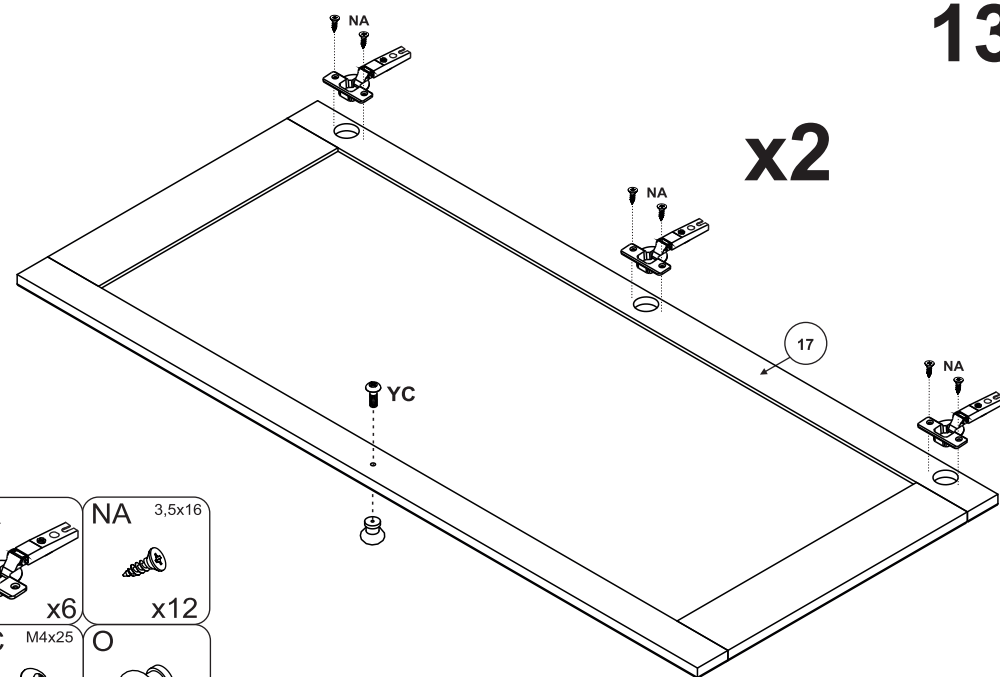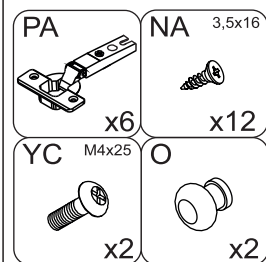   

12

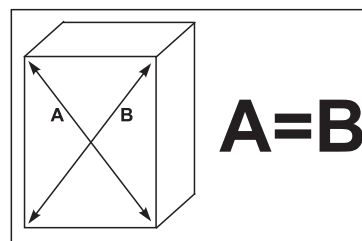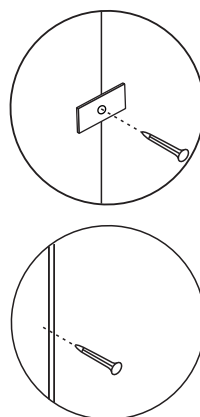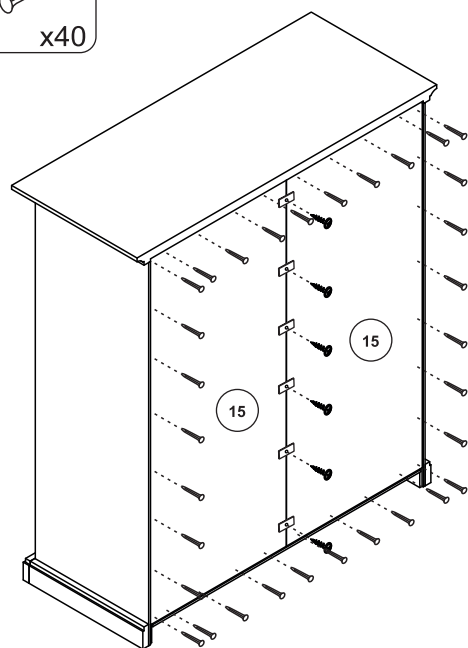   

14

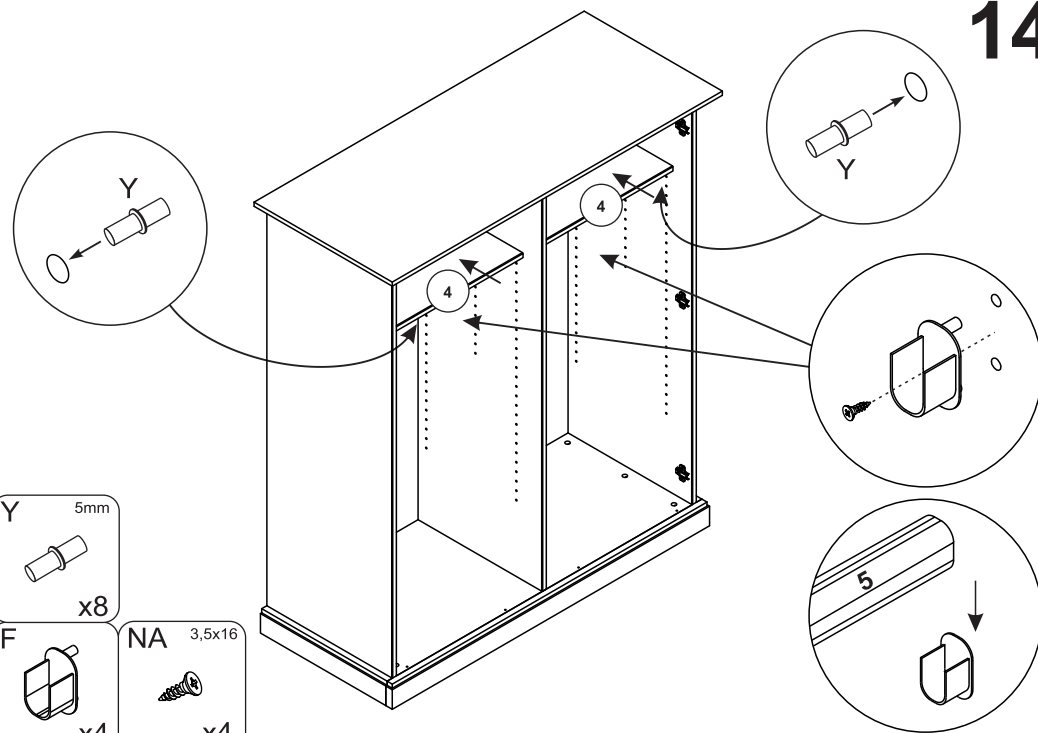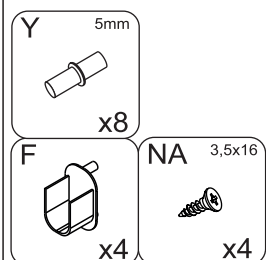  

15

