 
 
 
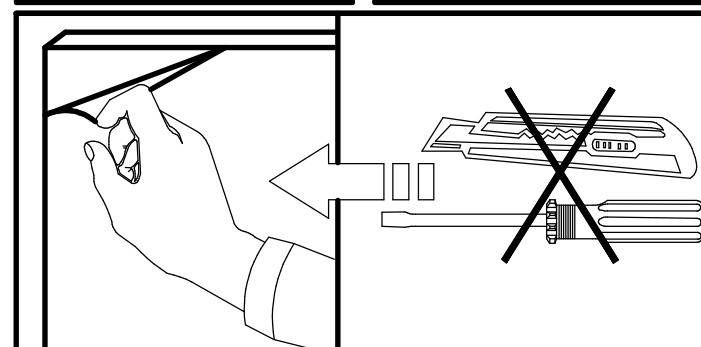 
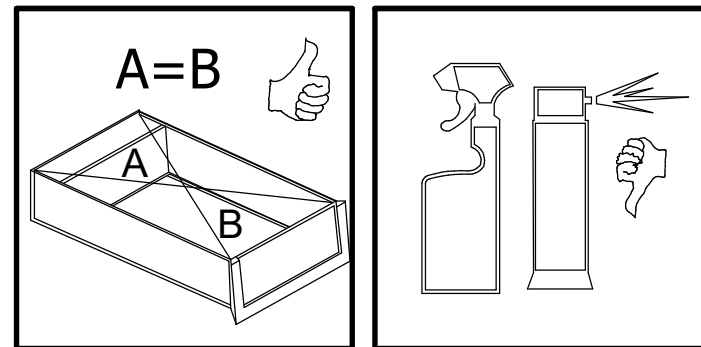 
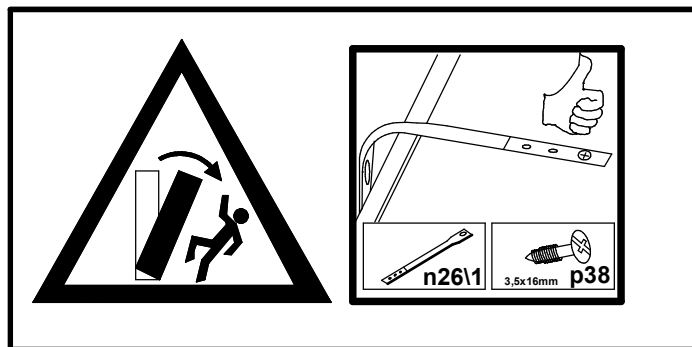 
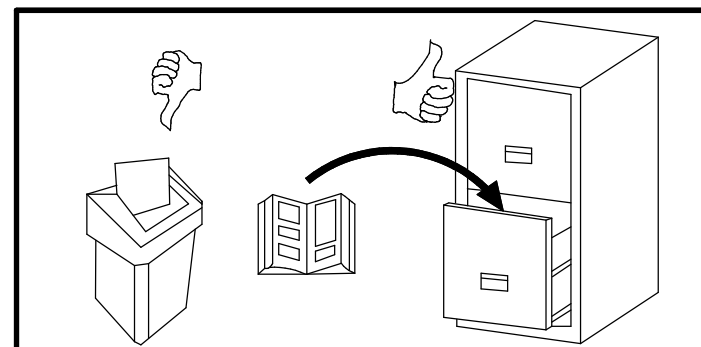 
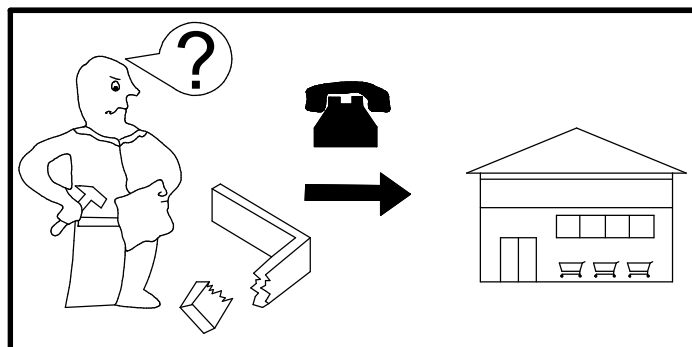 
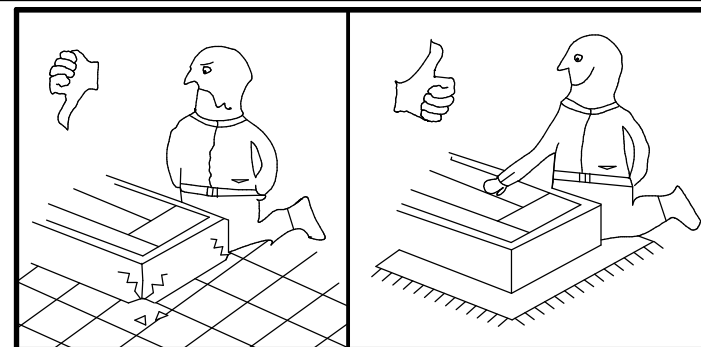 
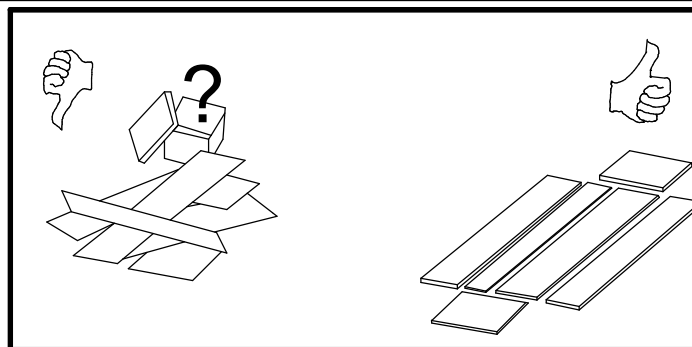 
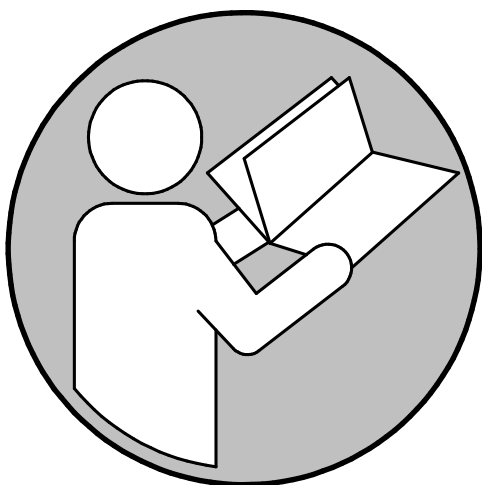 
 
 
 




- (D)** Montageanleitung
- (NL)** Handleiding voor de montage
- (TR)** Montaj talimatı
- (FR)** Instructions de montage
- (CZ)** Montážní návod
- (HU)** Összeszerelési útmutató
- (GB)** Assembly instructions
- (PL)** Instrukcja montażu
- (RU)** Инструкция по монтажу
- (IT)** Istruzioni di montaggio
- (RO)** Instructiuni de asamblare
- (SK)** Montážny návod













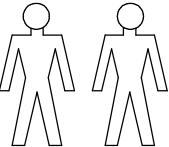

  
60 min

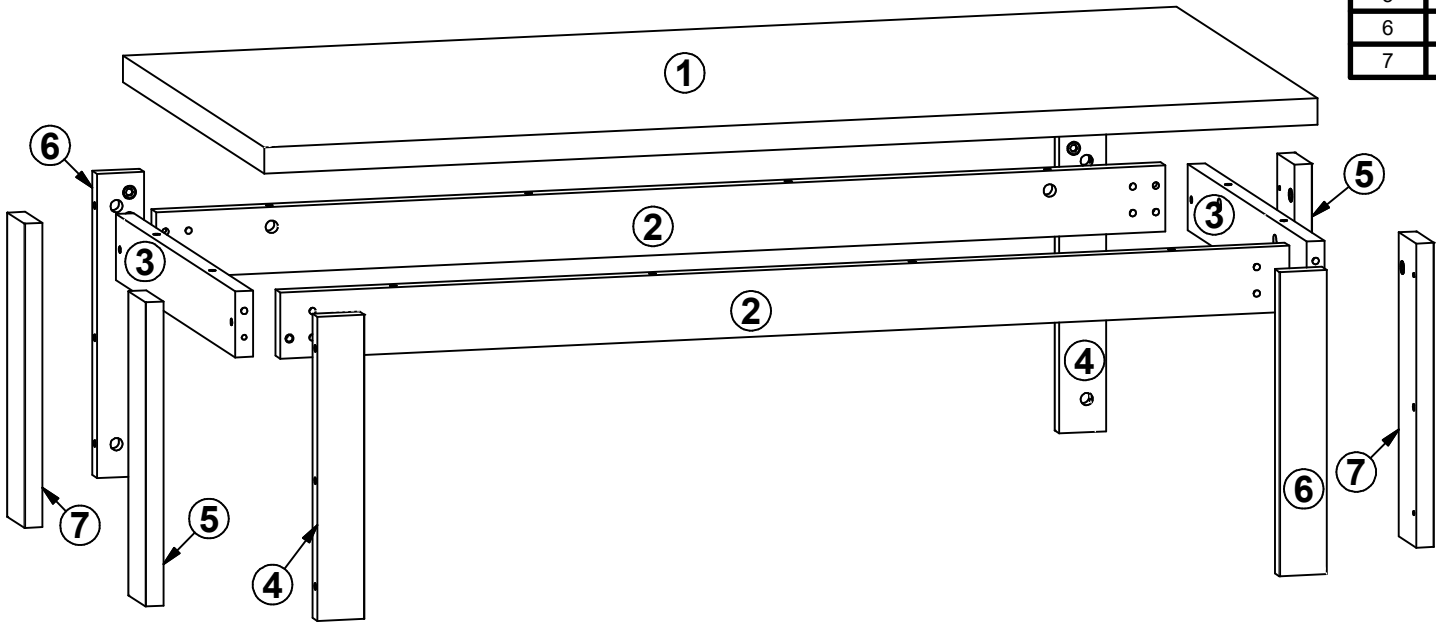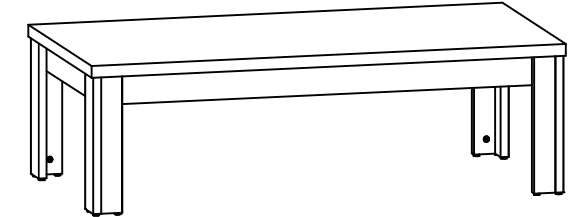




A	B	C (mm)		D
1	S214-209	1300	650	1/1
2	S214-406	1245	80	1/1
3	S214-407	549	80	1/1
4	S214-5528	368	58	1/1
5	S214-5529	368	80	1/1
6	S214-5530	368	58	1/1
7	S214-5531	368	80	1/1

        

1  

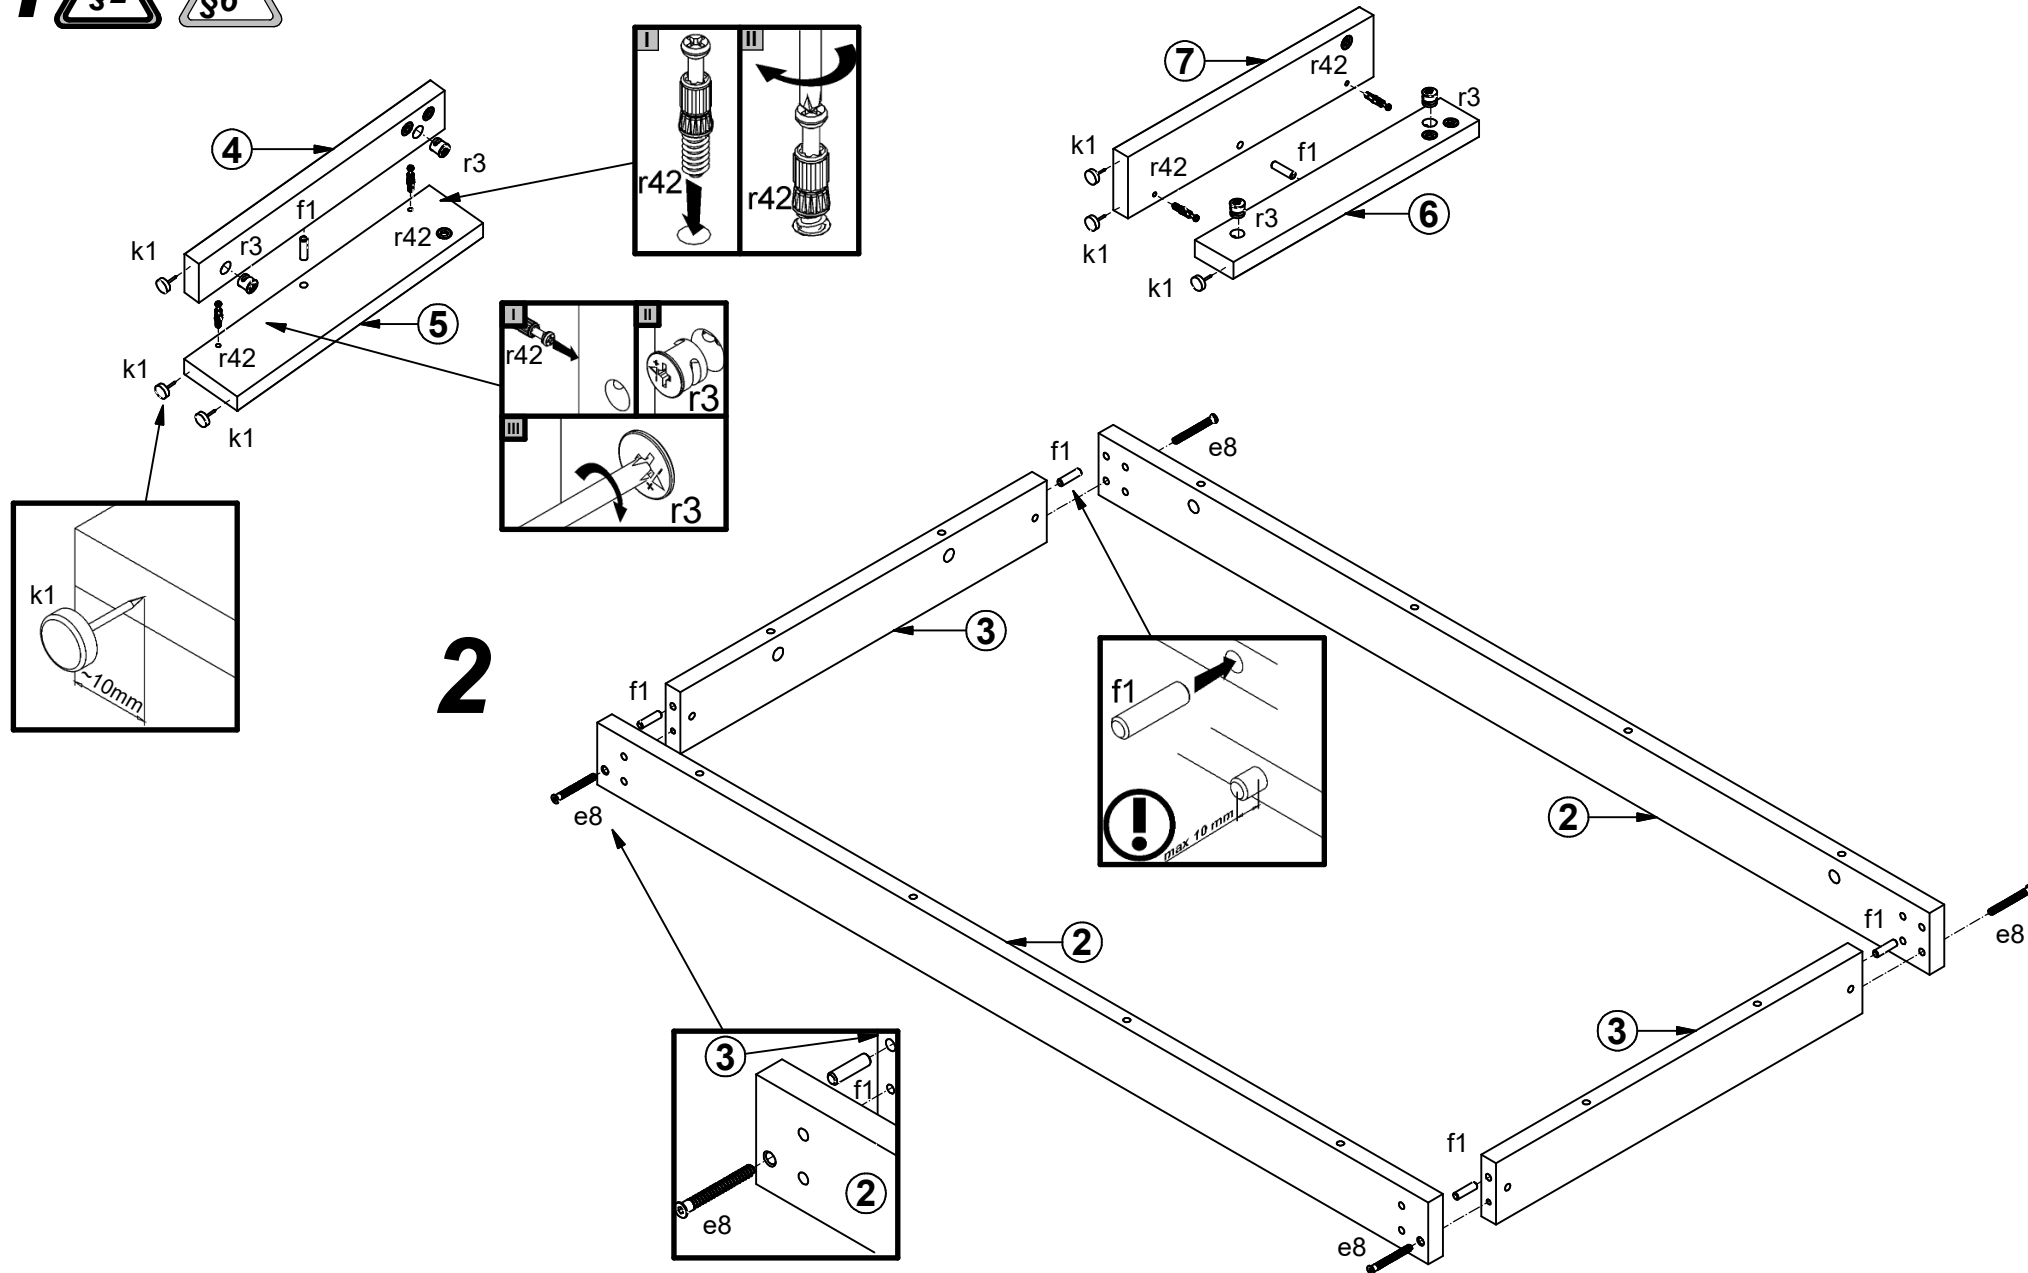 

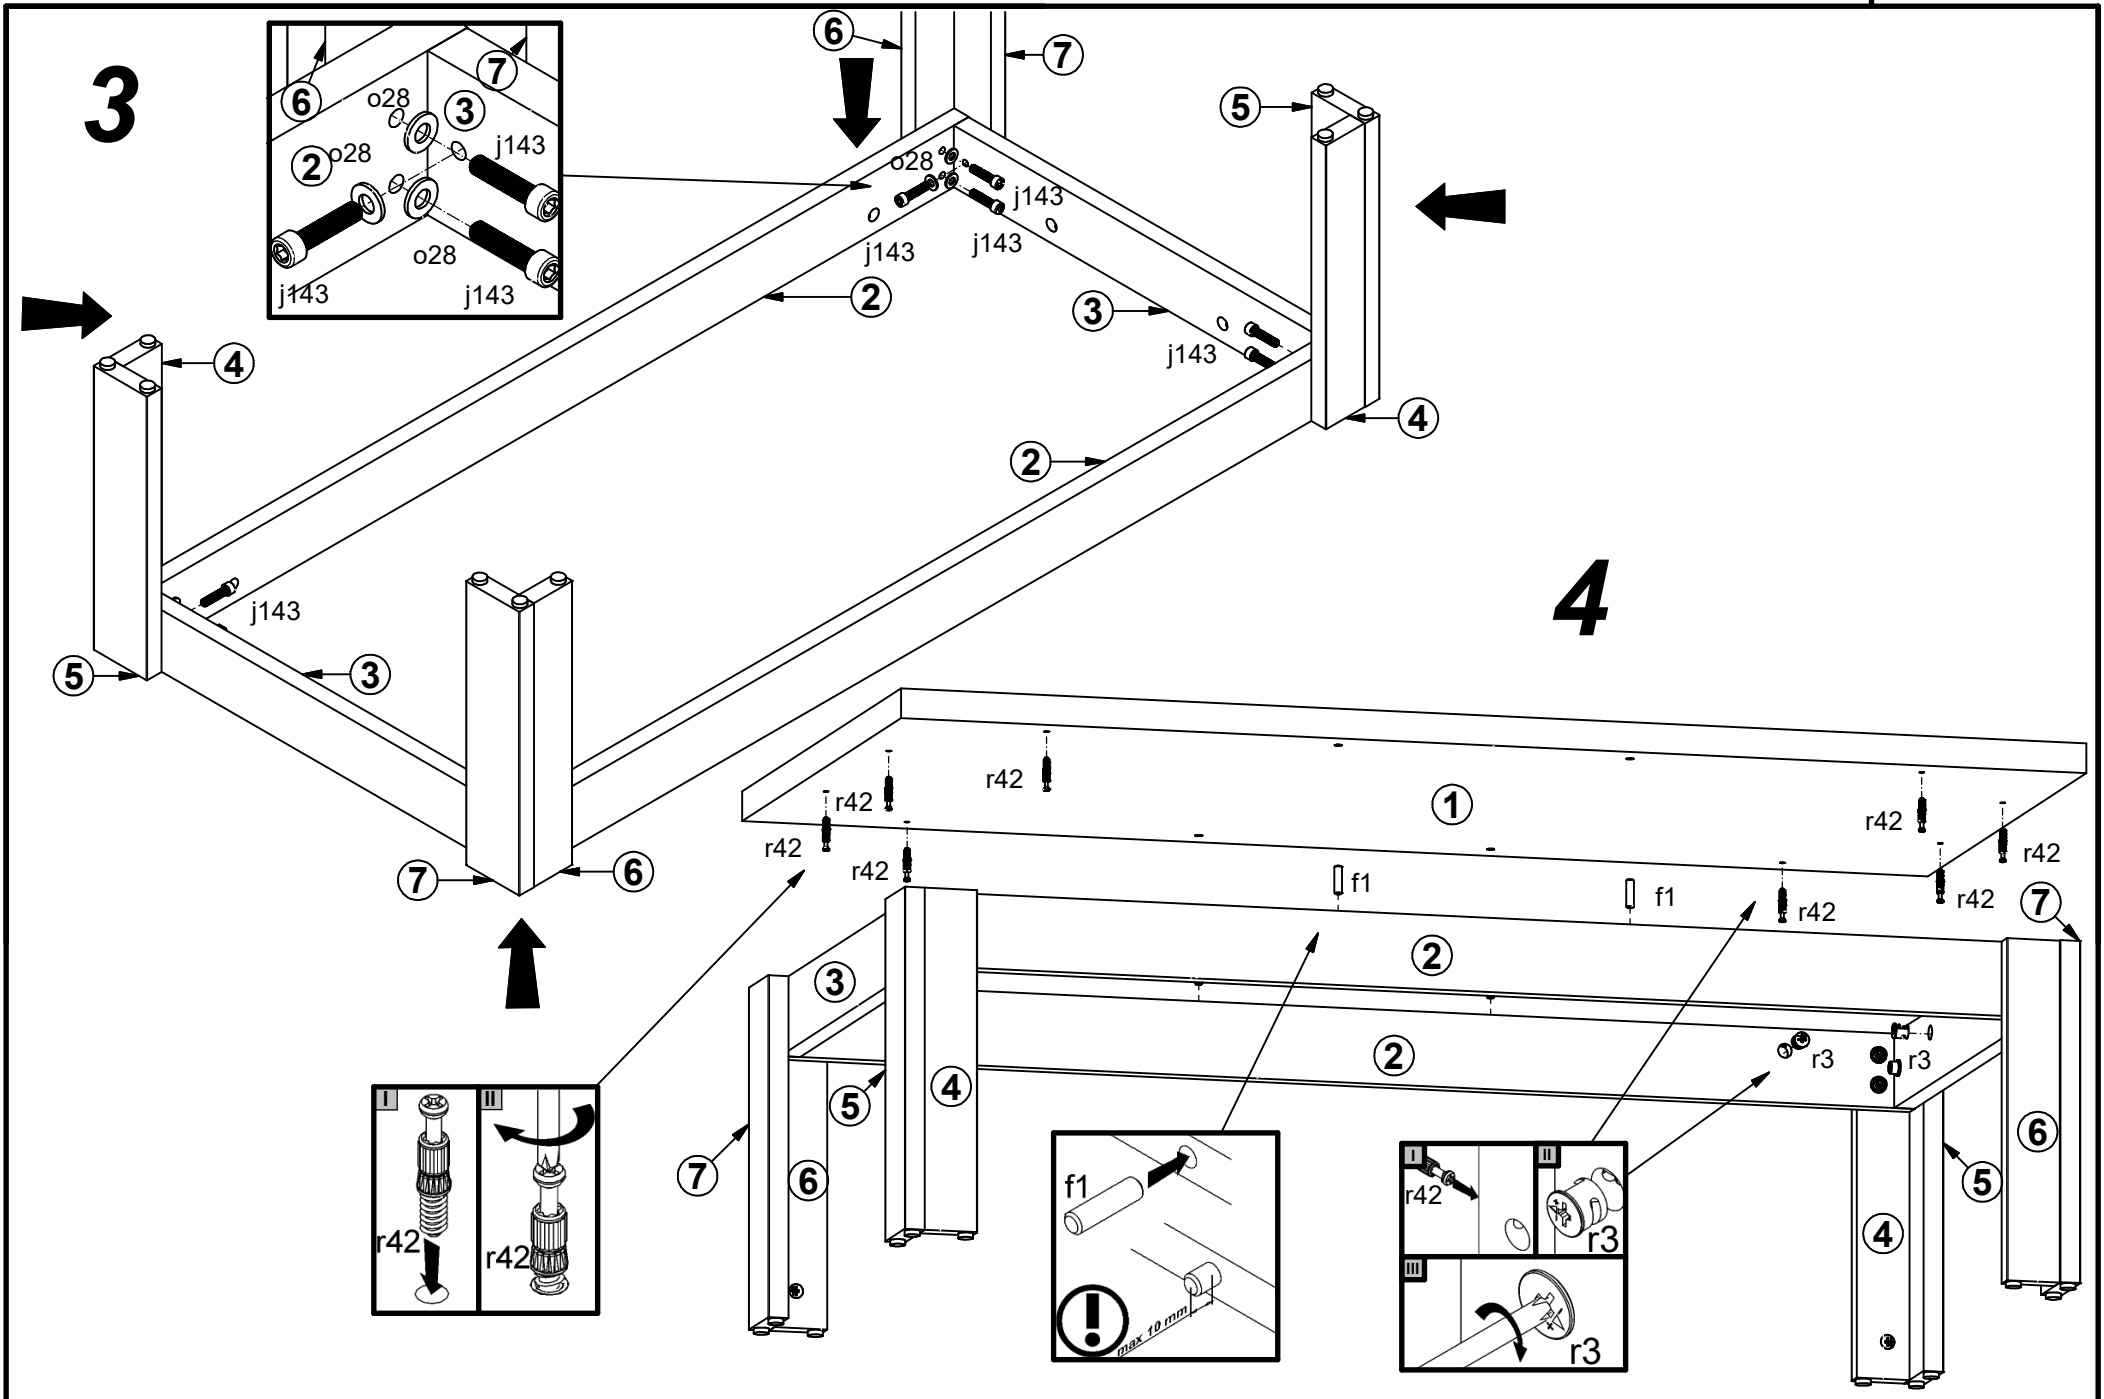 

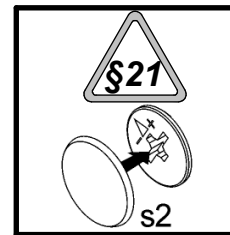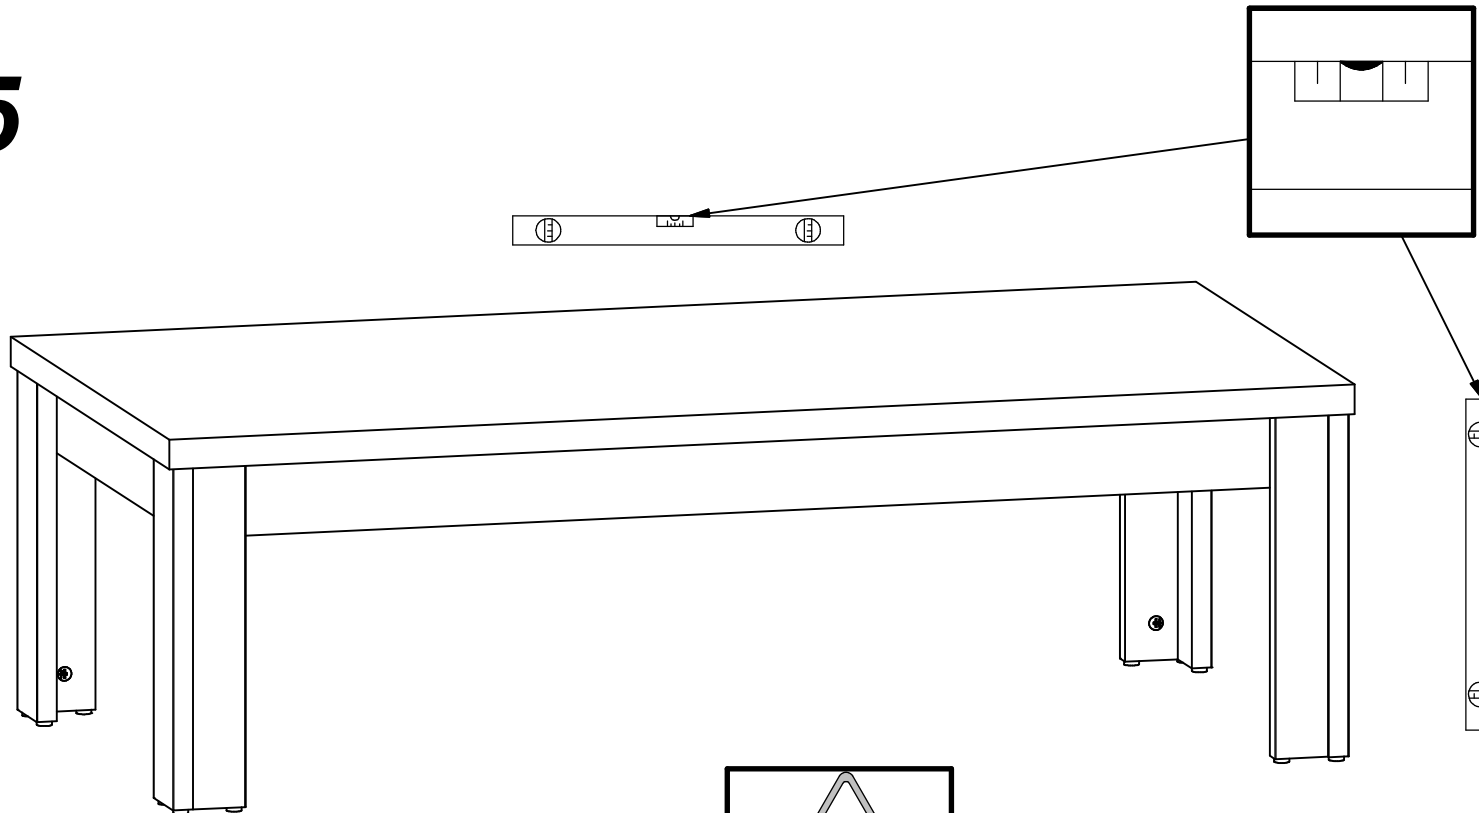  5**Pflegehinweis!**

Bitte nur mit einem Staubtuch
(kein Microfasertuch) oder
einem feuchten Lappen reinigen.
KEINE scheuernden Putzmittel
verwenden!

Wskazówka dotycząca pielęgnacji!

Proszę czyścić tylko suchą lub lekko
wilgotną szmatką do kurzu. Nie używać
żadnych środków szorstkich!