
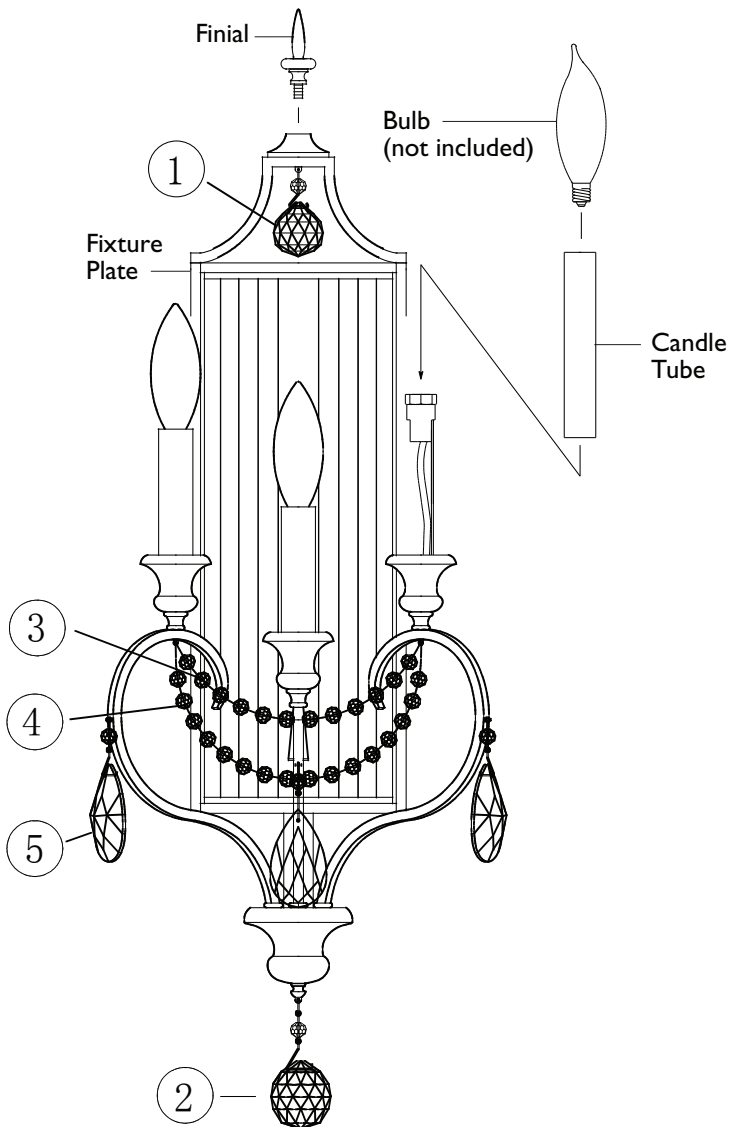


Assembly Instructions For

WB1448

CE 11/12

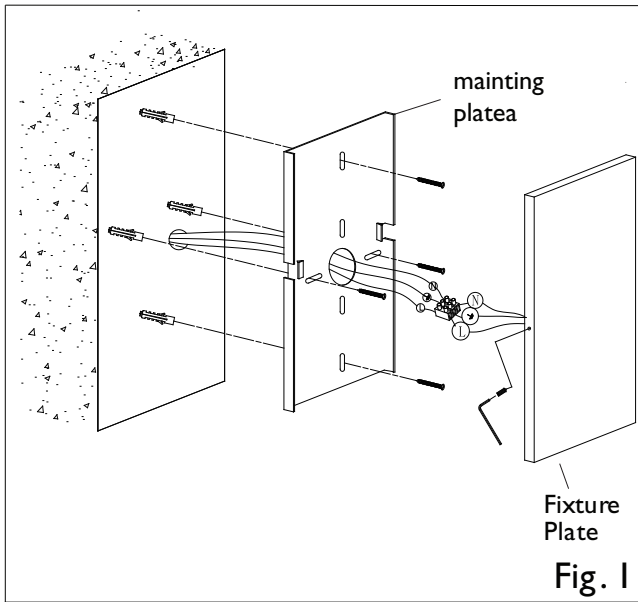

	1	2	3	4	5
			12 bead	16 bead	
Required	x1	x1	x1	x1	x3
Extra	1	1	1		1

Extra PIN Qty.	PIN PART	PIN DESCRIPTION
4		Small S Hook
4		Large S Hook
8		Small Bead Hook

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

- Install mounting plate (see fig. 1):
 - Take supply wires from wall and carefully pass them through center hole of mounting plate. Note: The flat surface of mounting plate must face the outlet box and the angled rim side facing toward you.
 - Install mounting plate onto the wall using two screws supplied
 - Spread electrical wires so that black wires are on one side of the outlet box and the white wires are on the other side.
- Connect electrical wires (see fig. 1): Follow enclosed supplement instructions for electrical and fixture installation onto house all.
- Install fixture plate. While carefully tucking all electrical wires inside of fixture plate, install the fixture plate onto the mounting plate by fastening with set screw. Use provided hex key to tighten.
- Install finial by screwing on top of fixture.
 - Install candle tube by slipping through sockets.
 - Install teandle bulb E14 ,of 60 Watt maximum bulbs (not included).
- Hang all crystal glass parts as shown on drawing.
NOTE: To replace broken crystal or pin, extras are included in hardware bag. Replace by gently bending open pin, remove broken crystal or pin, hook new one, then close back pin. Avoid bending pin into sharp angle.

FEISS®

EST. 1955

GENERATION
BRANDS™