

PXL Large Pet Stroller Wagon



Safety & Instruction Manual

www.wonderfold.com

WONDERFOLD®



Safety Instructions for Pet Stroller

Please Read Before Use

Safety precautions are provided to ensure the correct use of this product and to prevent harm or damage to you and others. They are classified as "Warnings" and "Cautions" based on the level of risk, with "Warnings" indicating more serious dangers. Please read all safety instructions carefully.

Warnings

- Do not use this carrier for children.
- · Always supervise your pet when using the stroller.
- Do not let your pet climb into the stroller unassisted.
- · Always use the included Pet Harness Latch, ensuring it is correctly adjusted and fitted to your pet's size.
- Always set the rear brake while loading and unloading pet.
- · Always set the rear brake when the stroller is stationary.
- Engage all clips and buckles. Set parking brakes on hills or inclines.
- Do not exceed the stroller weight limit: 330lbs. (150 kg)
- When using the stroller with multiple pets, ensure the combined weight limit of the pets does not exceed the stroller's weight limit.
- · Avoid hanging items or pressing down on the handlebar.
- · Lift the frame over bumps or curbs.
- · Always use with caution when the stroller is on uneven terrain or slopes.
- Do not use the stroller while running, jogging, or skating.
- Exercise caution near traffic and in crowded spaces.
- Keep fingers and body parts away from hinged joints when folding/unfolding.
- Keep pet clear when unfolding and folding the stroller.
- Keep the stroller away from strong heat sources and do not store in damp conditions.
- Do not disassemble or modify the stroller.
- Do not use it for any other purpose than the stroller's intended use.
- · Only manufacturer approved parts and accessories should be placed on the stroller.
- WonderFold is not liable for any damage caused by your pet.
- Regularly inspect all parts for proper function and damage. Contact hello@wonderfold.com for replacement parts.

Specifications

Dim	ensi	ons		

Unfolded: 46 in (L) x 29 in (W) x 43 in (H) **Folded:** 29 in (L) x 15 in (W) x 33.5 in (H)

Material

Frame: Iron Handle: Vegan Leather Tire: EVA Material: Polyester, PP, EPE Fibre

Weight

35 lbs. (16 kg)

Weight Capacity
330 lbs. (150 kg)

Contents

Parts Check List	3
Features	4
Assembly	
Unfolding the Stroller / Installing & Removing the Front Wheels	5
Installing the Rear Wheels and Brake Set	6
How to	
Use the Parking Brake / Adjust the Handlebar Height	7
Store the Top Mesh Window / Fold the Stroller	8
Cleaning & Warranty	9

Parts Check List









Please take the time to make sure that all parts are included. If any parts are missing or broken, or if you need assistance assembling your stroller, please contact us at hello@wonderfold.com





- Holds up to 330 lbs: Accommodates larger pets or multiple smaller pets, providing ample space and support.
- Zippered Front and Rear Entrance: Offers easy access for pets and doubles as a ramp for smooth entry and exit.
- Pet Harness Latches: Secures your pets safely in place, ensuring a comfortable and worry-free ride.

- Rear Brake System: Provides safety and control during your stroll, allowing you to stop the stroller with ease.
- Adjustable Faux Leather Handlebar: Customizable height and comfortable grip for a personalized strolling experience.
- Mesh Top with Optional Window: Provides ventilation and visibility for your pet and can be stored in a pocket when not in use.
- Front and Back Pockets: Convenient storage options for pet accessories and personal items.





Unfolding the Stroller

- 1. Unlock the side latch.
- 2. Stand on either side of the stroller, push smoothly outward to unfold the stroller.
- 3. Press down inside the middle of the stroller until you hear a click and the stroller is fully extended.







Installing & Removing the Front Wheels

- 1. Insert the front wheels into the front wheel housing until you hear a click. After attaching the front wheels, pull down on each wheel to confirm that they are securely locked.
- 2. To remove the front wheels, press the release button and detach the wheel from the leg.









Installing the Rear Wheels and Brake Set

- 1. Insert the wheel axle into the brake assembly. Pull the wheels to confirm that it is secure.
- 2. Insert the brake set into the rear wheel housing until you hear a click.
- 3. To remove the brake set, press the release button on each side of the bar and detach the brake set.
- 4. To release the rear wheels, press the release button in the center of the wheel and pull the wheel out.





Use the Parking Brake

- 1. Step down gently on the parking brake pedal to lock. To test and ensure the brake is engaged, try to push the stroller forward.
- 2. Lift the parking brake pedal upwards with your foot to release it.





Adjust the Handlebar Height

- 1. Press the adjustable handle button on both sides simultaneously.
- 2. While the buttons are pressed, position the handle up or down to desired height.





Use the Pet Ramps

- 1. Engage the parking brake and completely unzip the front or rear wall.
- 2. Lower the ramp onto the ground. Rear ramp shown in figure 3.









Store the Mesh Top Window

- 1. Completely unzip the mesh top window and roll it towards the pocket.
- 2. Store the mesh top window in the pocket and use the Velcro to secure.





Fold the Stroller

- 1. Lift up the flap in the center of the baseboard.
- 2. Pull the tab up to start folding the stroller.
- 3. Keep pulling the tab until stroller is completely folded.
- 4. Secure the side latch to lock the stroller in folded position.











Remove the Carriage Fabric

- 1. Underneath the wagon, release the straps by feeding them through the slit in the metal clip.
- 2. Undo the Velcro straps on all four bottom corners of the frame.
- 3. Locate the strap at one corner of the wagon and feed it back through the black rings.
- 4. Pull the strap out through the frame. Repeat this for all top corners.
- 5. Lift the carriage fabric up to remove it.













Storing the Pet Stroller

- Do not store in places with high temperature or humidity.
- · Store indoors out of direct sunlight.
- · Store in a dry place with low humidity.
- · Do not store near fire.
- · Keep out of reach of children.
- Do not store this product with objects placed on top of it when it is folded. Doing so may cause damage or deformation.

Cleaning

- · Spot clean fabric and air dry.
 - · Fabric may fade with sunlight.
- Clean with a damp cloth; avoid abrasives, bleach, and silicone lubricants.
- · After rain, wipe and dry completely before storing.
- For deep cleaning, use diluted detergent, then wipe and air dry in a shaded area.
- · Avoid thinner, benzene, or alcohol on metal or plastic.

Warranty

One Year Limited Warranty

WonderFold warrants this product to be free from defects in material or workmanship for a period of one year from the date of purchase when used by the original owner according to the manufacturer's instructions. The warranty does not apply to damage caused by product alteration, or customer/user misuse or abuse of the product. Your sales receipt is your only record of the date of purchase. Warranty is subject to change at any time at the manufacturer's sole discretion. Please refer to wonderfold.com/pages/warranty for the latest version of the manufacturer warranty. Please contact WonderFold if you have any warranty questions or if you need replacement parts.

WONDERFO/D° pet

5796 Martin Rd Irwindale, CA 91706 hello@wonderfold.com 1 (888) 681-1526



