

Suspended Chain Fixture Installation Instructions

2008


CE

11/12

IMPORTANT:

-TURN OFF POWER AT MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION.
-RECOMMEND THIS PRODUCT BE INSTALLED BY A QUALIFIED ELECTRICIAN TO REDUCE RISK OF FIRE AND ELECTRICAL SHOCK.

1. Use plastic bolt and provided wooden screw to install the bracket onto the ceiling surface.
2. Fasten another hex nut onto bottom end of threaded pipe. Bring up 5/8" from bottom end of pipe to bottom side of hex nut. Then fasten screw collar into same end of pipe and lock into position by tightening hex nut.
3. Take one adjustable chain link, twist open the locking tube, and then hook onto fixture loop and onto one end of chain. Close back the locking tube.
4. At this point decide how much chain to use, including one additional adjustable chain link at top end, so the fixture hangs at desired height. Spread open the chain link you have decided to remove and discard unused links.
5. Slide collar ring and then canopy down the chain.
6. Take another adjustable chain link, twist open the locking tube, and then hook onto top end of chain. Then grab onto chain firmly lift fixture and hook the same adjustable chain link onto screw collar which has been mounted onto ceiling. Close back the locking tube of adjustable chain link.
7. Cut any excess fixture wires and ground wire leaving only about 8" length from top end of threaded pipe. Take fixture wires and tie a knot above threaded pipe. Then split fixture wires and strip off 3/4" of plastic insulation from each end.
8. Fixture wires connection: Please refer to installation instruction for wire connection

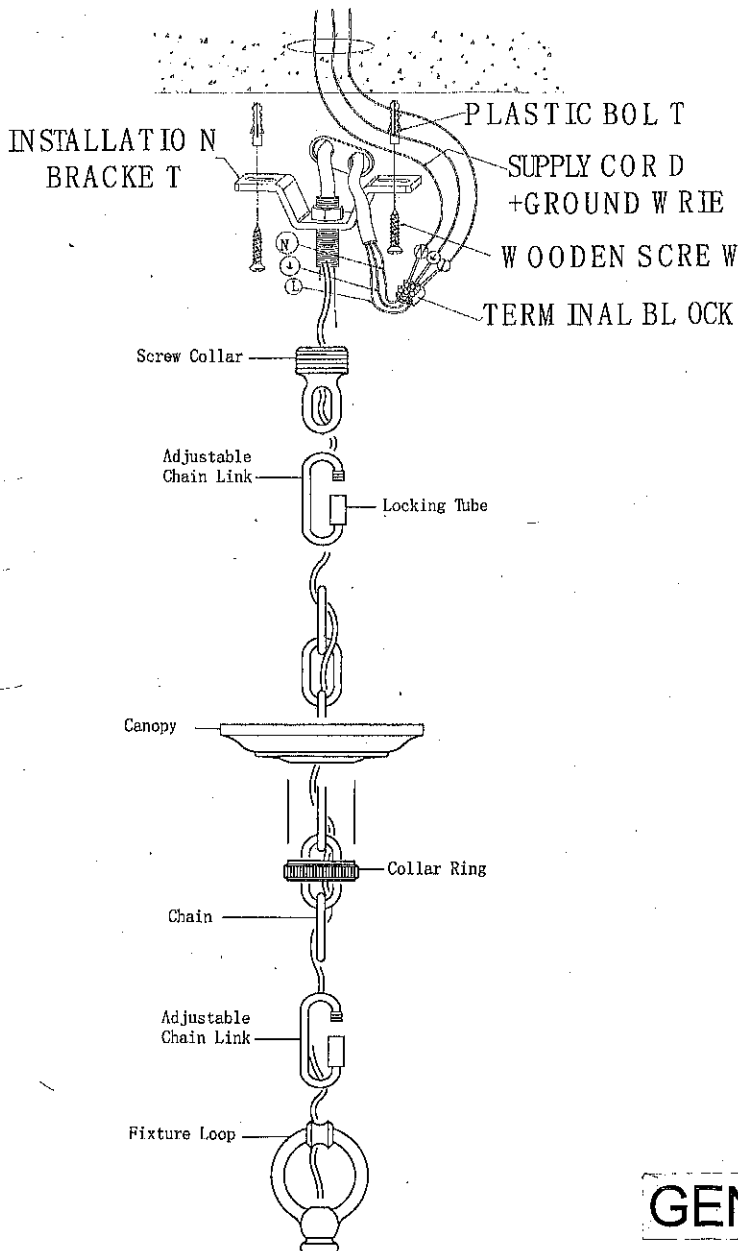


GENERATION BRANDS

GENERATION BRANDS 

GENERATION BRANDS

 1A

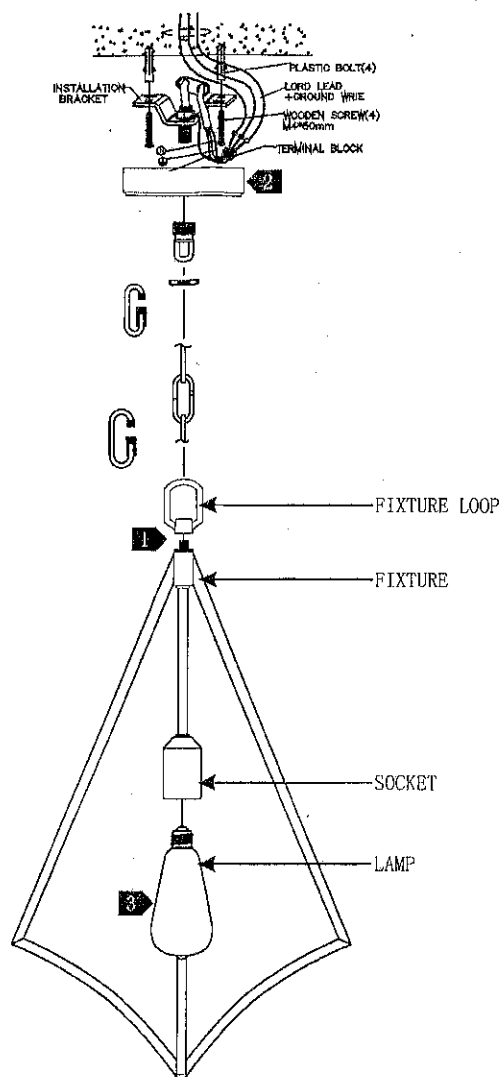

- 1 Follow enclosed supplement installation instructions for electrical and fixture installation onto ceiling.
- 2 Adjust the link with chain with desired length.
- 3 Screw the lamp into the socket. Refer to the label on the lamp socket for Max Wattage information.