

GIO-170

 
innoglo

GIOstar Octopus

Children night projector

Product Information

Item Name: GIOstar Octopus – Children night projector
Item No: GIO-170
Rated Voltage: 5 V ~
Rated Current: 1 A
Rated Power: 4.1 W
Material: ABS+PC+PVC+Silicone aluminum tube
+Electronic components
Battery Capacity: 1200 mAh
Accessory: Type-C USB Cable
Item Size: 91 x 98 x 206 mm

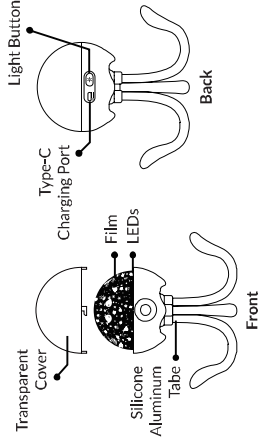

Product Features

- 1.This product is a colorful and captivating night projector.
- 2.This product can adopt a variety of shapes and be used in different ways.

How to change the light modes

Light Button


1st Press	Cold white light
2nd Press	Blue light
3rd Press	Warm yellow light
4th Press	Flickering mode
5th Press	Three color mixed light
6th Press	Three color gradient
7th Press	Turn off light

Stepless dimming: Press and hold for two seconds to enter stepless dimming, and the light brightness will increase from the initial brightness to 100%. Release the button, press and hold for two seconds again, and the light will reduce from 100% to 30%. The light has a memory function (it memorizes the most recent brightness level). Stepless dimming cannot be used in the flickering mode and the three color gradient mode.


Instructions for use

1. The product is powered with a 5V ~ 1A charger. Do not use an adapter with power over 5V ~ 2A to charge or power the product (the product is only equipped with a USB cable without an adapter)
2. Fully charge the product before using it. A red light flashes during charging. The red light stays on when the product is fully charged. It takes about 2.5 hours to fully charge the product. The charging time must not exceed 8 hours, otherwise the battery can be damaged and the product life shortened.
3. Depending on the selected mode of operation, a fully charged product can be used for 1.5-24 hours.
4. How to use the product:


- Press and hold the transparent cover and twist it counter clockwise to dismantle it from the main body; then take out the film from the transparent cover:

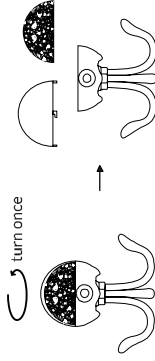


- Put the desired film into the transparent cover, align it with the buckle position device of the transparent cover, press and hold the transparent cover, and twist it clockwise to attach it to the main body.

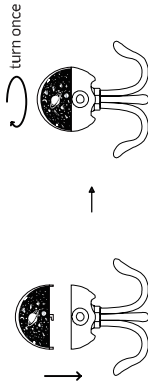

- 5. Hold the hose and twist the head counter clockwise to remove it; as shown in the pictures below:

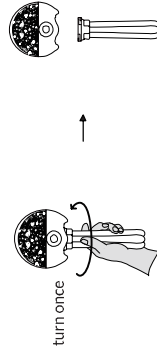

- 6. This product can be placed in various shapes, depending on your needs, as shown in the below pictures:

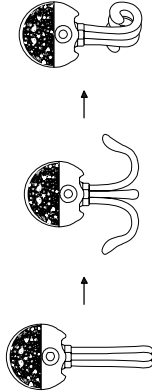

Warning

1. Check the voltage of this product and its compatibility before use.
2. Do not expose the product to direct sunlight, and do not use in settings with water mist, humidity, dirt, high temperatures, etc.
3. The product must not be placed into or close to a fire source to avoid any fire and explosion hazards.
4. Children under the age of 6 years old should not handle the product.
5. When assembling the transparent cover, attention should be paid to whether the cover is screwed in place to avoid failures of fastening and the cover falling off.
6. The light source in the night projector should be replaced by the manufacturer or other agent or person with similar qualifications.
7. The battery should be disposed of safely. The obsolete battery should not be discarded with general waste and instead it should be placed in a special battery recycling bin.



innoglo

Importer: INNOGIO sp. z o.o.
Ostrodzka street 74H, 03-289 Warsaw, Poland
www.innoglo.com



@innoglo.official



@innoglo_com