


INSTALLATION INSTRUCTIONS (FOR FIXTURES OVER 25 LBS. --Canada Only)

Please use the information outlined in this sheet for the ceiling installation part of your fixture assembly.

FIGURE1

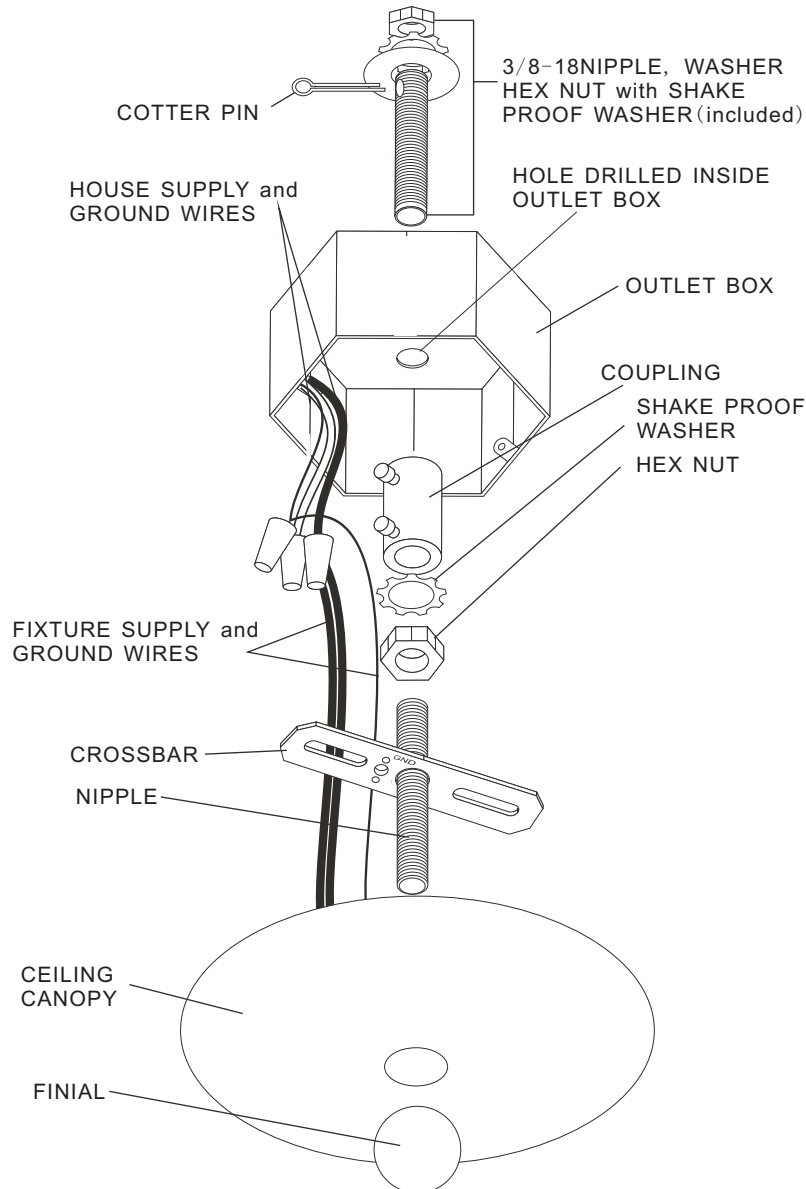

Quoizel recommends a licensed electrician or contractor be consulted for this installation.

1. Before installing fixture, carefully unpack and identify all parts referring to illustration FIGURE1. Be sure the power to the installation point is OFF.
2. **The weight of this fixture will require a means of support independent of the OUTLET BOX. This fixture must be supported by 3/8-18 NPSM NIPPLE (supplied) The NIPPLE should be positioned so that 3/4" protrudes into the OUTLET BOX cavity. *Note: the opposite end of the NIPPLE must be attached to a structural or bridging member of sufficient strength to support the fixture weight.*** A COTTER PIN has been included and should be installed into the top of 3/8-18 NPSM NIPPLE, above HEX NUT for added safety. A clearance hole must be drilled on the inside top center of the OUTLET BOX. Please refer to Figure 2, page 3 for detailed illustration. We recommend the consultation of a licensed electrician or contractor due to the complexity of this installation.
3. With the 3/8-18 NPSM NIPPLE properly situated, locate COUPLING and proceed to thread onto the end of the NIPPLE protruding into the OUTLET BOX. Thread COUPLING onto pipe until tight. Tighten the top SET SCREW with pliers to secure COUPLING to NIPPLE. Locate the NIPPLE and thread HEX NUT onto top end. Pass SHAKE PROOF WASHER over top end. Thread top end of NIPPLE into the COUPLING. Using pliers, snug HEX NUT up against the COUPLING. Tighten lower SET SCREW with pliers to secure the NIPPLE. Proceed to thread CROSSBAR and secure it onto OUTLET BOX by (2) OUTLET BOX SCREWS (not supplied).
4. Turn back to STEP 5, PAGE 1 for rest installations.

FIGURE2: CRAWL SPACE/ ATTIC CUT-AWAY

