 
 
 


*There are 2 cables at the output end of the DC24V, namely:
The brown cable is for the positive end, which should be connected with the rosy cable.
The blue one is for the negative end, which should be connected with the black cable.*

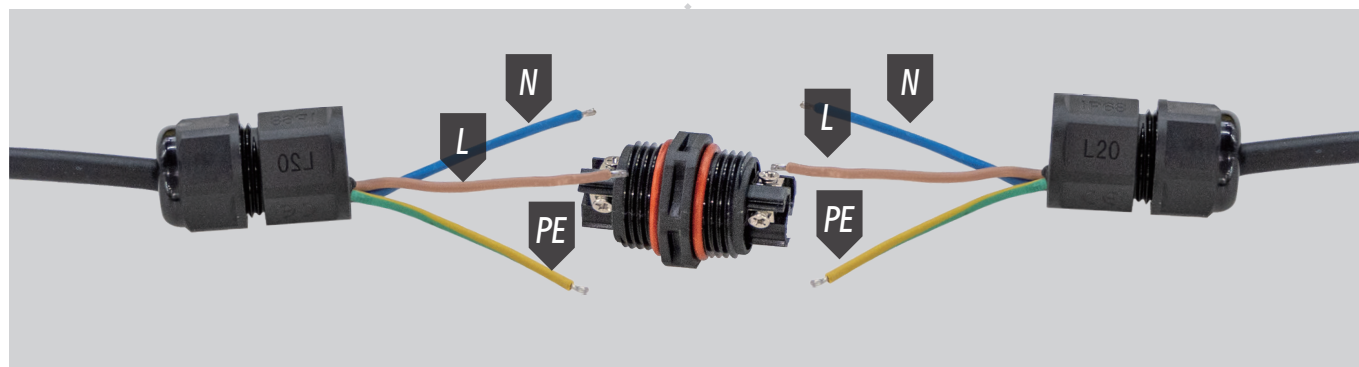

*There are 3 cables at the input end of the power, namely:
Orange: Live Cable
Blue: Netural Cable
Yellow & Green: PE Cable.*

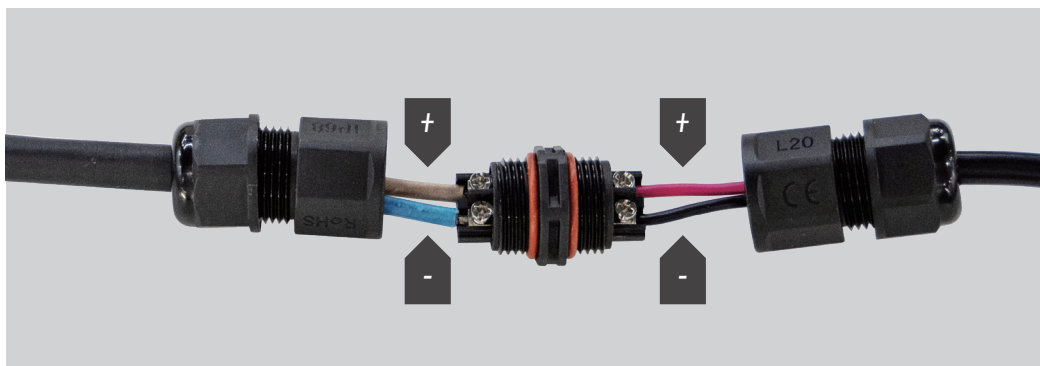

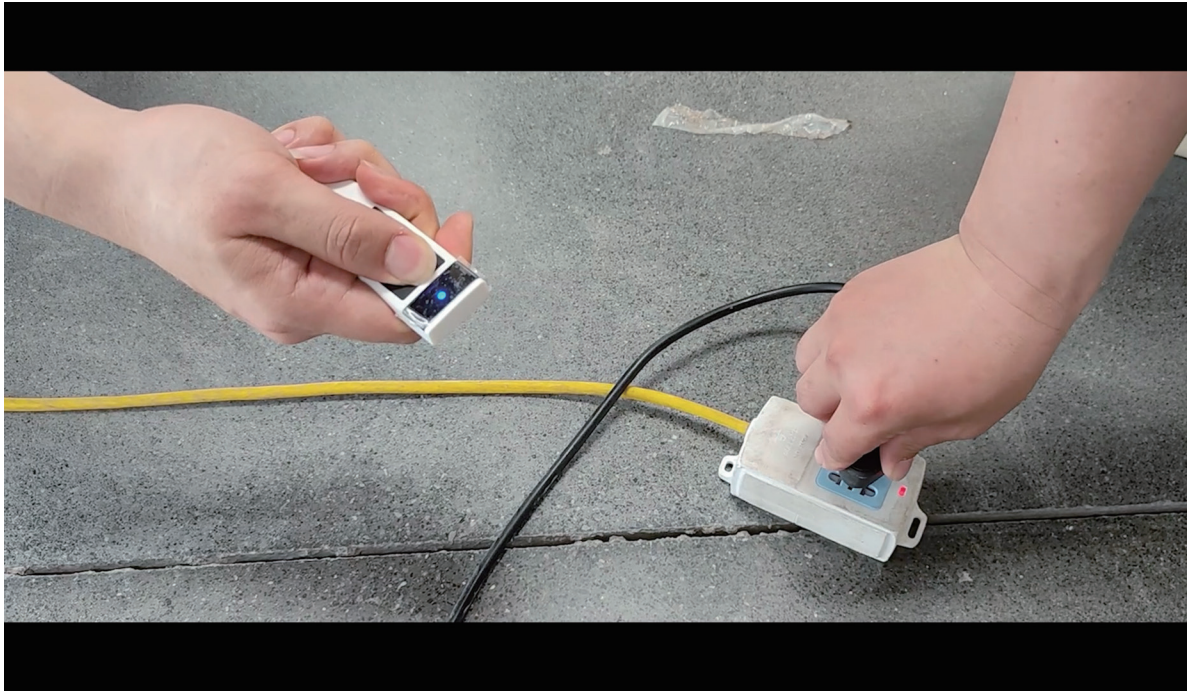

1. Press the UP Button on the remote, hold this button for 3-5 seconds until the indicator becomes solid



2. Plug in the power while press the UP button, when a slight vibration appears on the main lovuer, it means the remote and motor are paired.