 



















ASSEMBLY INSTRUCTION

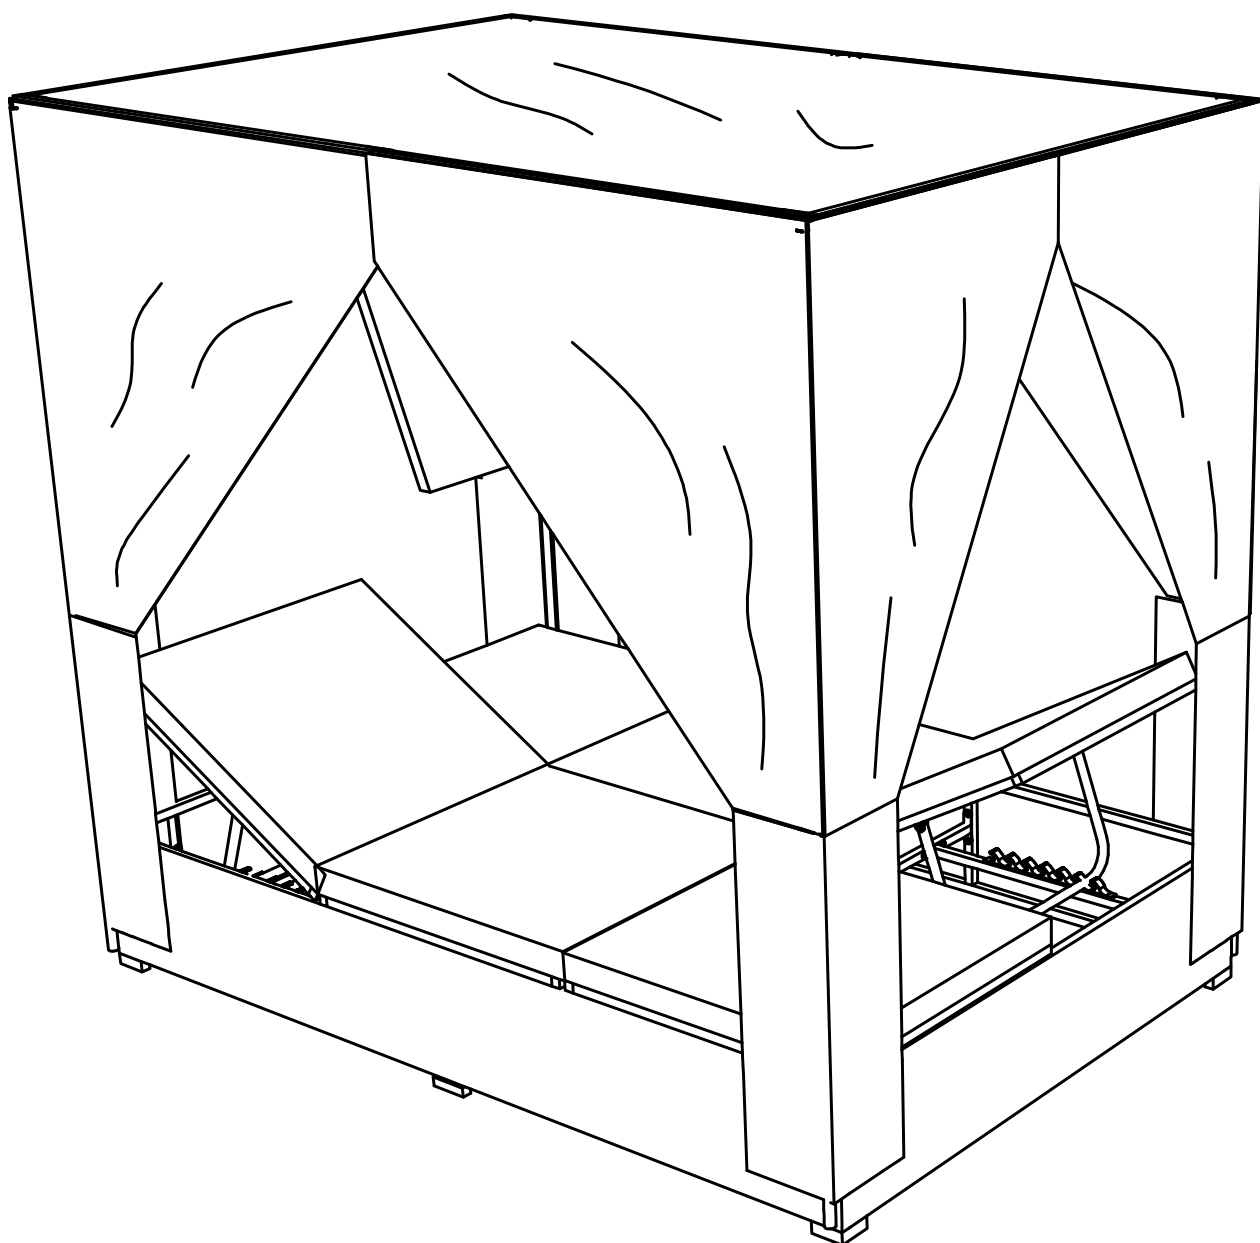



Article no: 20140135/01

Artikel No: 20140135/01

                 
PART LIST

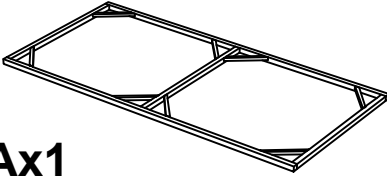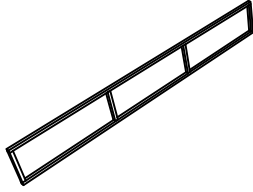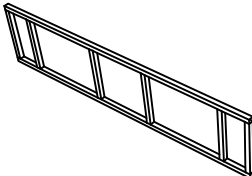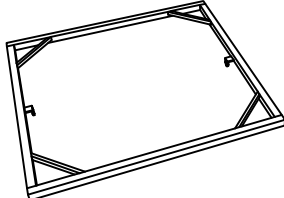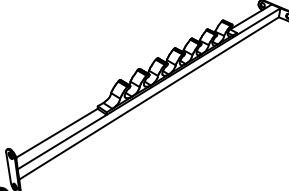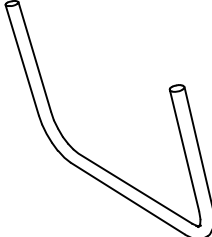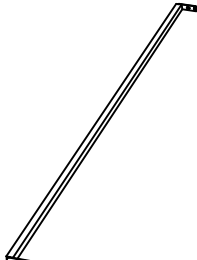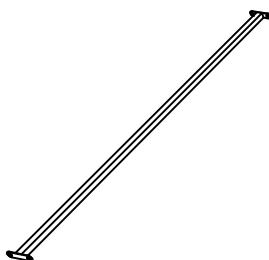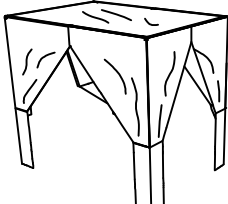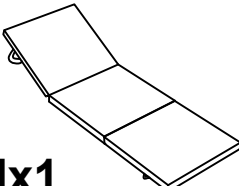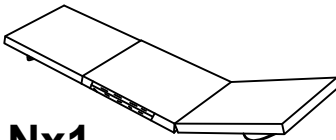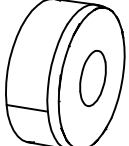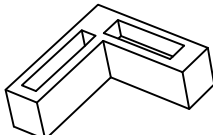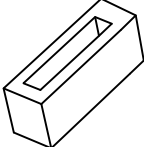 Ax1	 Bx2	 Cx2		
 Dx4	 Ex2	 Fx8		
 Gx4	 Hx4	 Ix2		
 Jx2	 Kx1	 Lx1		
 Mx1	 Nx1	 1- Bulon 6x40 : 20	 2- Bulon 6x30 : 28	
 3- Bulon 6x15 :60	 4- Capnut : 16	 5- Plastic Washer:24	 6- Plastic Washer:8	
 7- Washer :116	 8-Allen key :2	 9- Key : 1	 10- Square bass : 4	 11- Straight bass: 2

  
Step 1

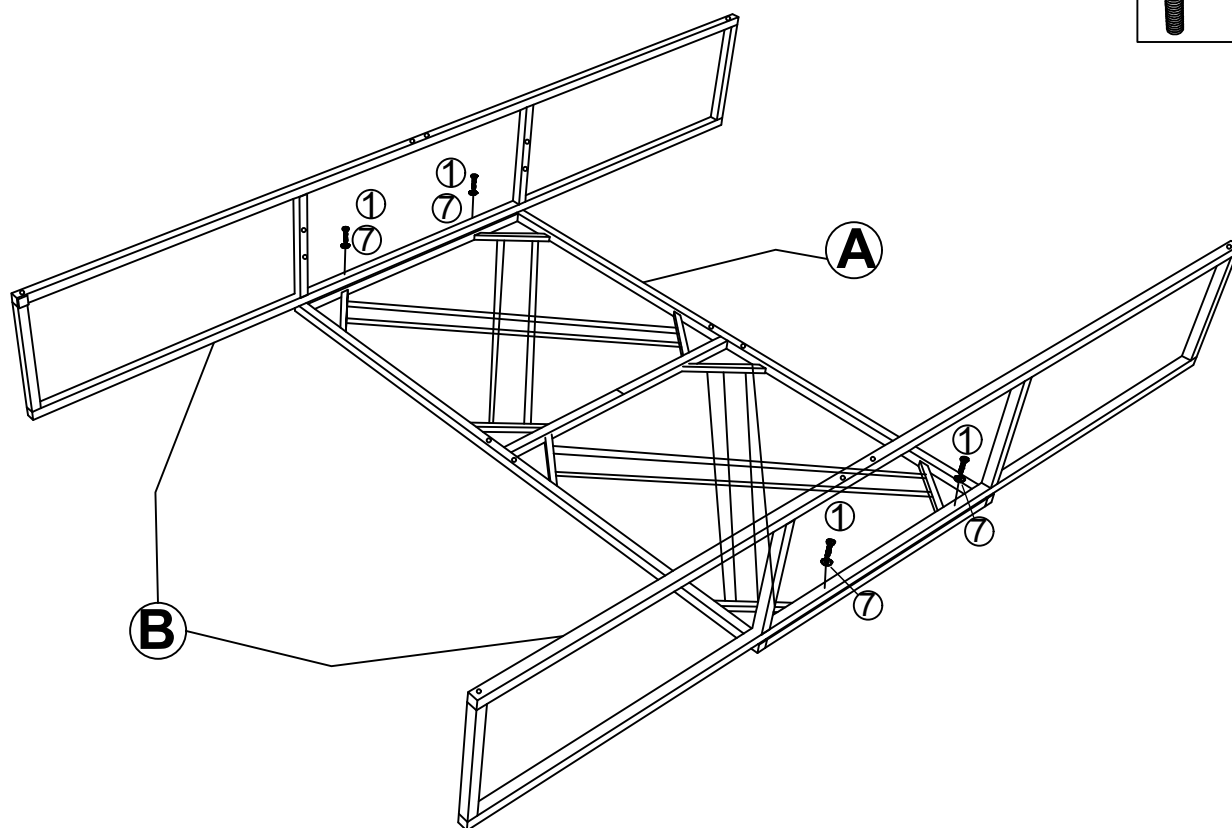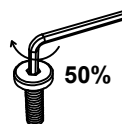

 
Step 2

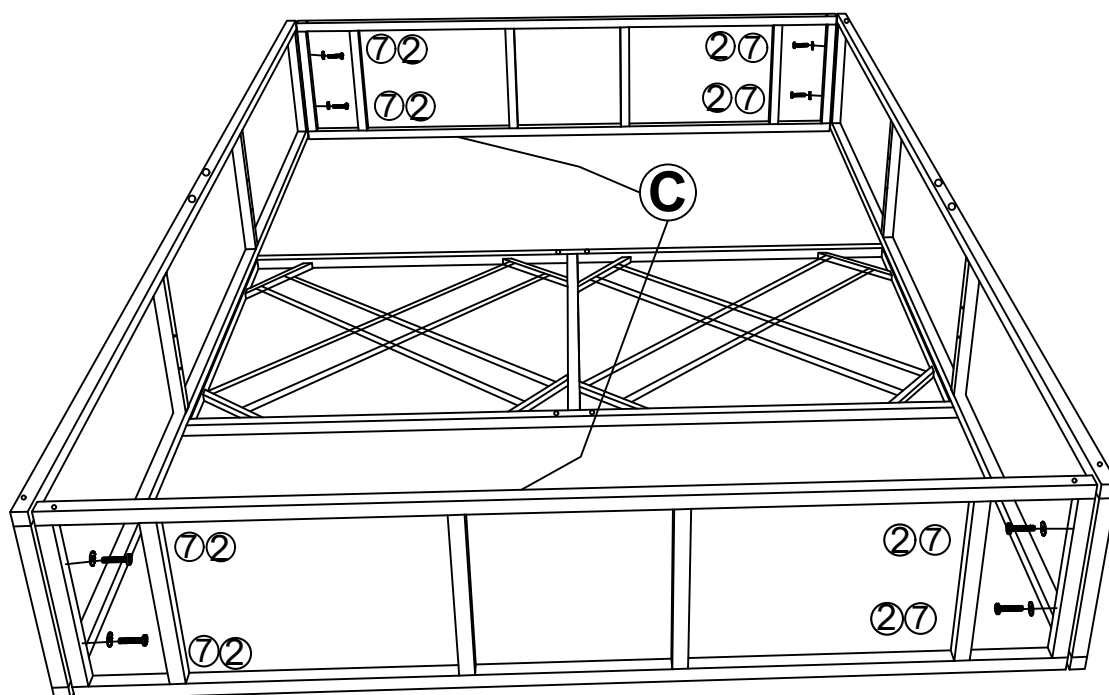

 
Step 3

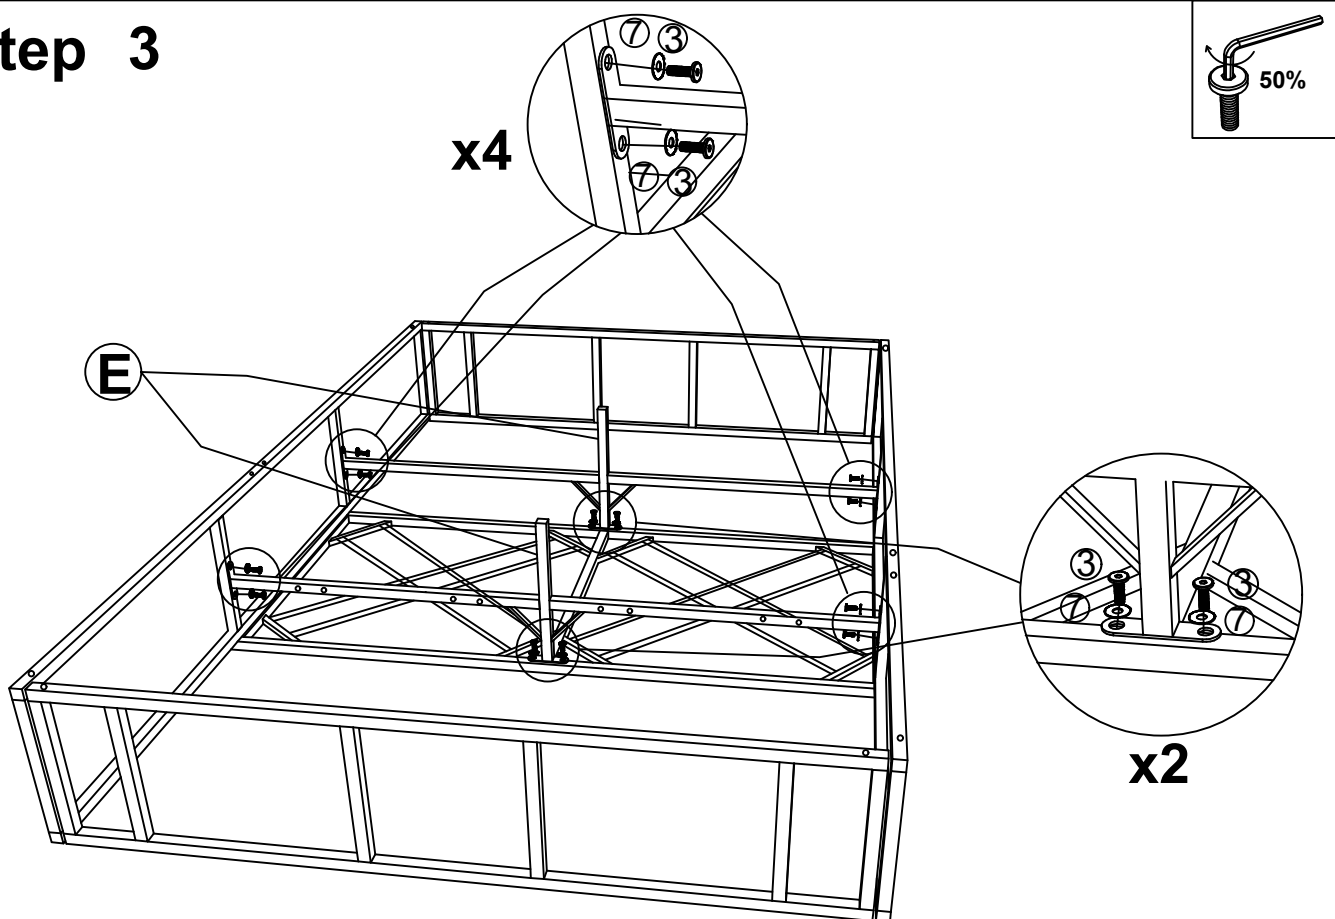

 
Step 4

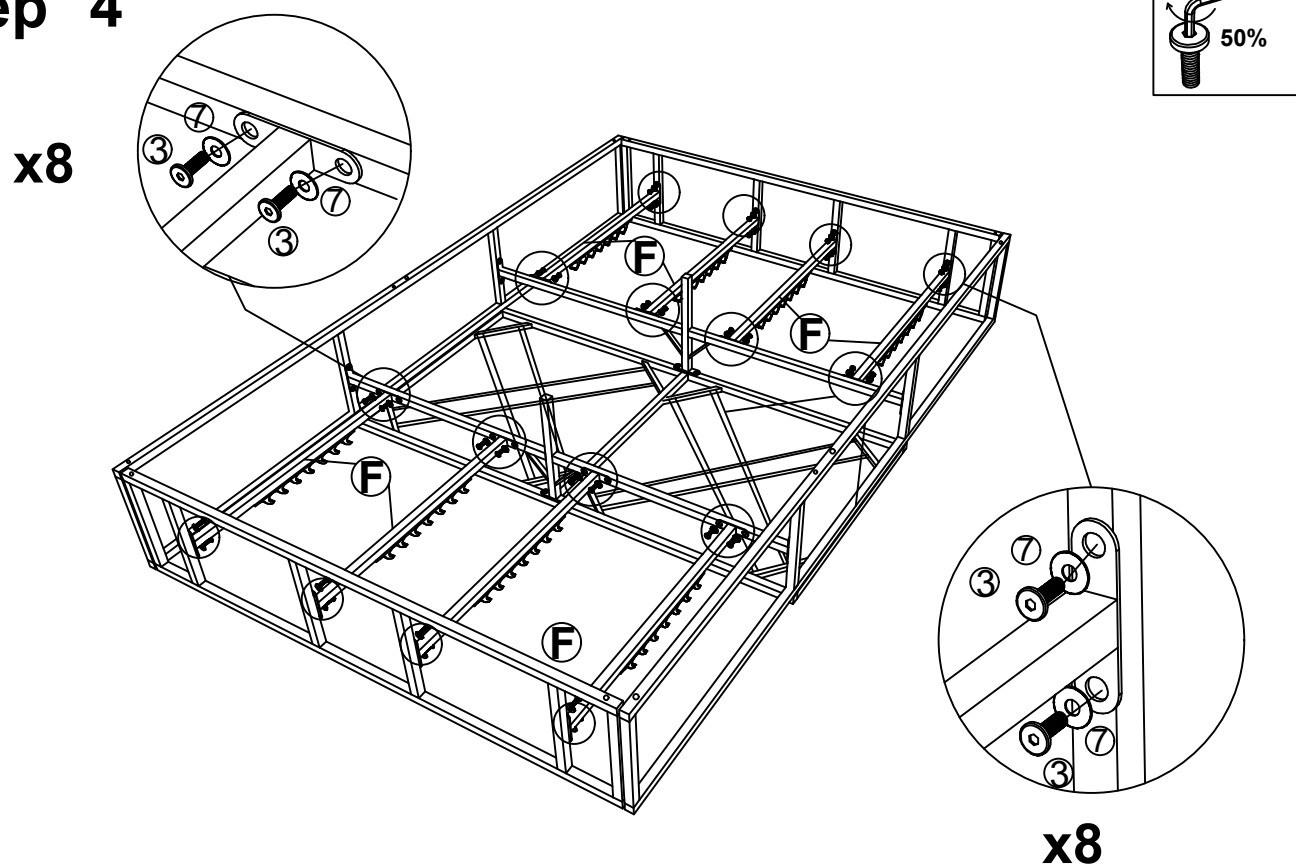


 
Step 5

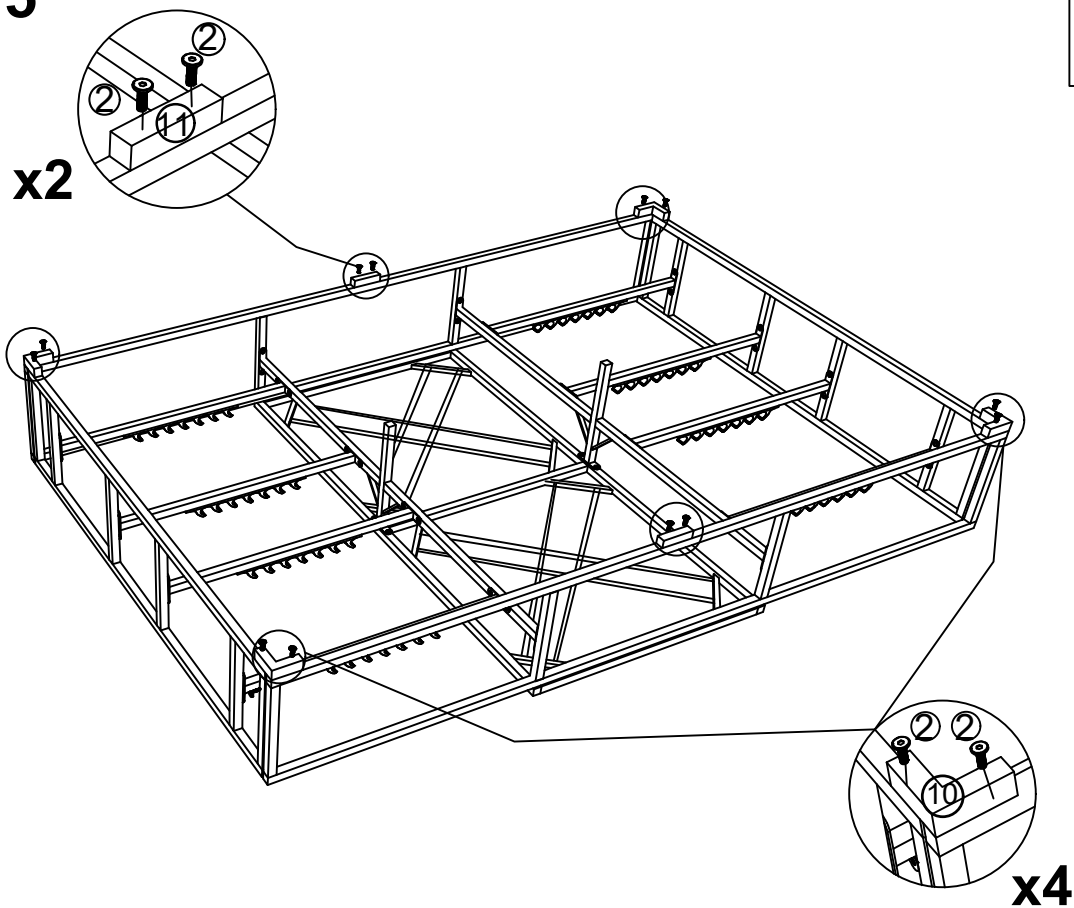


 
Step 6

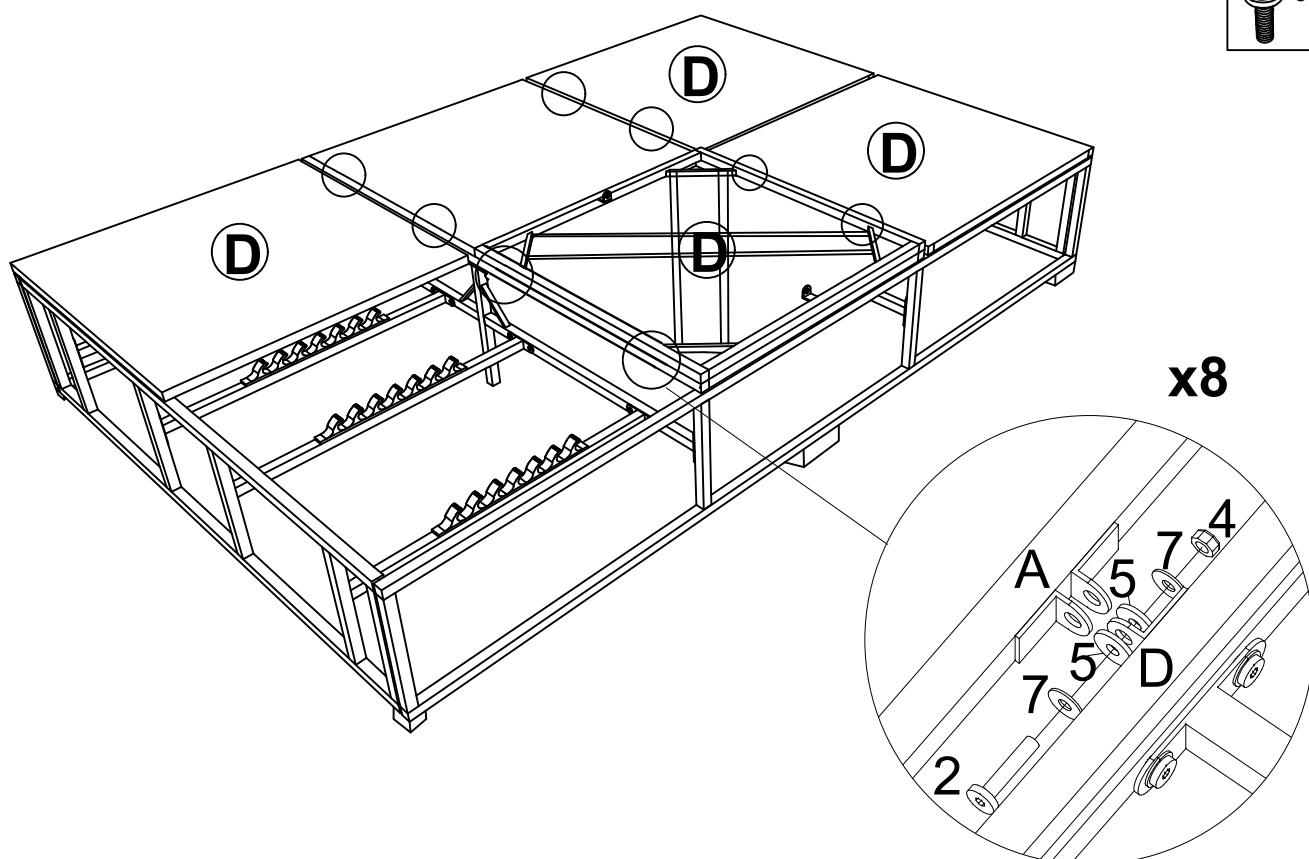

  Step 7

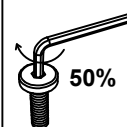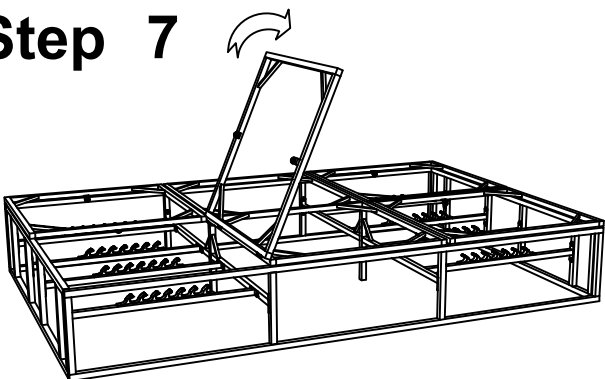


G

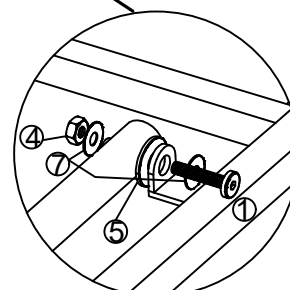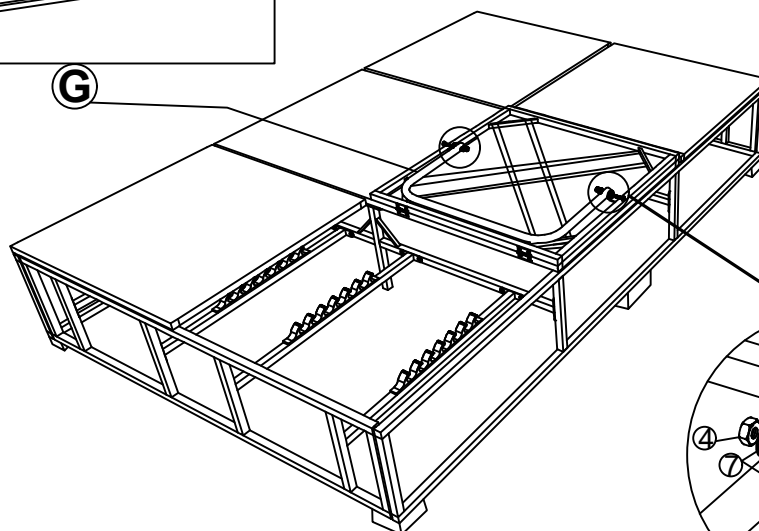  


x8

 
Step 8

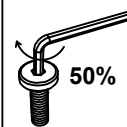


H

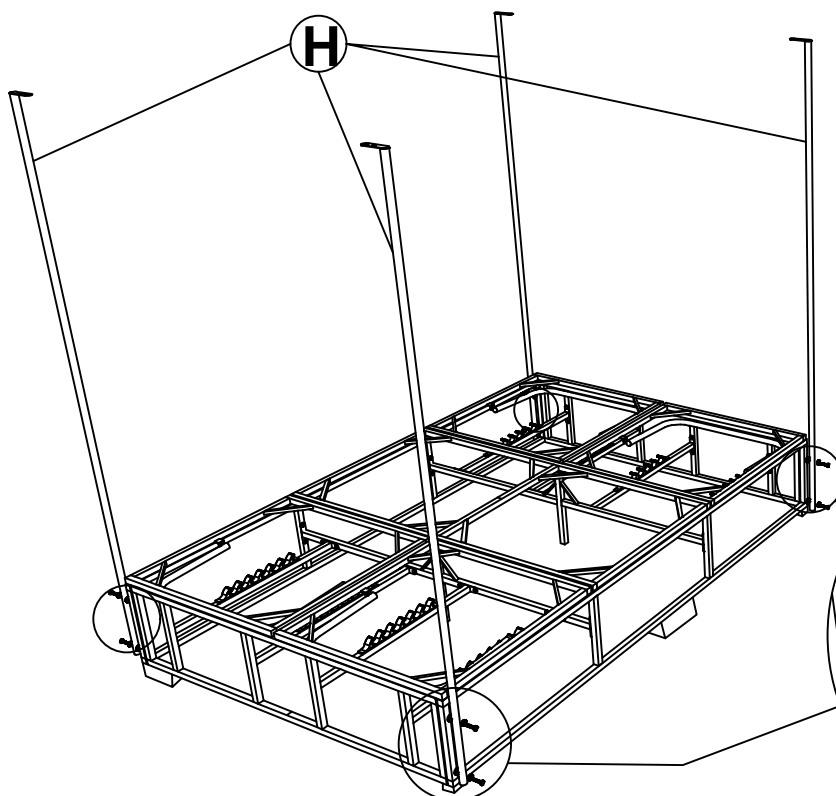 


x4

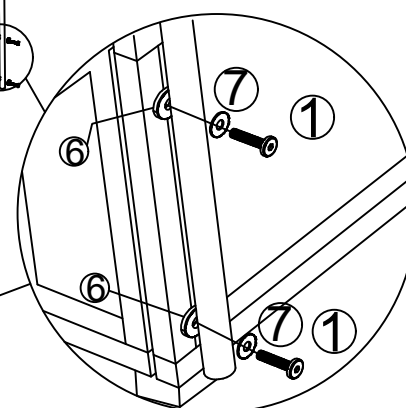 

 
Step 9

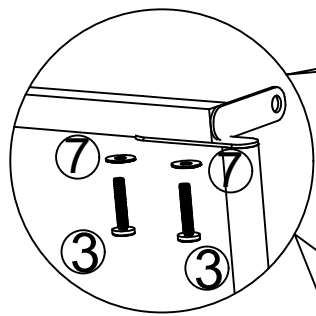


x4

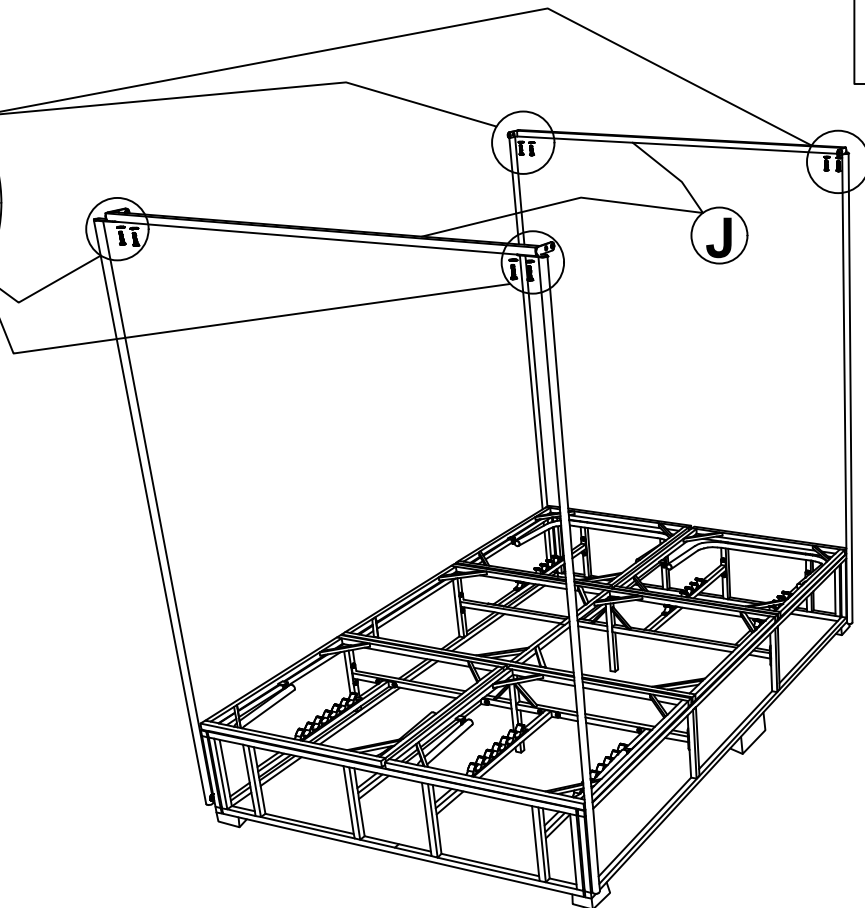 

 
Step 10

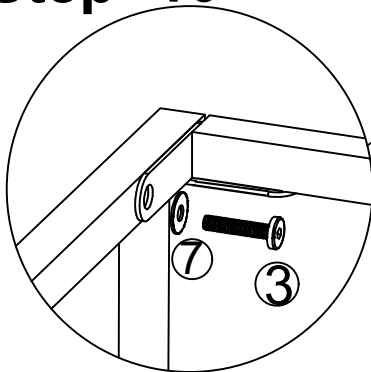



x4

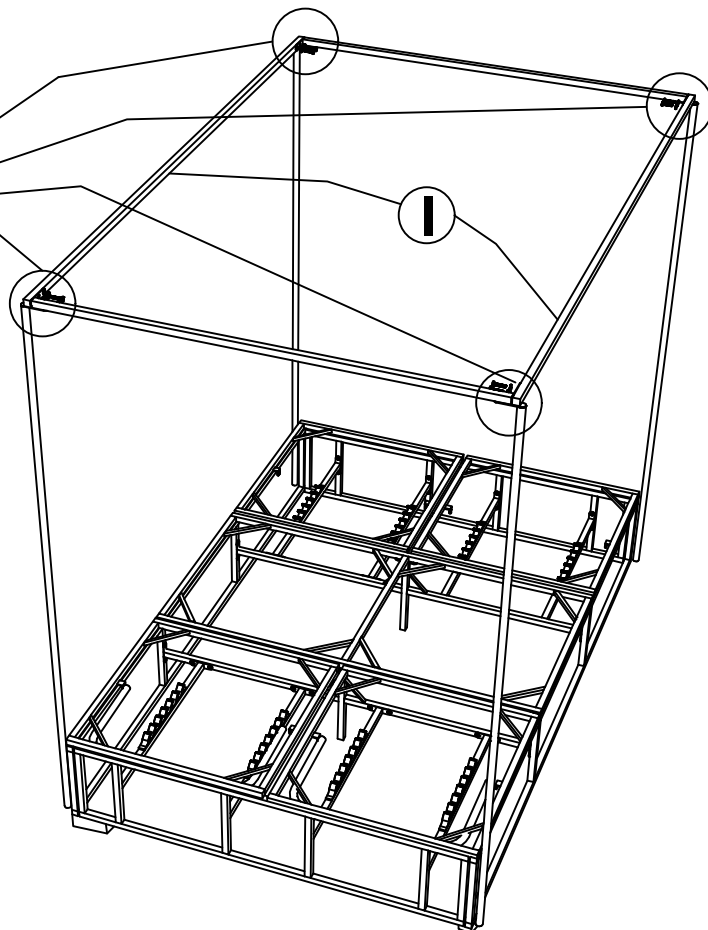 

 Step 11

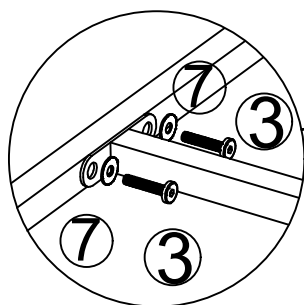

x2

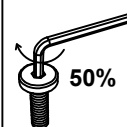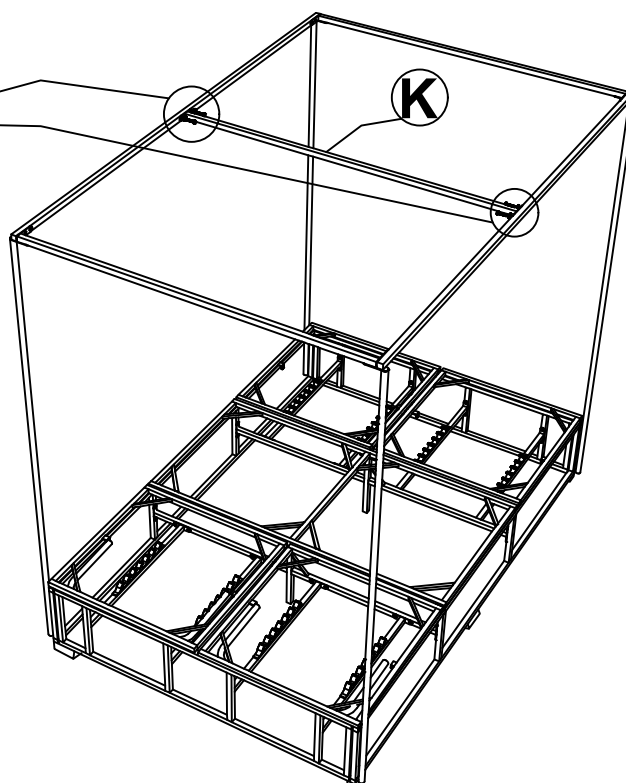  

Step 12

