
















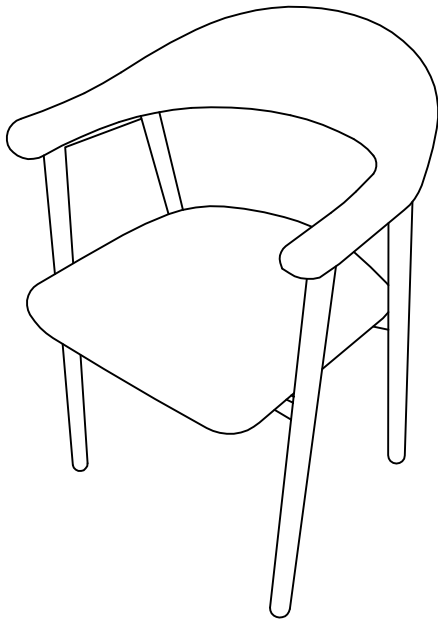
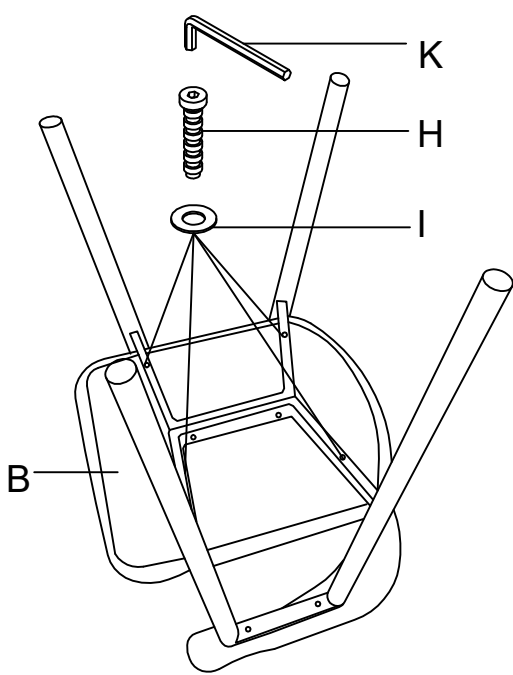
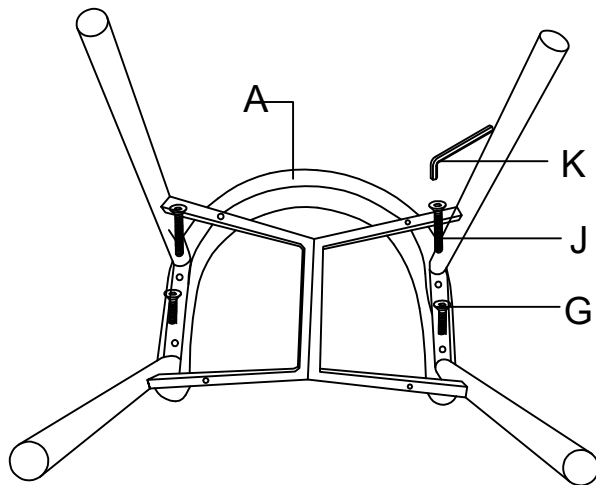
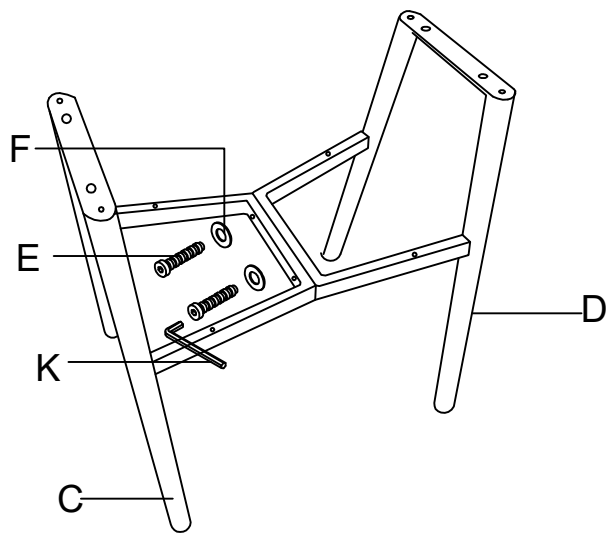


Chair Suki

ASSEMBLY INSTRUCTION

A	B	C	D	E	F	G	H	I
								
x1	x1	x1	x1	M8x30 x2	M8x18 x2	M6x25 x2	M6x45 x4	M6x16 x2
J	K	Extra Parts	Extra Parts	Extra Parts	Extra Parts	Extra Parts	Extra Parts	
								
M6x30 x2	x1	M8x30 x1	M8x18 x1	M6x25 x1	M6x45 x1	M6x16 x1	M6x30 x1	



Please ensure that when returning these goods, each part of the original packaging is reused. This is essential to prevent damage. Your careful handling of the packaging contributes to a safe return shipment and ensures that the furniture arrives in optimal condition with us. Thank you for your cooperation!