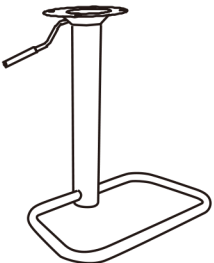
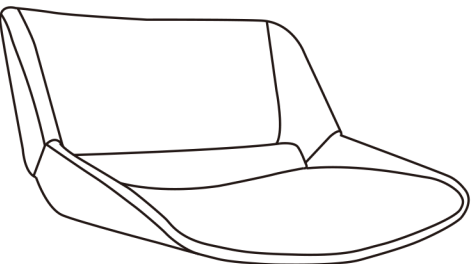
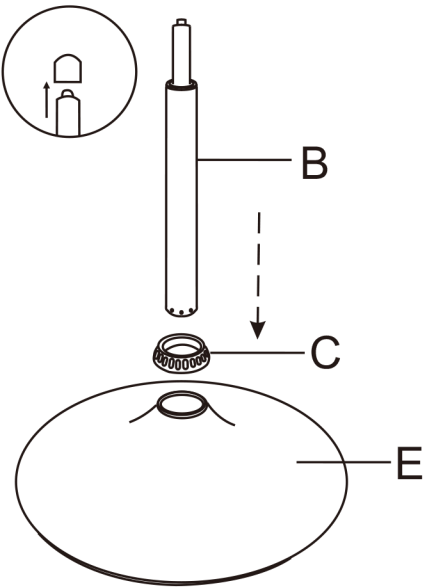
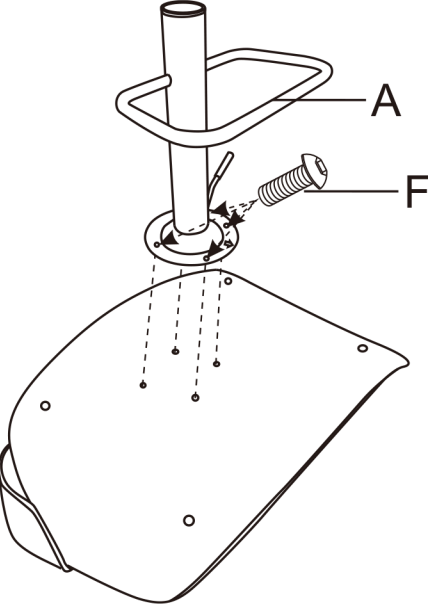



ASSEMBLY INSTRUCTION

09080028/01

Ax1 	Ex1 
Bx1  	Fx4  M6*16mmL
Cx1 	Gx1  M6
Dx1 	

1


2

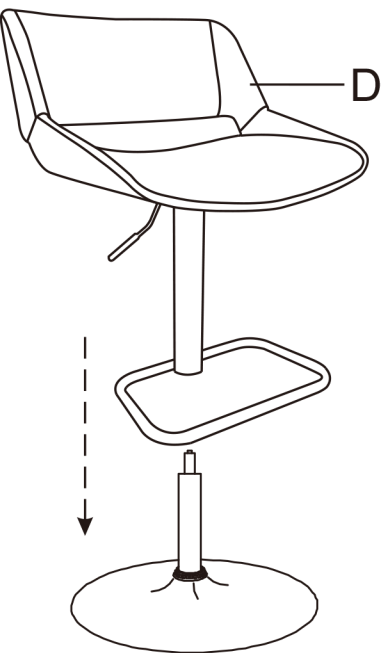
3


4

