

# Assembly Instructions For


# F2504/3



11/12

	①	②	③	④	⑤	⑥	⑦	⑧	⑨
					12m m	18m m	22m m	28m m	30m m
Required	x1	x8	x8						
Extra	1	1	1	3	12	6	6	6	12

Extra PIN Qty.	PIN PART	PIN DESCRIPTION
4		Rectangular Crystal Hook
4		S Hook
8		Small Bead Hook
8		Used on # 5
16		Used on # 6, 7, 8, 9

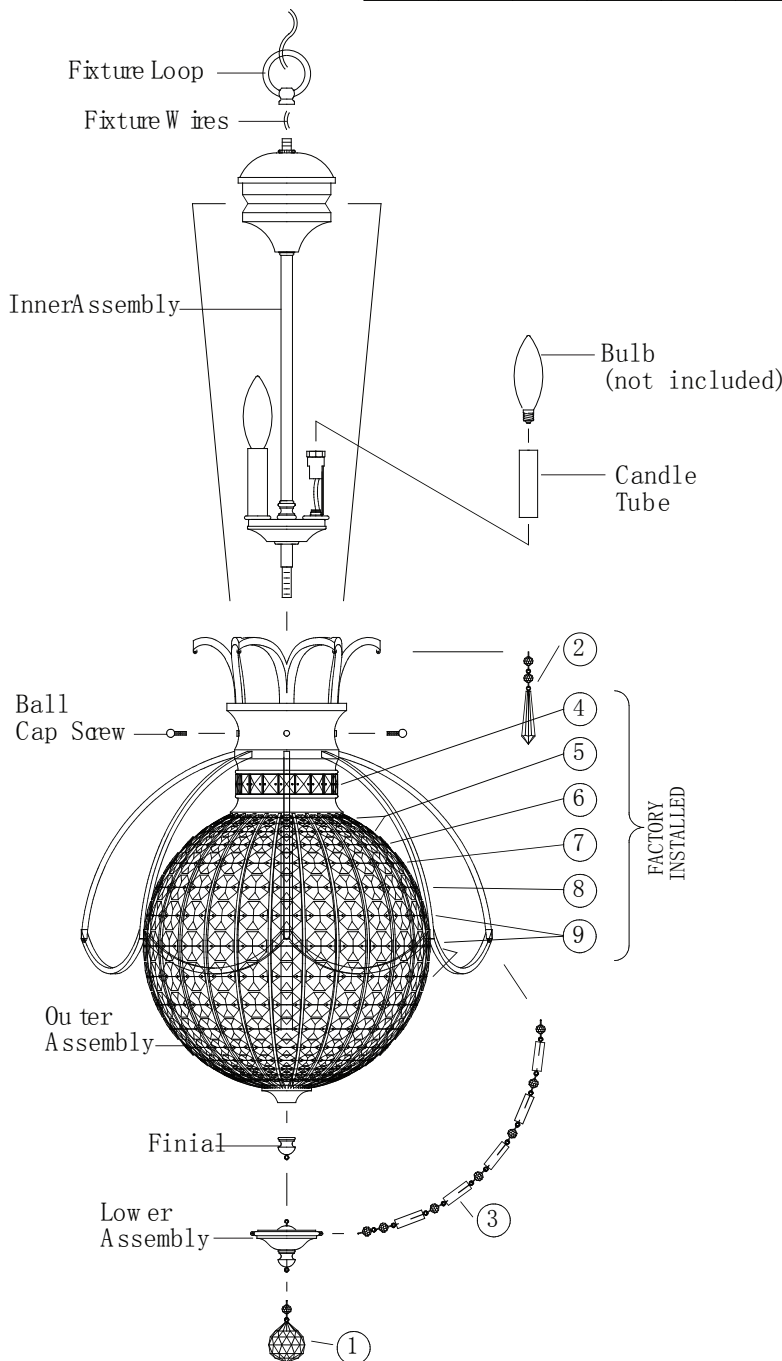

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

- Loosen the ball cap screws (at top) and finial (at bottom), then gently slide out the inner assembly from outer assembly.
- Slide fixture loop down through the fixture wires, and then screw on top of fixture.
- Follow enclosed supplement installation instructions for electrical and fixture installation onto house ceiling.
- Install candle tube by slipping through sockets.
  - Install candle bulb E14, 60 Watt maximum bulbs (not included).
- Slip outer assembly through inner assembly, and secure them at top section by fastening with ball cap screws.
  - Secure bottom section of the outer assembly by fastening with the finial.
- Install lower assembly by hooking onto finial. NOTE: Bend tight open hook in order to prevent from getting loose.
- Hang all crystal glass parts as shown on drawing.
 

NOTE:

  - For easier installation of crystal chains #3, hook all chains first onto the lower assembly and then proceed to hook onto the middle assembly.
  - To replace broken crystal or pin, extras are included in hardware bag. Replace by gently bending open pin, remove broken crystal or pin, hook new one, then close back pin. Avoid bending pin into sharp angle.

# FEISS®

EST. 1955

GENERATION  
BRANDS™