


# ***MASSAGE CHAIR***

READ ALL INSTRUCTIONS  
BEFORE USING THE ITEM

## REMOTE CONTROL

Function of remote

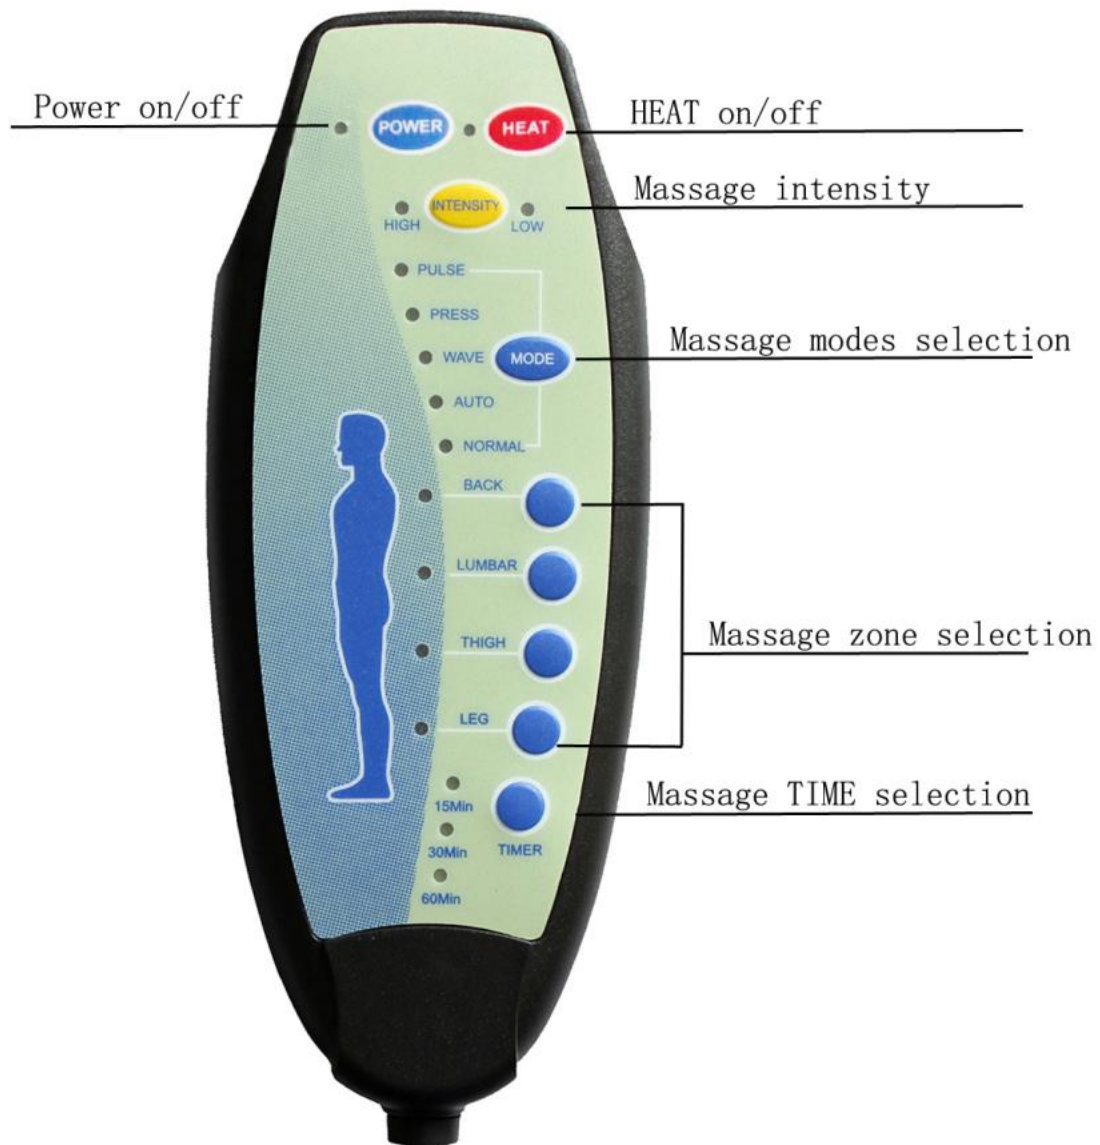


## PRODUCT FEATURE

- HEATING massage
- 8 Vibration Motors

- 5 Massaging modes
- Adjustable intensity
- Four massage zones, each zone can be operated individually
- The default timing is 15-30-60 min selection

## HOW TO USE

- 1、 Insert adapter jack into the socket found on back of the massage chair, then plug the adapter into a wall outlet(see Figure A)

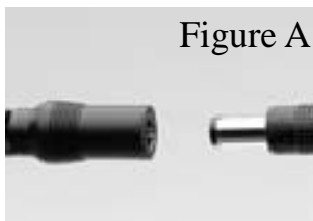

- 2、 Turn the unit **ON** by pressing the **POWER** button once, The LED will illuminate when power is on.
- 3、 Turn on the massage in each zone by pressing the **BACK**, **LUMBAR**, **THINGS** or **LEGS** buttons. LEDs will illuminate when each zone is activated. To turn off a zone, press the button again.
- 4、 To choose a desired massage mode, press the **MODE** button. To change modes, press **MODE** button until LED for desired mode illuminates
  - PULSE**---for deep tapping massage
  - PRESS**---provides rapid tapping massage
  - WAVE**---for a gradual, side-to-side vibrating massage
  - AUTO**---provides a random pulsing massage to all zones
  - NORMAL**---for a firm, vibrating massage
- 5、 To change the massage intensity press the **INTENSITY** button. The LED for **HIGH** or **LOW** intensities will illuminate when chosen.
 

NOTE: Discontinue use immediately if you feel any discomfort or pain.
- 6、 NOTE: for your benefit, the massage chair is equipped with an auto shut-off feature that .
- 7、 DO NOT use for more than 60 minutes of continuous use.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- 1、 This product is for use on a 12V circuit Make sure that the product is connected to an outlet having the same configuration as the plug.

- 2、 Always unplug the massager from the power source after use, and before cleaning.
- 3、 Do not reach for massager if it has fallen into water. Unplug immediately.
- 4、 An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, before putting on or taking off parts or attachments.
- 5、 Do not use outdoors.
- 6、 Do not carry this appliance by supplied cord as a handle.
- 7、 Keep the cord away from heated surfaces.
- 8、 Close supervision is necessary when this appliance is used by on or near children, invalids or disabled persons.
- 9、 This unit is not a toy. Children should not use it or play with it.
- 10、 Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 11、 Do not use near eyes or other highly sensitive areas.
- 12、 To disconnect, push "POWER" key to "OFF" place, make sure all functions stopped, then remove plug from outlet.
- 13、 Keep cord away from heated surfaces.
- 14、 Use this appliance only for its intended use as described in this manual. Do not use attachments not provided with the unit.
- 15、 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 16、 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 17、 The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

#### HEALTH CAUTION

- If you have any concerns regarding your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you experience pain in a muscle or joint for a prolonged period of time. Discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.

## **MAINTENANCE INSTRUCTIONS**

### **TO STORE:**

Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by power cord.

### **TO CLEAN:**

- Insure the unit is unplugged from the power source, and allow to cool before cleaning.
- Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
- Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniture polish, paint thinner or water hotter than 120°C to clean the unit.
- To clean the unit, make sure the massager is unplugged. Allow the unit to cool and the wipe down with a damp clean cloth. Do not use any strong chemical cleaners.

### **II. Warnings**

- 1.If the product is idle for a long time, please cut off the power.
  - 2.If the power line is damaged, please don't dismantle it by yourself. It must be replaced or repaired by our company or the retailer designated by our company.
  - 3.When the leather sheath or cloth sheath is damaged, please replace it immediately and don't use it any more to avoid other damage.
  - 4.Please don't immerse the controller in the water or impose heavy load on the controller to avoid the failure of hand controller.
  - 5.People who suffer from varies diseases, feel ill or pregnant cannot use the product.
- The above agreement is applicable to all the Linuo products and Linuo enjoys the final power of interpretation.

## **III. MAINTENANCE INSTRUCTIONS**

### **TO STORE:**

Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by power cord.

### **TO CLEAN:**

- ☐ Insure the unit is unplugged from the power source, and allow to cool before cleaning.
- ☐ Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
- ☐ Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniture polish, paint thinner or water hotter than 100° C to clean the unit.

☐ To clean the unit, make sure the massager is unplugged. Allow the unit to cool and the wipe down with a damp clean cloth. Do not use any strong chemical cleaners.