 
 
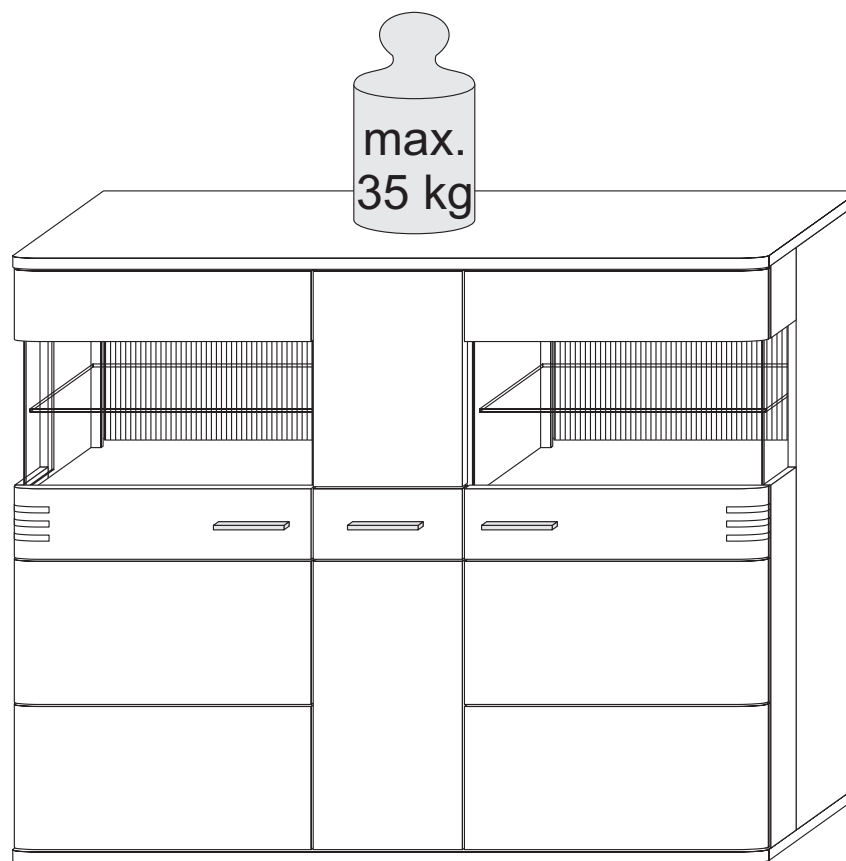 
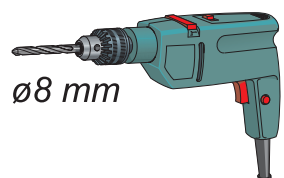 
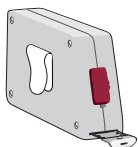 
 
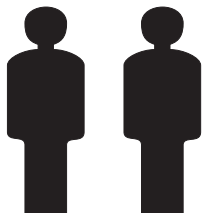 
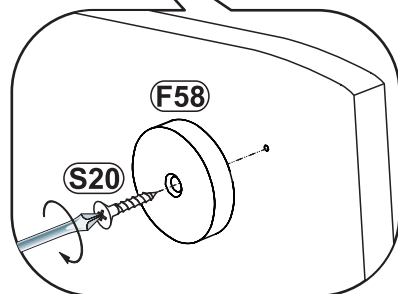 
 
 


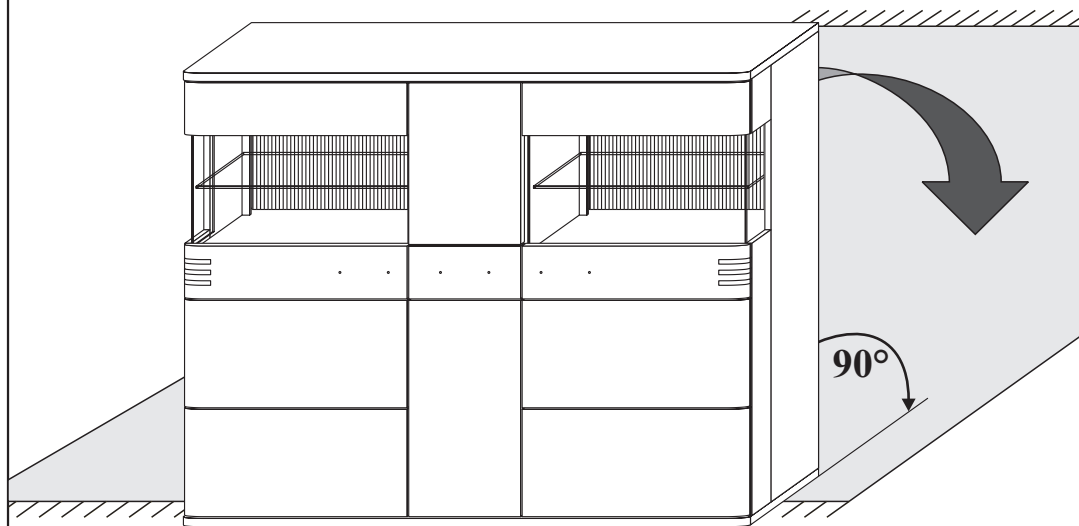






- (D) Montageanleitung
- (NL) Handleiding voor de montage
- (TR) Montaj talimatı
- (FR) Instructions de montage
- (CZ) Montážní návod
- (HU) Összeszerelési útmutató

- (GB) Assembly instructions
- (PL) Instrukcja montażu
- (RU) Инструкция по монтажу
- (IT) Istruzioni di montaggio
- (RO) Instrucțiuni de asamblare
- (SK) Montážny návod

1

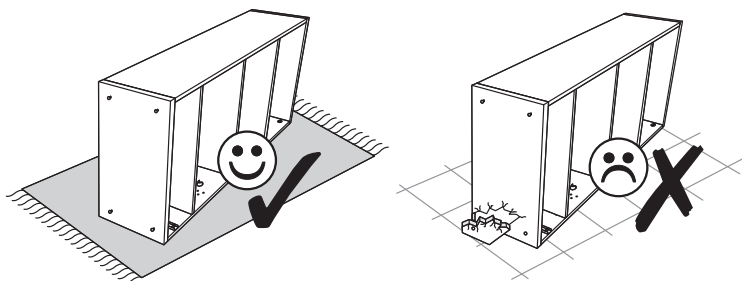

     
2

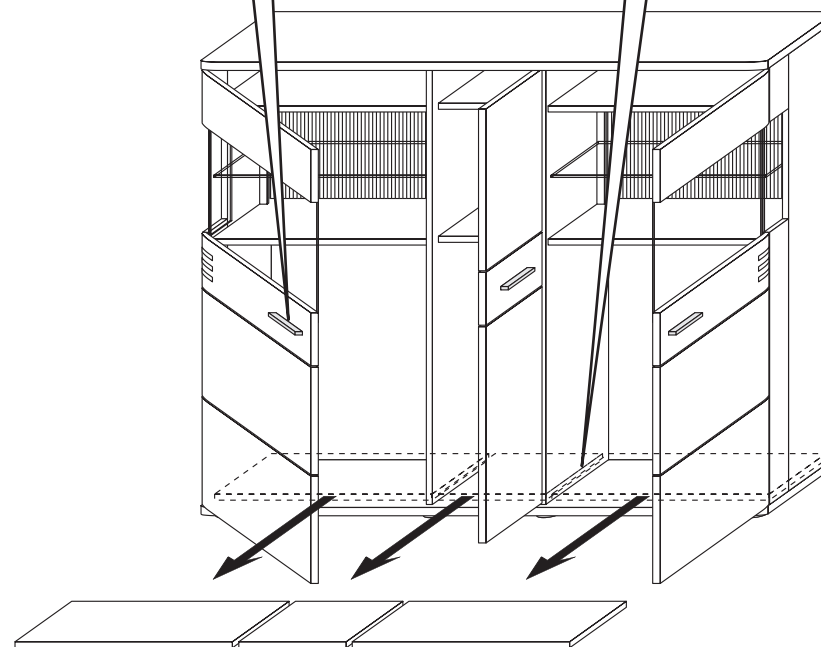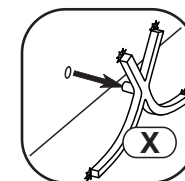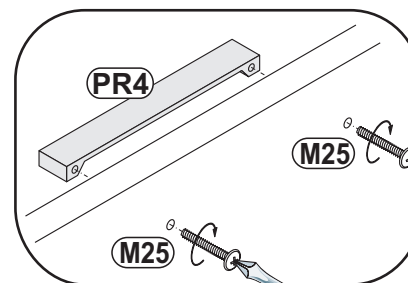

3

W1  x12

 
C3  x16

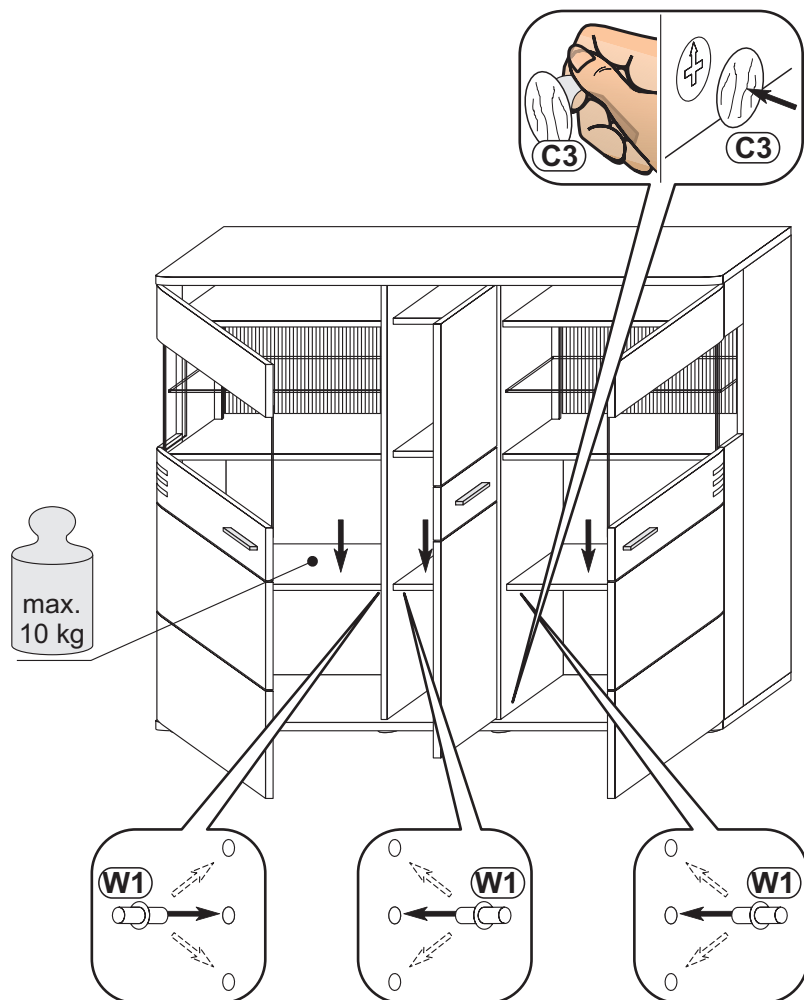







4

S4  3x16 mm x4





 
ZM1  x4

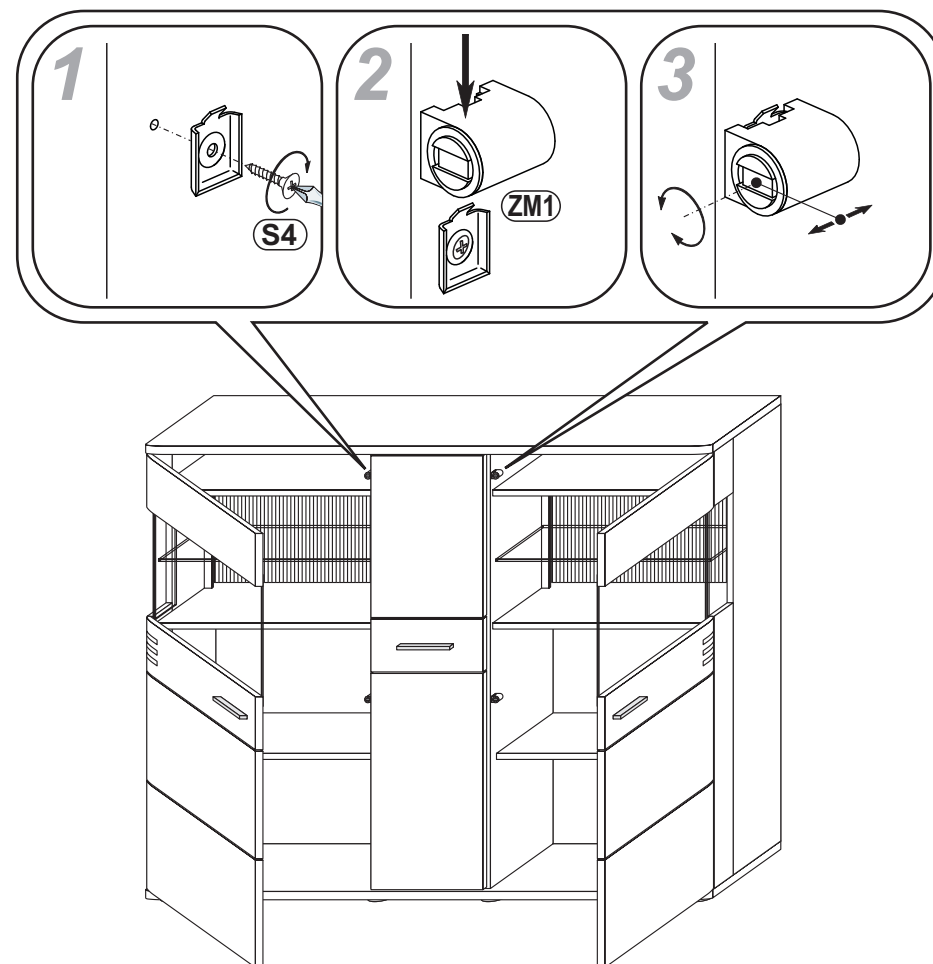


5

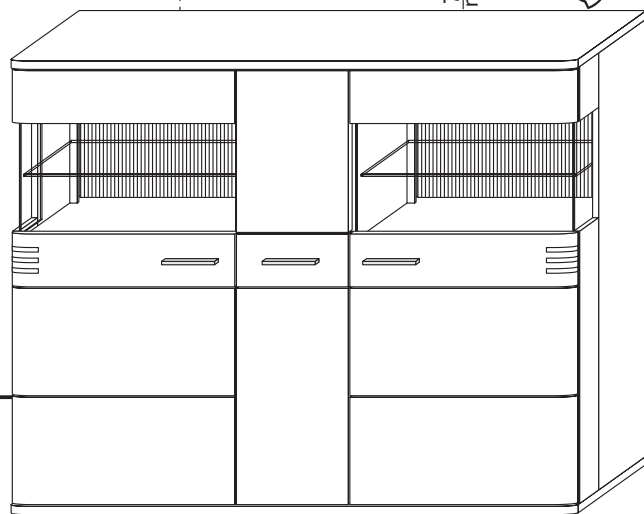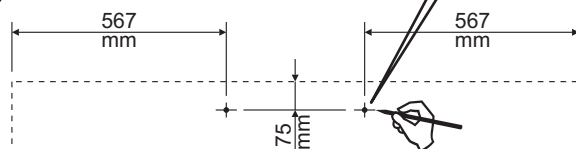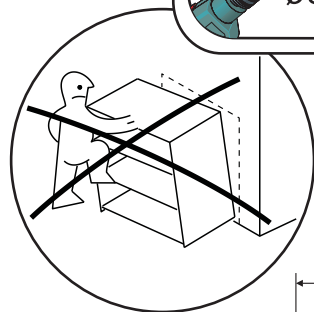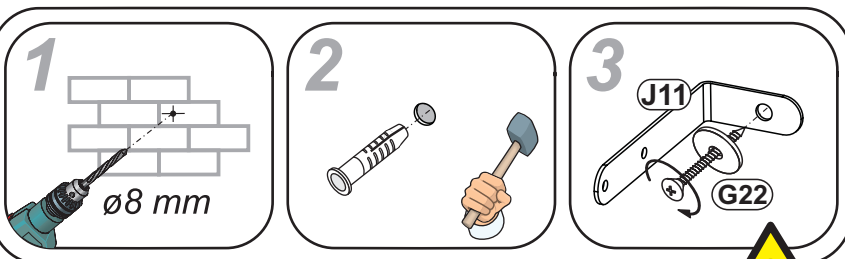      


6

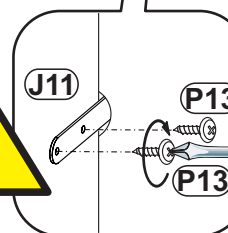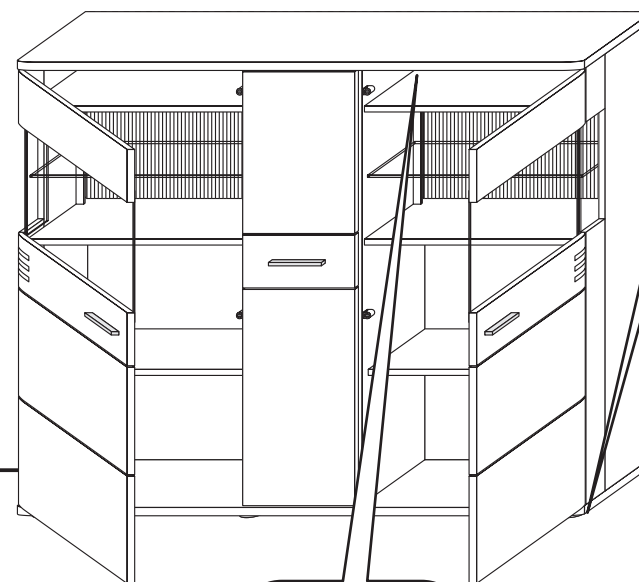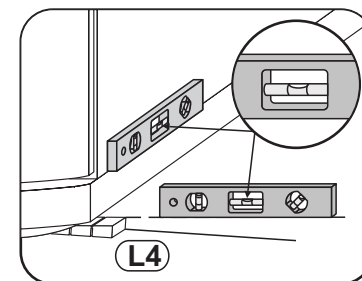     


1

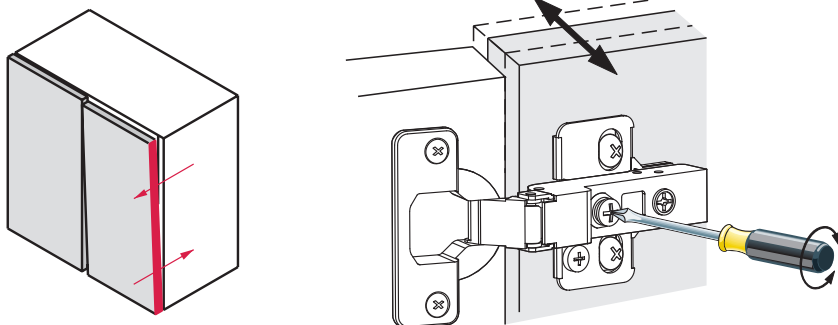 


1

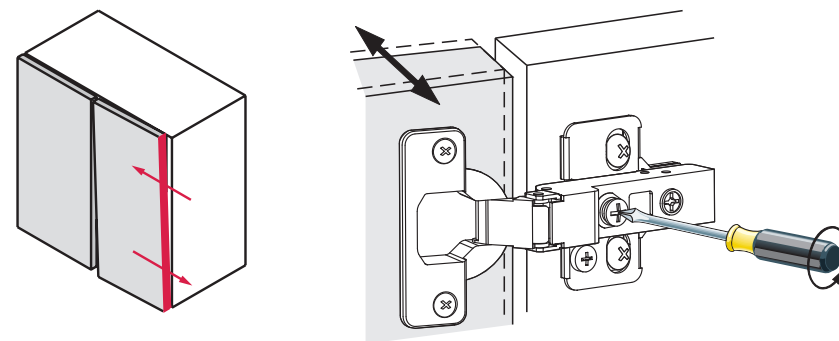 


2

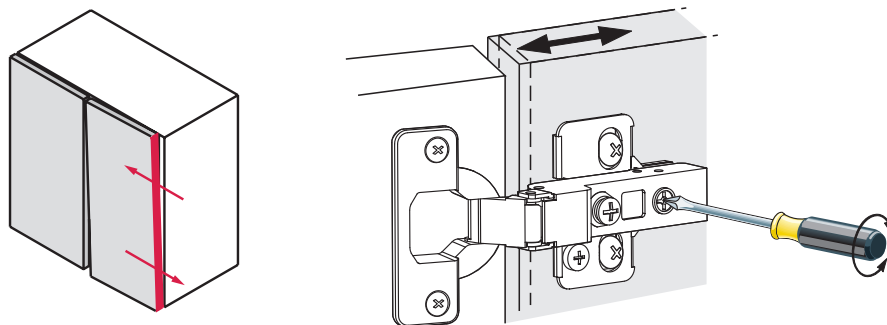 


2


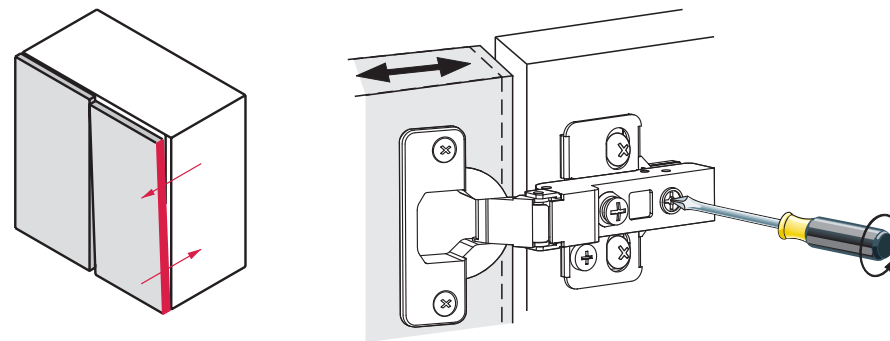 


3








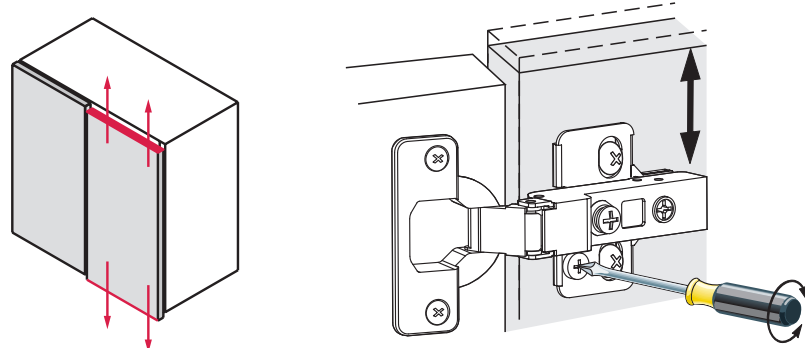 



3

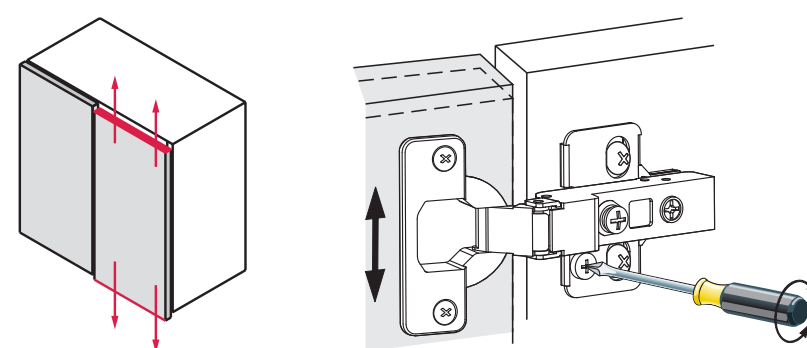 

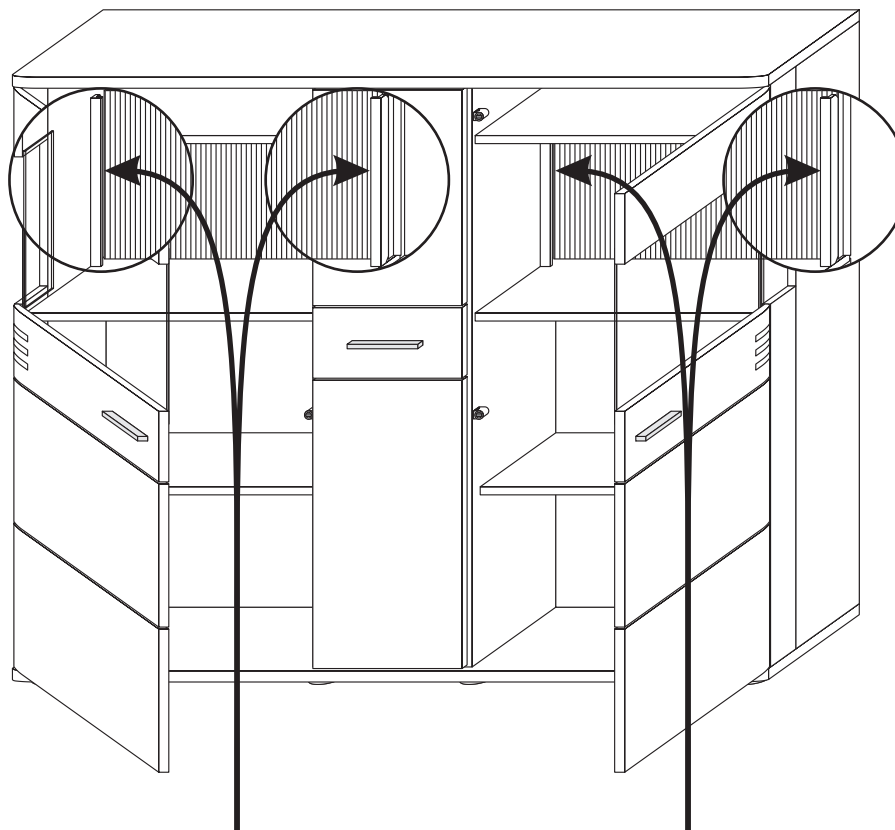  

ZUBEHÖR BELEUCHTUNG 046031ZB

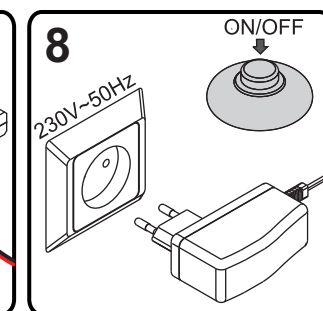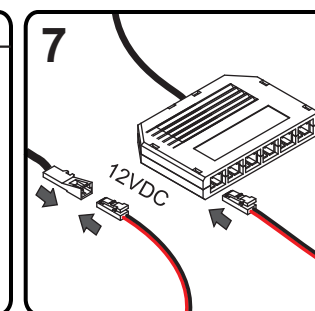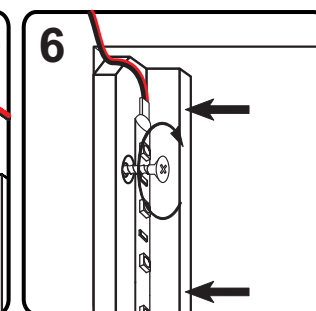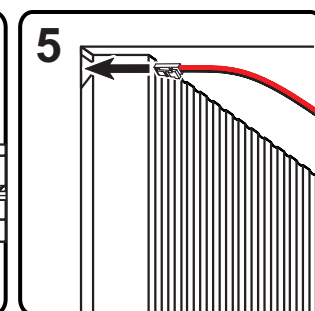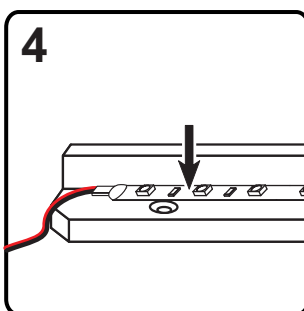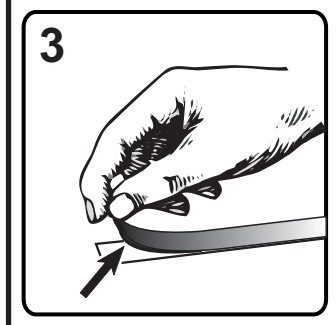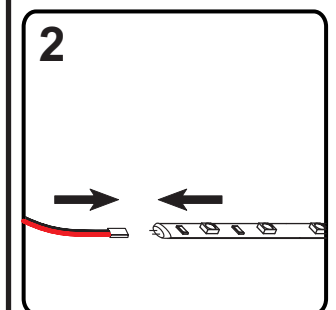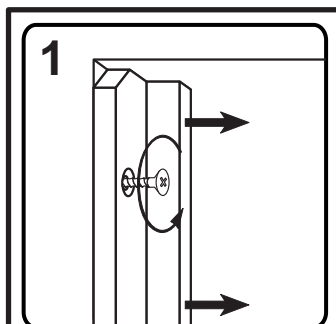        

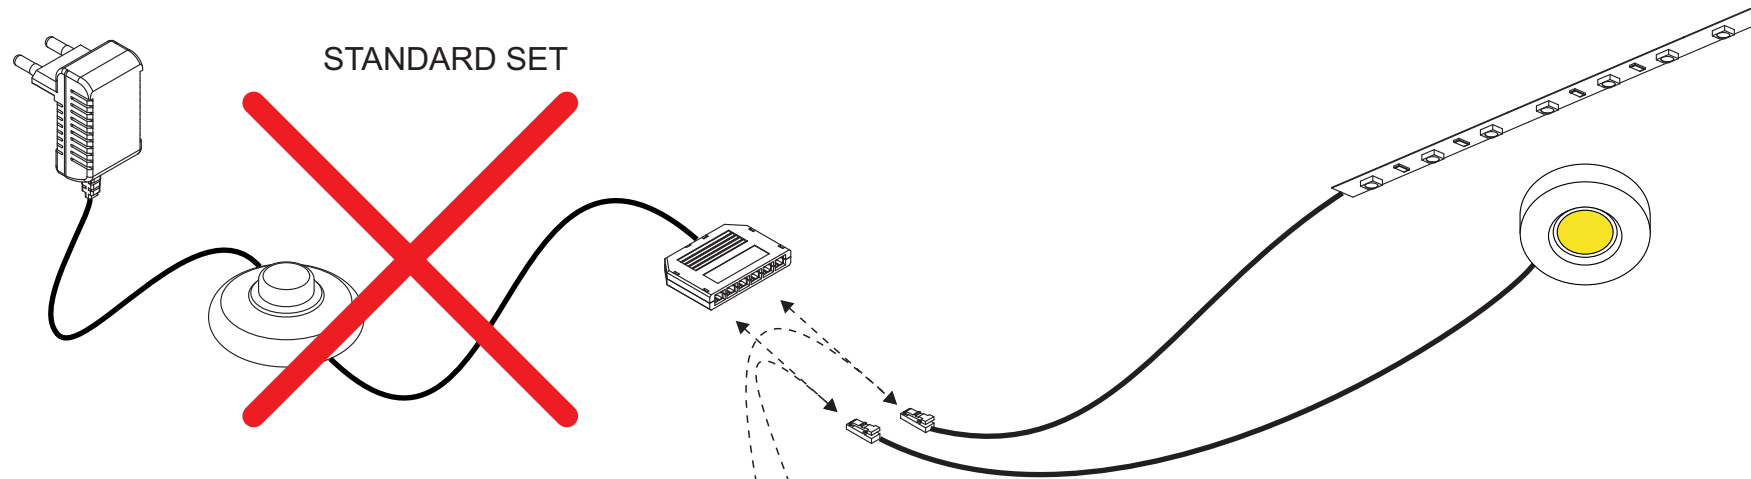 

Vitrinenschrank

Rückwand - innen

ZUBEHÖR 006090ZB Dimm & Touchschalter

