

REVERSING THE DOOR OPENING

If required, the door opening can be moved from the right (supplied condition) to the left side.

WARNING:

When replacing the door stop, the appliance must be disconnected from the power supply first.

NOTE:

- Ask another person to assist.
- You possibly need: screw wrench, Phillips screwdriver as well as a thin-blade screwdriver.

Remove the hinge cover (1). Loosen the screws (2) and remove the door hinge (3). Move the blind cap (4) on the now exposed hole. Lift out the appliance door, move the blind plug (5) and place the door safely aside.

Tilt the appliance slightly backwards and block it in this position. First remove the stand (6), then loosen the screws (7) and remove the door hinge (8).

Unscrew the separate stand (9). Move and attach the lower door hinge (8) to the corresponding other bottom side of the appliance using the screws (7). Attach the stand (6) to it. Screw in the separate stand (9). Return the appliance to the upright position. Place the appliance door on the hinge pin and fix it in the intended position. Move and secure the upper door hinge (3) with the screws (2) to the corresponding other top side of the appliance. Replace the hinge cover (1).

Check that the door is aligned vertically and horizontally to ensure proper opening and closing of the

