


## ASSEMBLY/INSTALLATION INSTRUCTIONS

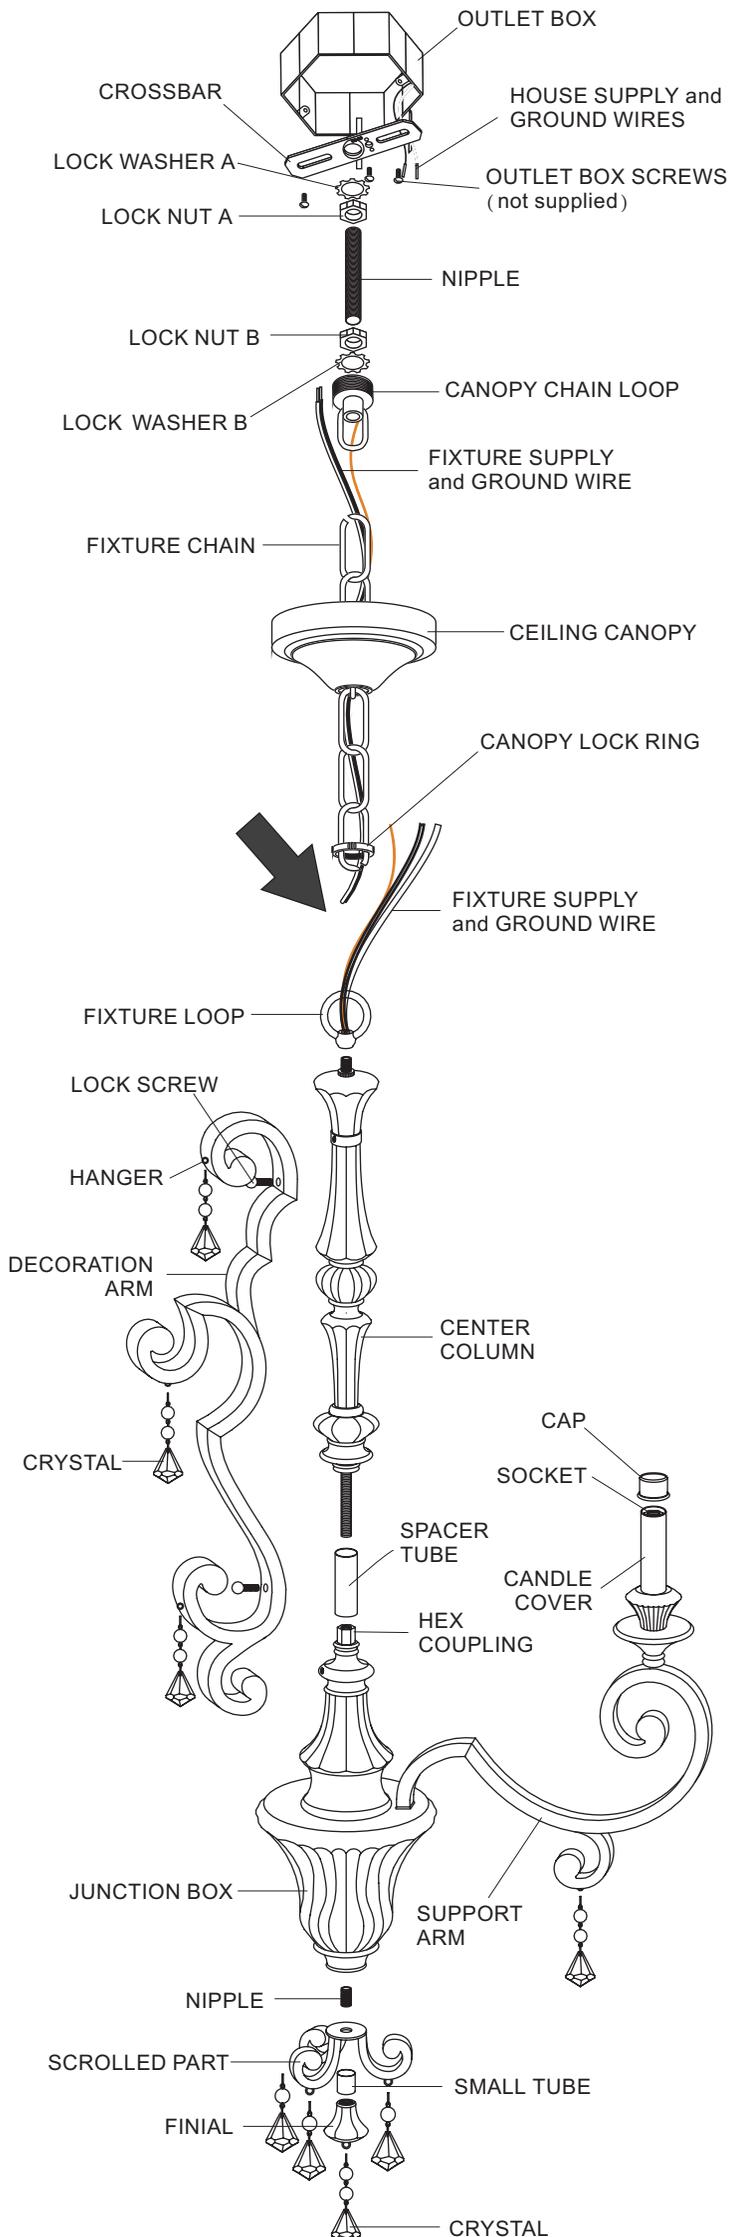

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration.
2. Turn power to the installation point OFF at circuit breaker.
3. Unfold the SUPPORT ARMS to the proper locations. Position the SPACER TUBE over the HEX COUPLING on the top end of the JUNCTION BOX assembly and then thread the nipple on the end of the CENTER COLUMN onto the HEX COUPLING. Hand tighten until snug. Please make sure the mounting holes on the side of the CENTER COLUMN line up the mounting holes on the side of the JUNCTION BOX assembly.
4. Locate the DECORATIVE ARMS. Match the holes on them with the mounting holes on the side of the CENTER COLUMN and JUNCTION BOX assembly. Secure them by threading the LOCK SCREWS into the mounting holes. Hand tighten until snug.
5. Thread the FIXTURE LOOP onto the nipple on the top end of the CENTER COLUMN and tighten until snug.
6. Fasten the CROSSBAR to the OUTLET BOX with (2) OUTLET BOX SCREWS (not supplied). Proceed to thread LOCK NUT A and LOCK WASHER A onto the top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate the LOCK NUT B onto the bottom end of the NIPPLE. Tighten LOCK NUT A against CROSSBAR with plier until snug.
7. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Pass the fixture wires through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1) CANOPY LOCK RING; 2) CEILING CANOPY; 3) CANOPY CHAIN LOOP; 4) LOCK WASHER B and LOCK NUT B; 5) NIPPLE; 6) LOCK NUT A and LOCK WASHER A.
8. **Making the connections:**  
(2 people recommended for the remaining steps)  
Position the fixture under the ceiling mounted outlet box. Pass LOCK WASHER B over the NIPPLE. Thread CANOPY CHAIN LOOP onto NIPPLE. Thread LOCK NUT B down the NIPPLE, against the CANOPY CHAIN LOOP and snug with pliers. Pass the wires through the NIPPLE. Take up wire slack and trim wires so that approx. 6" will remain inside outlet box. Proceed to attach the top of the FIXTURE CHAIN to the bottom of the CANOPY CHAIN LOOP. Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
9. With the proper connections made, proceed to push the CEILING CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.
10. Thread the NIPPLE into the mounting hole on the bottom center of the JUNCTION BOX. Hand tighten until snug. Proceed to locate the SCROLLED PART, SMALL TUBE over the end of the NIPPLE in turn and secure with the FINIAL. Hand tighten until snug.
11. Position the CRYSTALS onto the hangers on the FINIAL, SCROLLED PART, SUPPORT ARMS and DECORATIVE ARMS as shown. **Please note that there are two kinds of CRYSTALS.**
12. Position the CANDLE COVER over the SOCKET as shown. Put the CAPS onto the top end of the CANDLE COVER. Install the correct bulbs referring to the maximum wattage affixed to the fixture.
13. Restore power to the installation point ON. Retain this sheet for future reference.