


# Fehlerbehebung

## K392 / K397 / K398

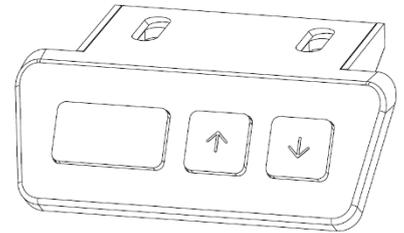

### Zurücksetzen (RST):

1. Die NACH-UNTEN-Taste am Handbedienteil gedrückt halten, bis der Tisch seine niedrigste Höhe erreicht hat.
2. Die NACH-UNTEN-Taste loslassen.
3. Die NACH-UNTEN-Taste erneut gedrückt halten, bis an der LED-Anzeige die Information "RST" angezeigt wird.
4. Die NACH-UNTEN-Taste loslassen.
5. Die NACH-UNTEN-Taste erneut gedrückt halten, bis der Tisch noch ein kleines Stück weiter abgesenkt wird, danach leicht angehoben wird und schließlich stoppt. Ein Ton erklingt kurz.
6. Die NACH-UNTEN-Taste loslassen.
7. Der Tisch wurde nun erfolgreich zurückgesetzt.

### Fehlercodes:

- Handset shows error code and solution

Error code	Fault cause	Solution
E1,E6,E7	power fault	change power
E2	nsynchronous height over 1cm	Implement the initialization operation 1
E4	handset fault	Unplug and replug the cable of hand set
E5	Anticollision alert	Rebound reminder , normal condition
E8	desktop sloping	check the desktop
E11,E21	Motor defect	inspect the motor wire
E12,E22	controller fault	Exchange the controller
E14~E17,E24~E27	motor fault	change motor
E18,E28, E7	overloading	reduce the loading, RST
HOT	overtime operation	Automatic recovery after stop using for 20 minutes