


ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 4065

ITEM DESCRIPTION : 2 DRAWER BEDSIDE

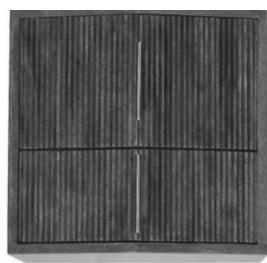

1

Reverse the Bedside top & place the leg as shown & align the leg to match the apron.




2

Place the bolt & washer in the cut out & tighten it with allen key provided as in Fig1.



3

Fix the other leg set in the similar way

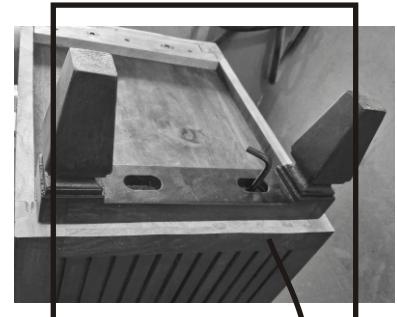

4

Reverse the Bedside straight. Now your Bedside is ready for use.



Fig. 1

