


ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 4080

ITEM DESCRIPTION : **BEDSIDE**

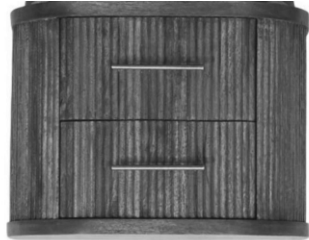


1

Reverse the bedside top & place the leg as shown & align the leg to match the apron.



2

Place the bolt & washer in the cut out & tighten it with allen key provided as in Fig1.

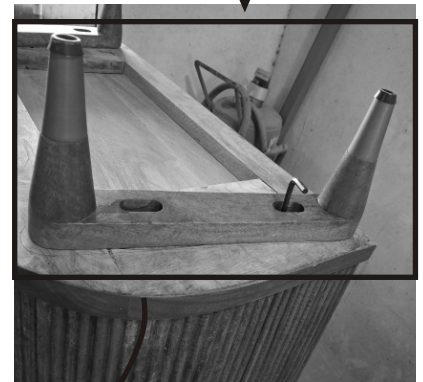

3

Fix the other leg set in the similar way



4

Reverse the bedside straight. Now your bedside is ready for use.



Fig.1

