

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 3280

ITEM DESCRIPTION : BEDSIDE




1

Reverse the Bedside top & place
the leg as shown & align the
leg to match the apron.



2

Twist the leg into the iron fitting
slot by rotating it.

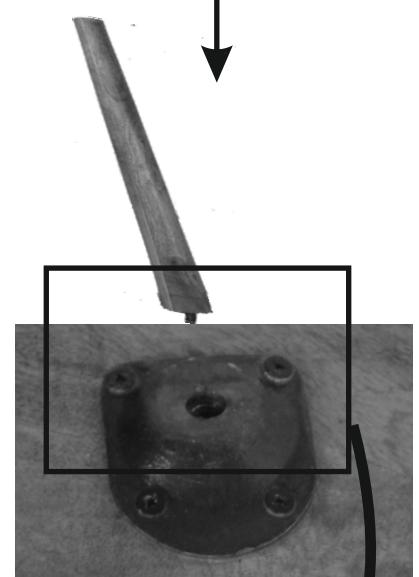

3

Fix the other legs in the similar way

4

Reverse the Bedside
straight. Now your
Bedside is ready
for use



Fig. 1

