

ASSEMBLY INSTRUCTIONS

A x1



B x1



C x2



M6*25MM

D x2




M6*18MM

E x1




1

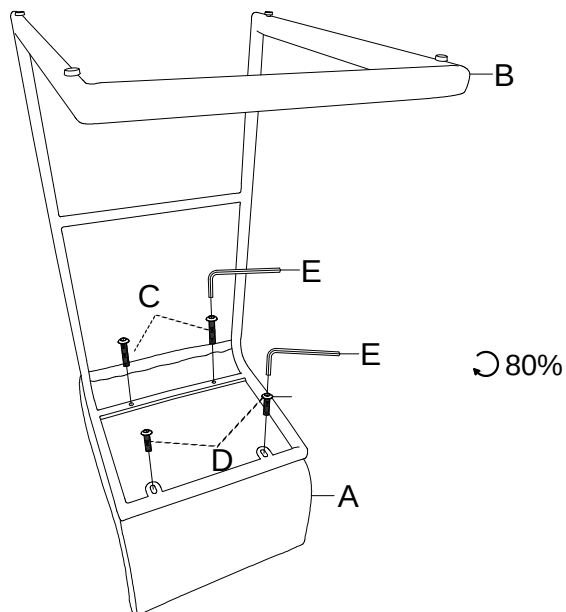

Step1: Lock the screw 80% at first.

2

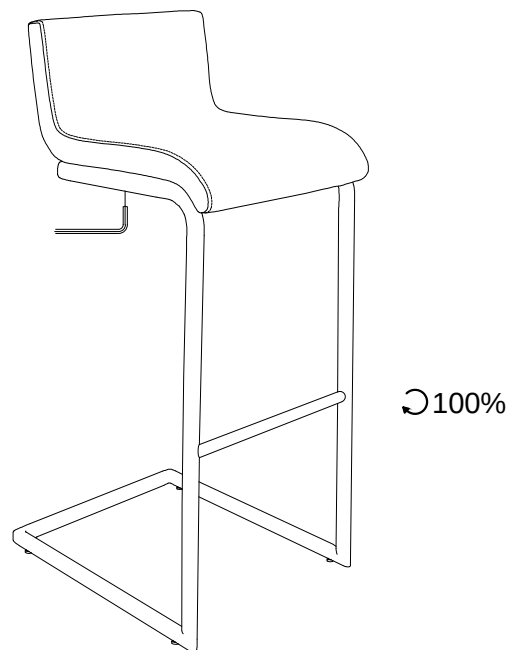

Step2 : Before sitting on the chair,please make sure the chair in horizontal position,and then tighten all the screws

3

