

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 3266


ITEM DESCRIPTION : **WALL MOUNTING BEDSIDE**



1.
Insert the plastic dry wall anchor inside the hole drilled into the wall through the wooden support



2.
Thread the metal screw through the plastic washer until it threads till the wall

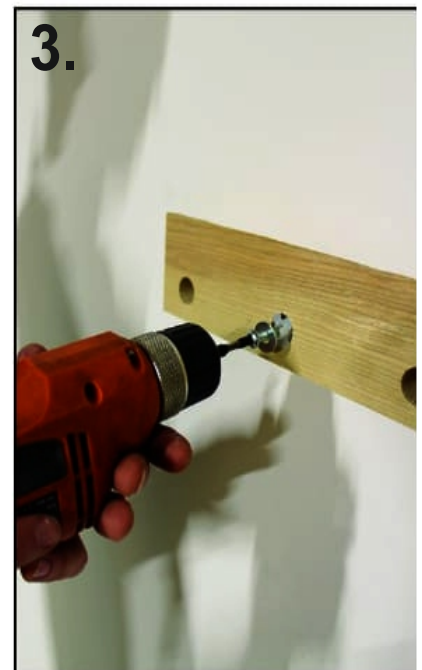


3.
Secure the screws tight into the hole drilled in the wall with the help of drill



4.
Fix all the screws firmly in the 5 slots provided

WALL MOUNTING INSTRUCTIONS

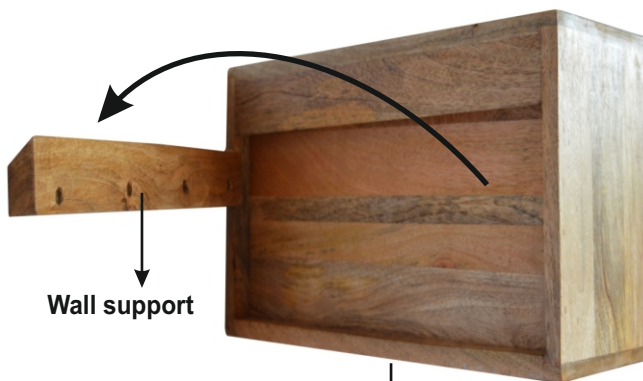

Wall support

Bedside



Washer

Screw

Allen key

Fasten the bolt & washer to the slot given on the bottom of bedside with the help of the allen key provided.