

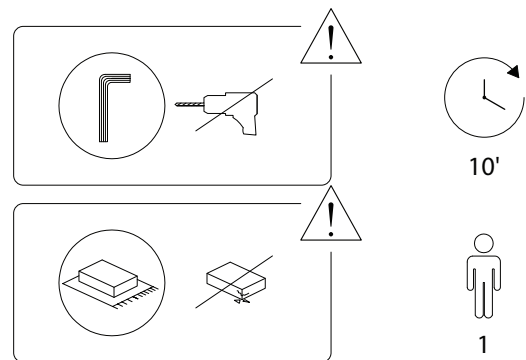
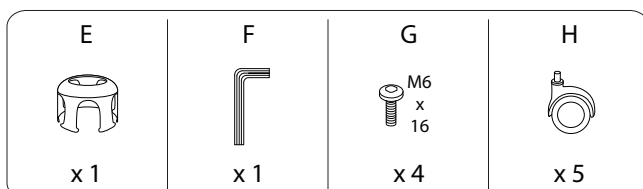


A line drawing of a modern, high-back office chair. The chair features a high, curved backrest and a seat with a horizontal band. It has armrests with a tufted detail on the outer side. The chair is mounted on a swivel base with five casters. A small lever is visible on the left side of the seat base.

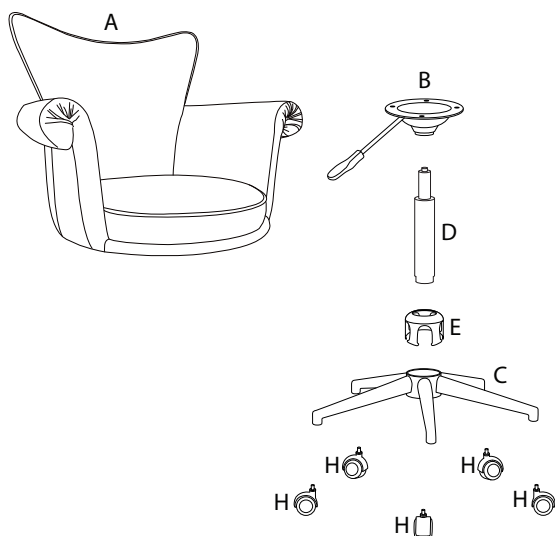

2/6

2452/VALENCIA/300426/

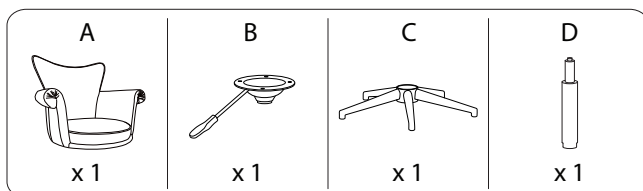

1




C

x 1




H


x 5

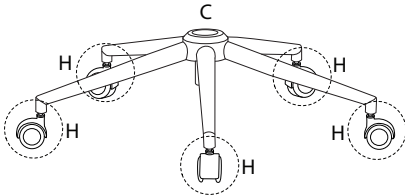

The main diagram shows the central base C with five arms. Each arm has a dashed circle around its end, indicating where to attach the arm connector H. The bottom of the base also has a dashed circle around its foot, indicating where to attach the fifth connector H.



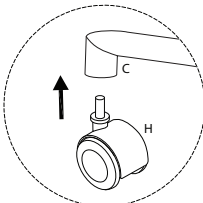


The inset diagram shows a close-up of the arm connector H being attached to the end of an arm C. An upward arrow indicates the direction of assembly.

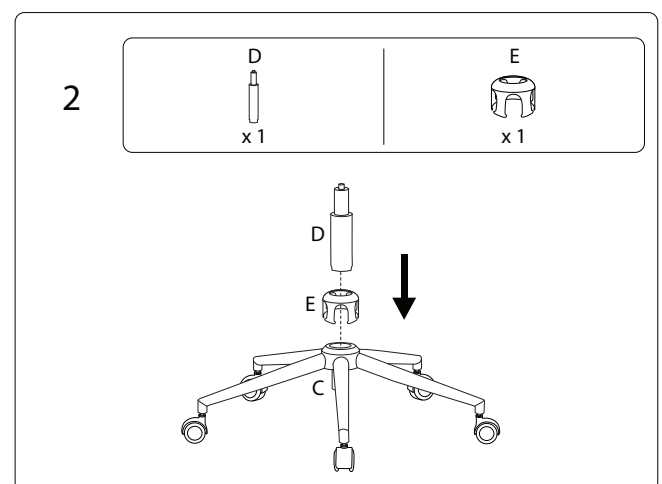

4/6

2452/VALENCIA/300426/

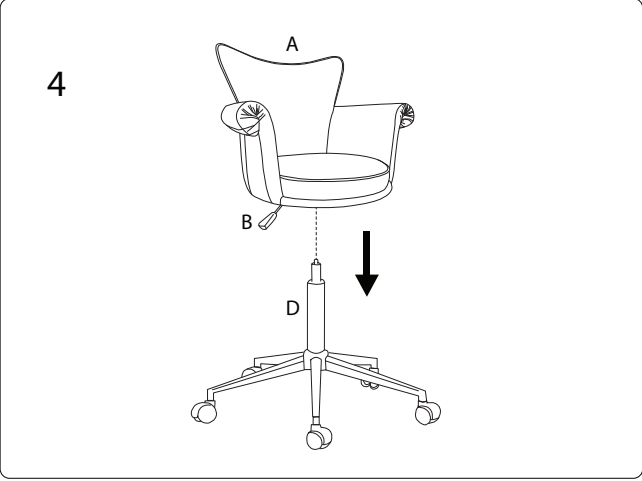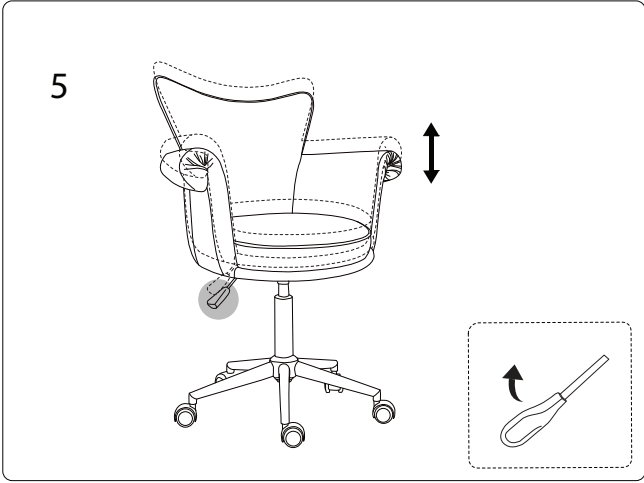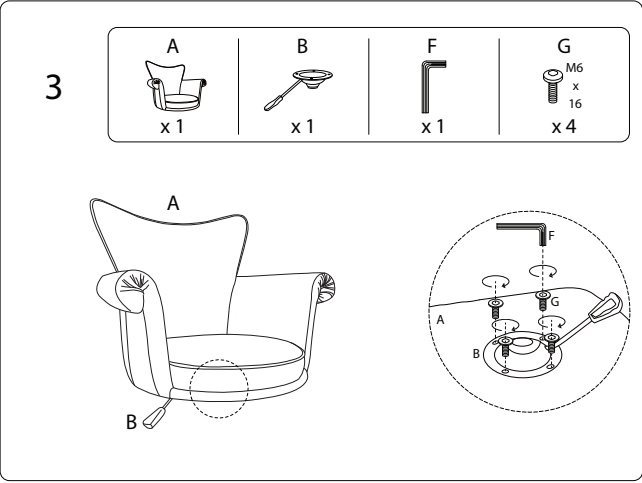

5/6

2452/VALENCIA/300426/

6/6

2452/VALENCIA/300426/