

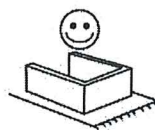

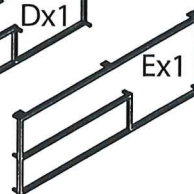
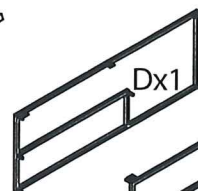



Assembly Instruction / Montageanleitung



AI THORE COUCHTISCH 83-904-07-M

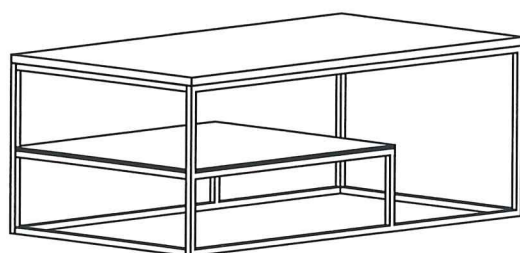

Gx6
M6



Hx6
M6




Ix12
M6x7



Jx4
5 mm



Kx1
4 mm

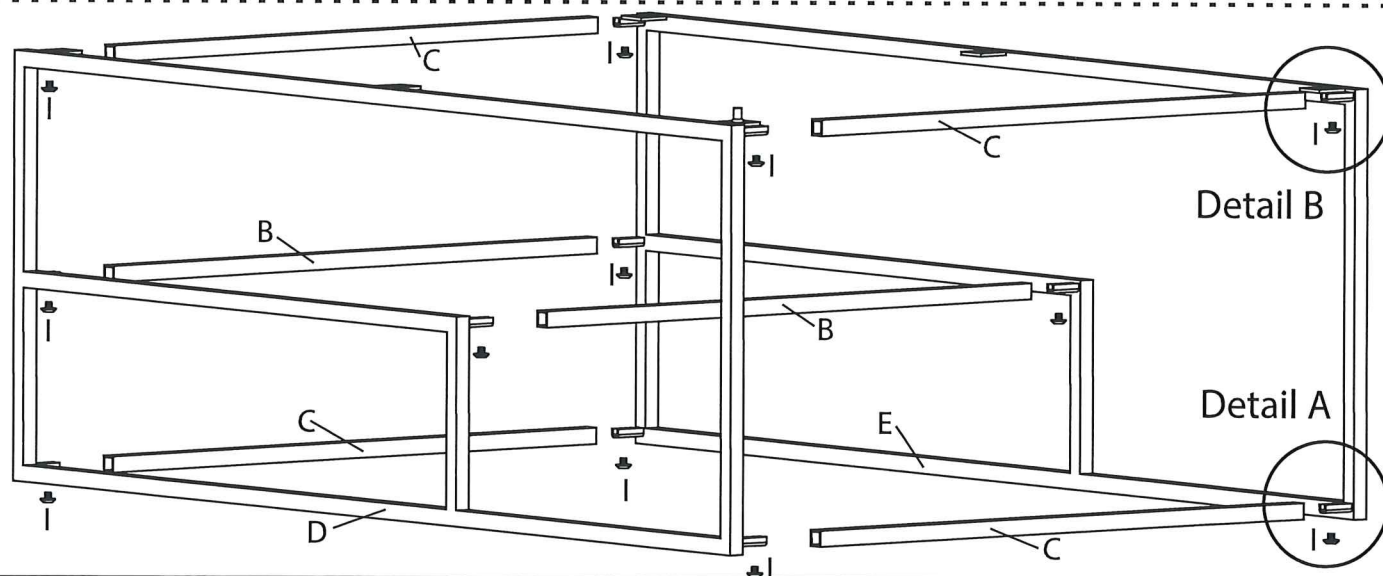

Detail A

E

C

K

I

Detail B




C

E


K

I

Assembly Instruction / Montageanleitung

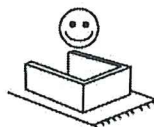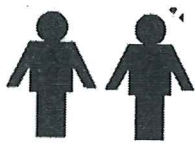

AI THORE COUCHTISCH 83-904-07-M

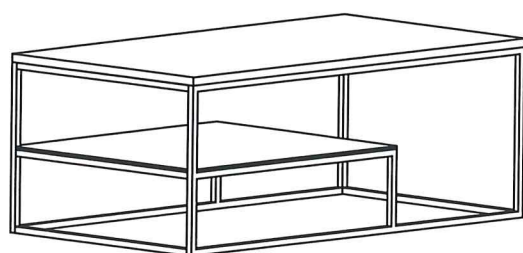

Bx2




Cx4



Fx1



Dx1

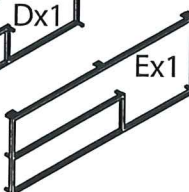

Ex1



Gx6
M6



Hx6
M6




Ix12
M6x7



Jx4
5 mm




Kx1
4 mm

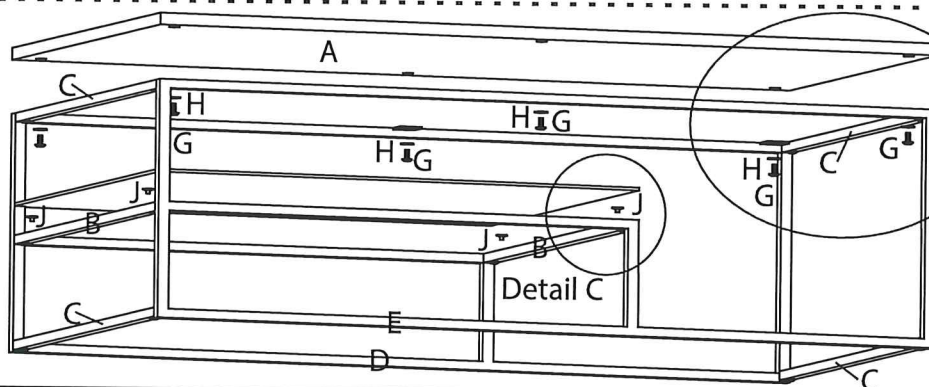


Detail D

Detail C

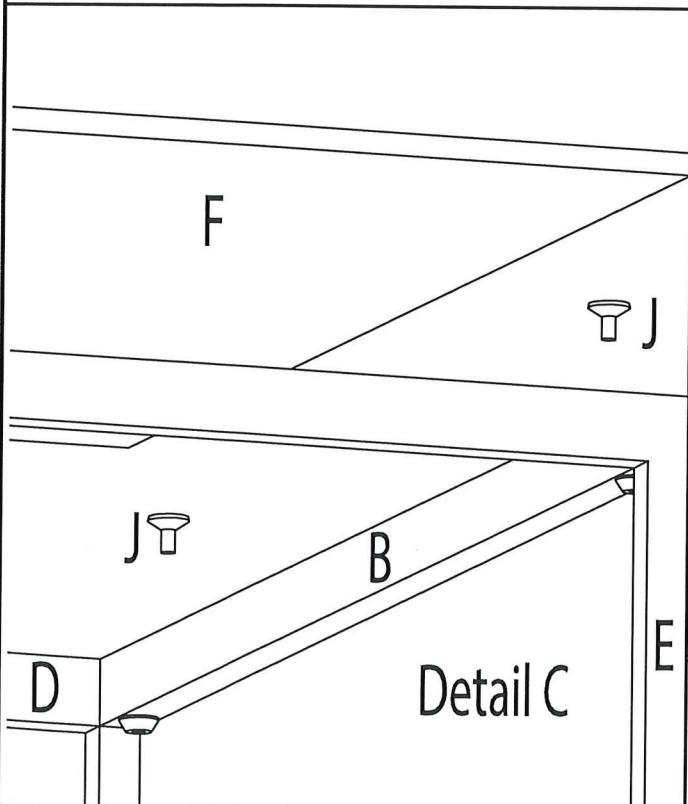

F

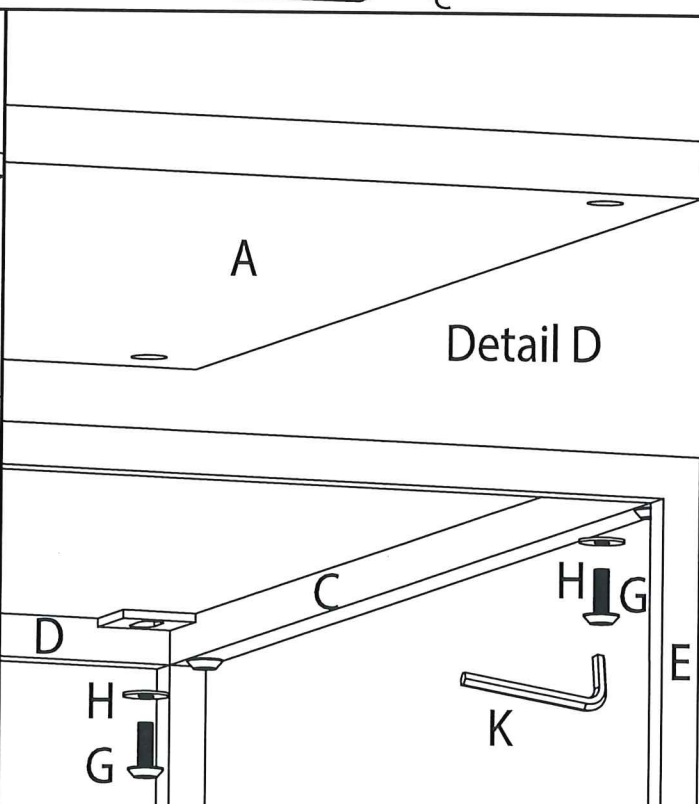

A

Detail D



B

D

Detail C

E

D

H

G

C

H

G

K

E