



BED FRAME

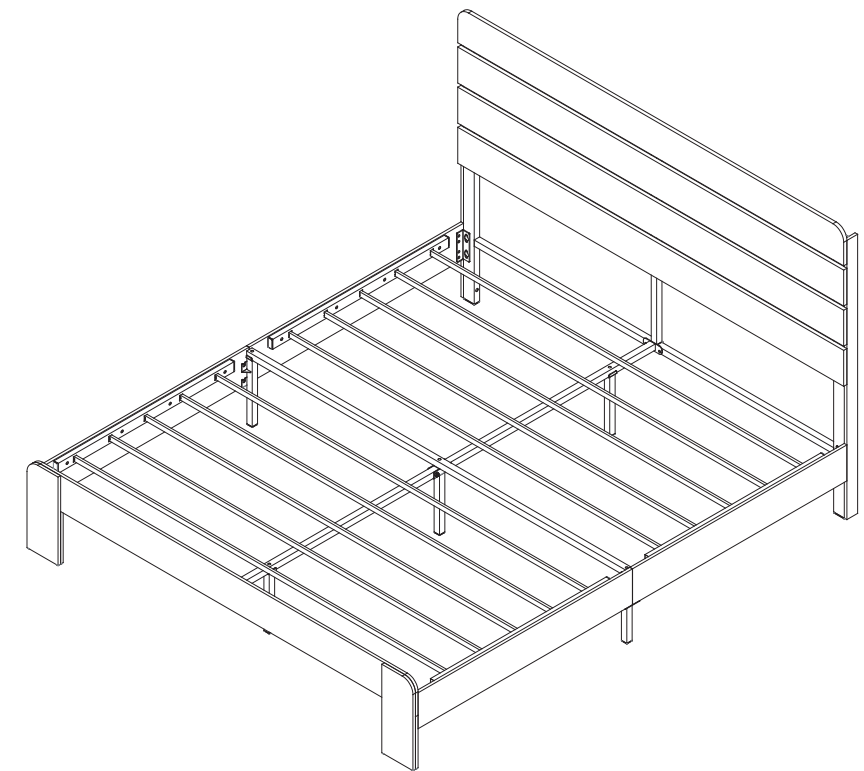

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

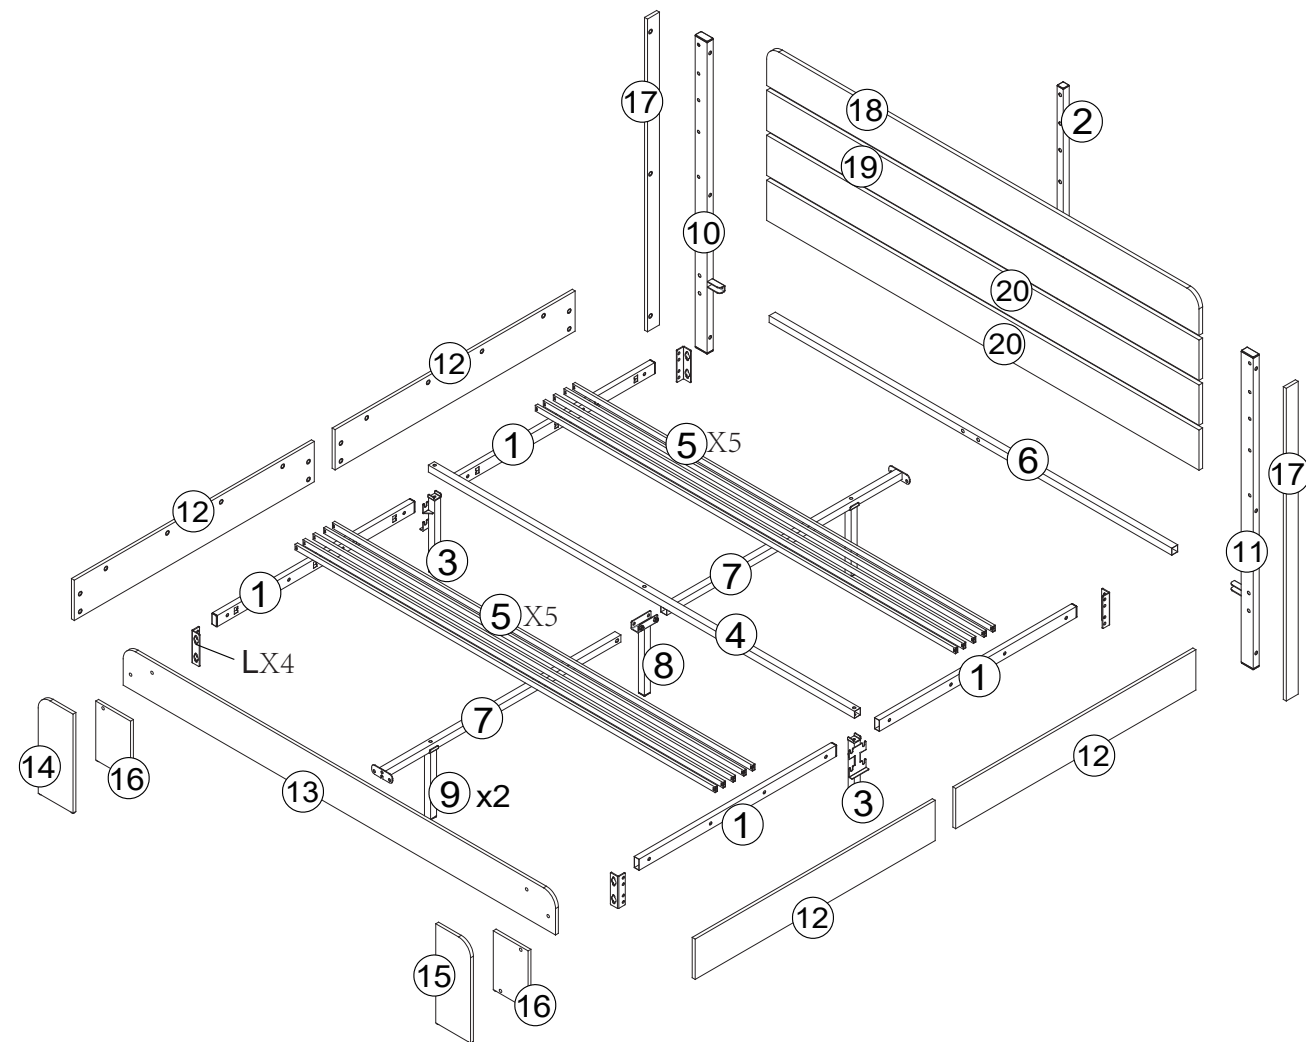

B703 1400/1600/1800

Important Note

HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

10

G	M8x60	1pc
E	M8x45	2pcs

11

G	M8x60	6pcs
---	-------	------

Components

- 1 x4pcs
- 2 x1pc
- 3 x2pcs
- 4 x1pc
- 5 x10pcs
- 6 x1pc
- 7 x2pcs
- 8 x1pc
- 9 x2pcs

- 10 x1pc
- 11 x1pc
- 12 x4pcs
- 13 x1pc
- 14 x1pc
- 15 x1pc
- 16 x2pcs
- 17 x2pcs
- 18 x1pc
- 19 x1pc

12

H		20pcs
---	--	-------

13

Finish


Note:Now you can tighten all the bolts.

- 20 x2pcs
- L x4pcs
- A x18pcs
- B x9pcs
- C x4pcs
- D x16pcs
- E x23pcs
- F x2pcs
- G x7pcs
- H x20pcs
- I x1pc

1

B	M8x20	2pcs
---	-------	------


2

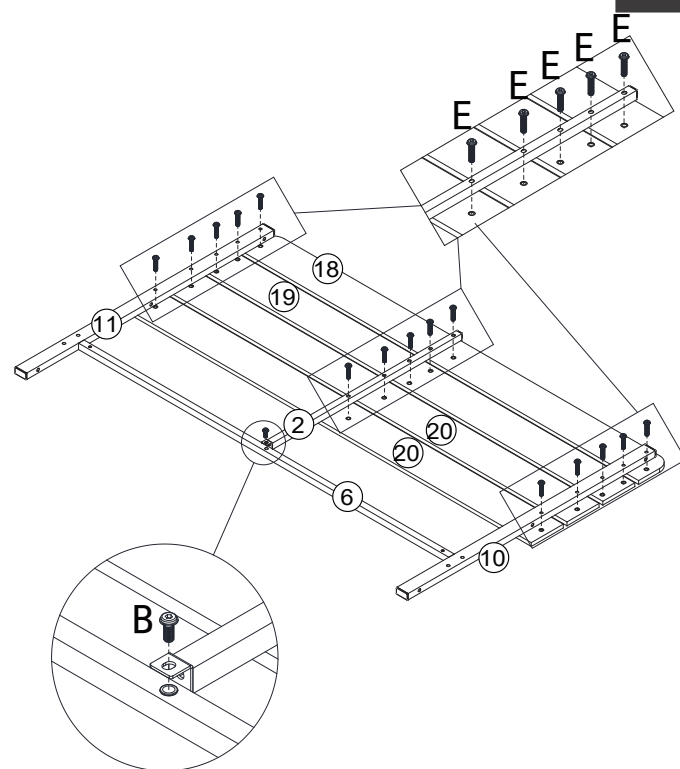

B	 M8x20	1pc	white zinc
E	 M8x35	15pcs	

3


x2

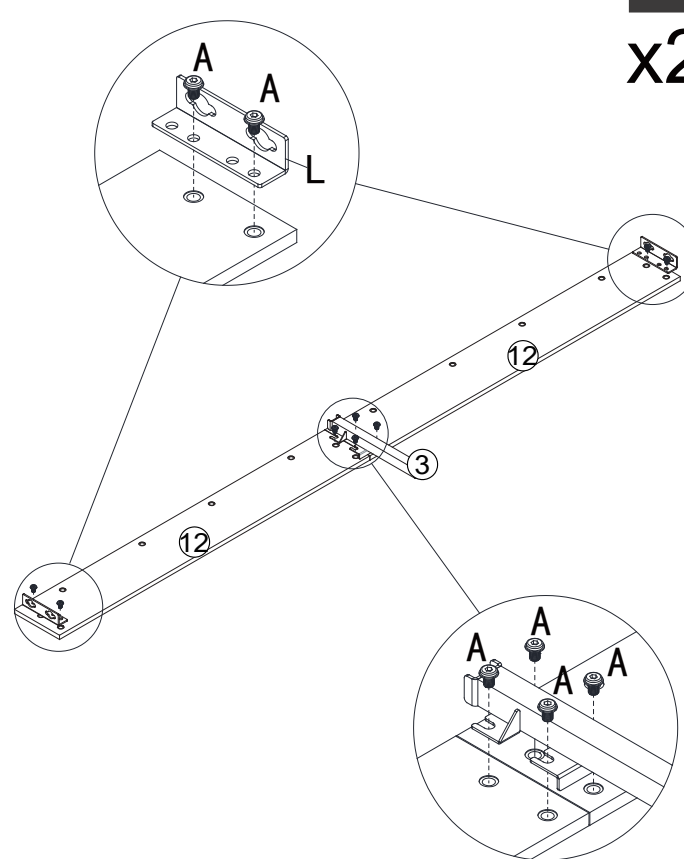

A	 M8x12	16pcs	
---	---	-------	--

6


Tighten screws C

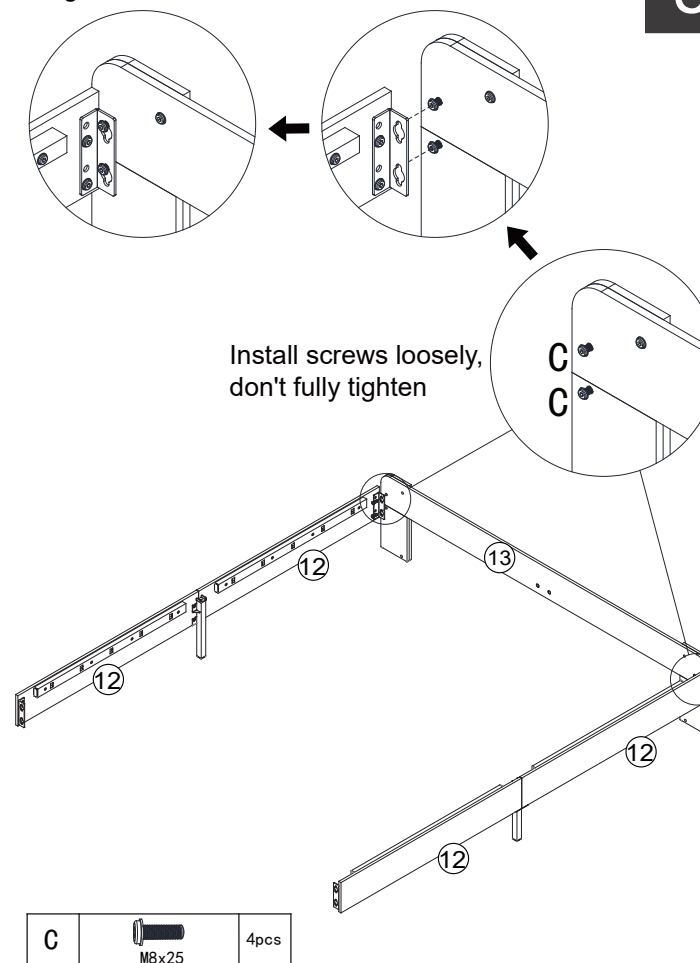

C	 M8x25	4pcs	
---	---	------	--

7


Tighten screws E

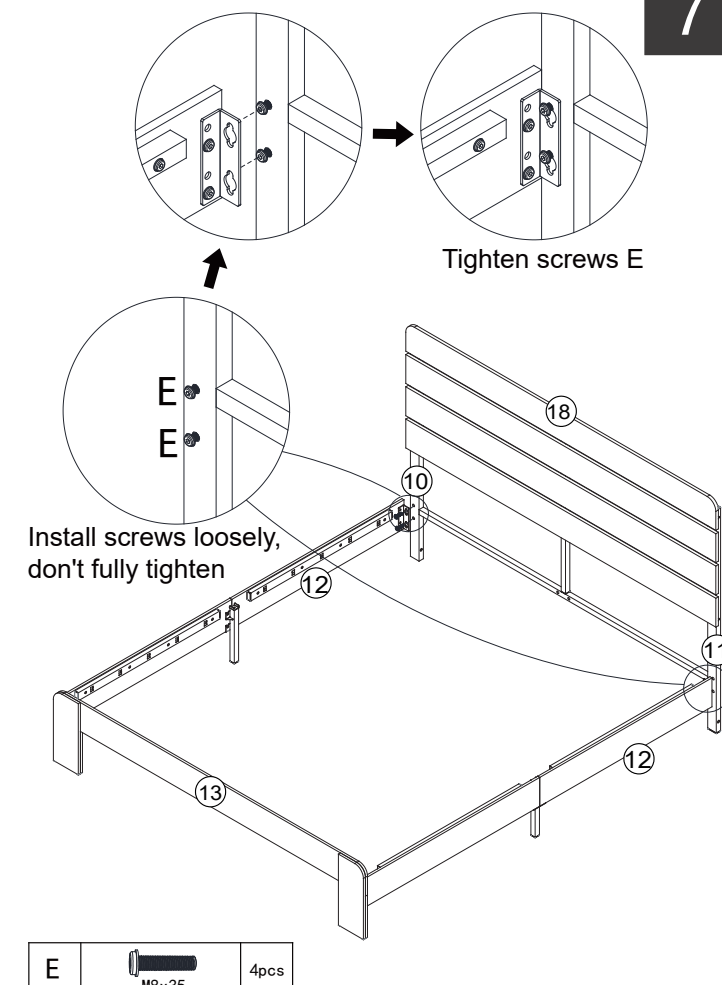

E	 M8x35	4pcs	
---	---	------	--


4

x2

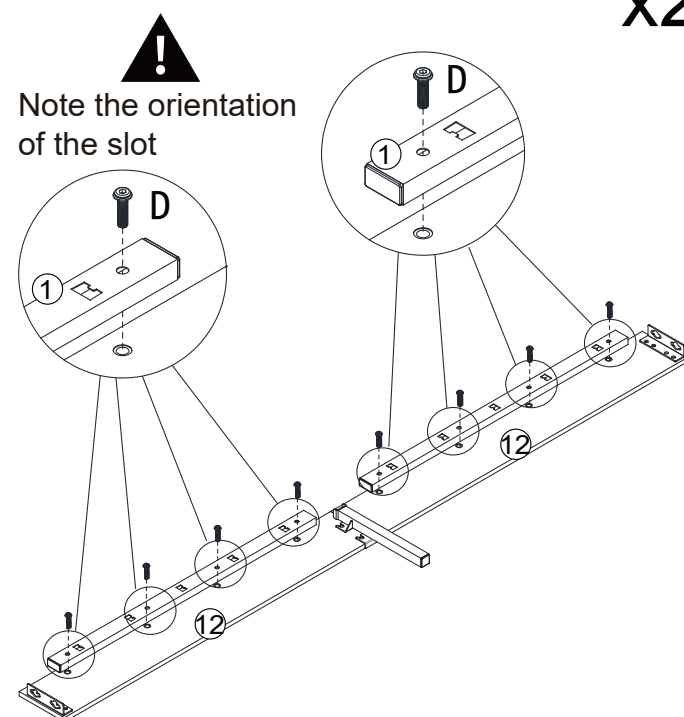


D	 M8x30	16pcs	white zinc
---	---	-------	------------

5

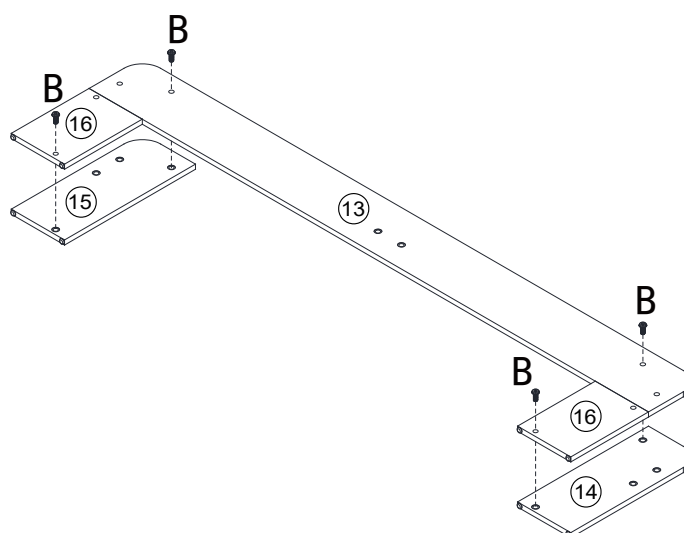

B	 M8x20	4pcs	white zinc
---	---	------	------------


8

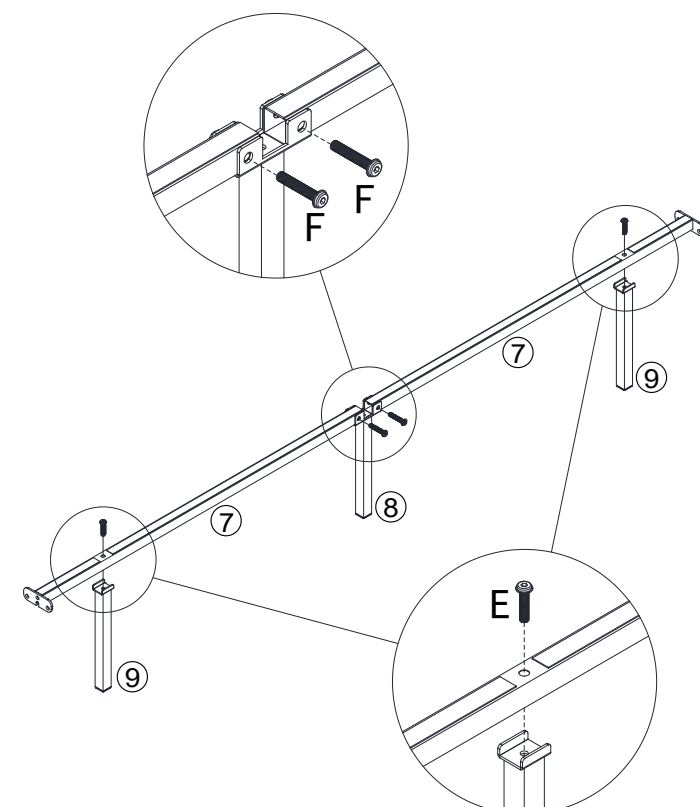

E	 M8x35	2pcs	
F	 M8x45	2pcs	

9

Assemble second

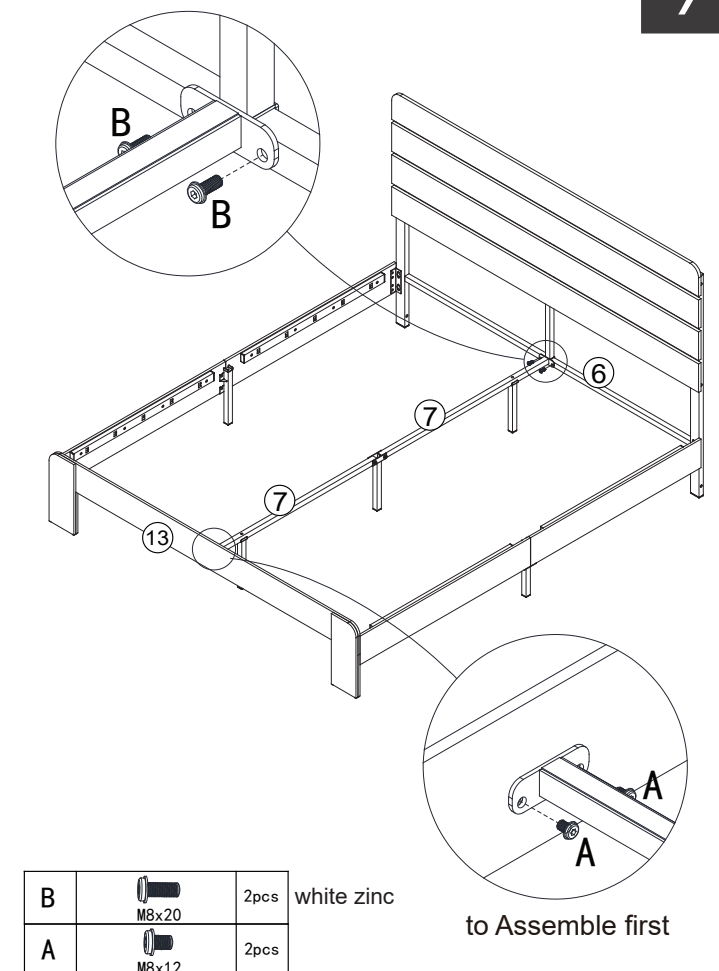

B	 M8x20	2pcs	white zinc
A	 M8x12	2pcs	