









LIST OF FITTINGS:

1	2	3	4	5					
									
Wrench 1 pcs.	Bolt M6x45 4 pcs.	Bolt M6x80 4 pcs.	Barrel nut 8 pcs.						


LIST OF ELEMENTS:

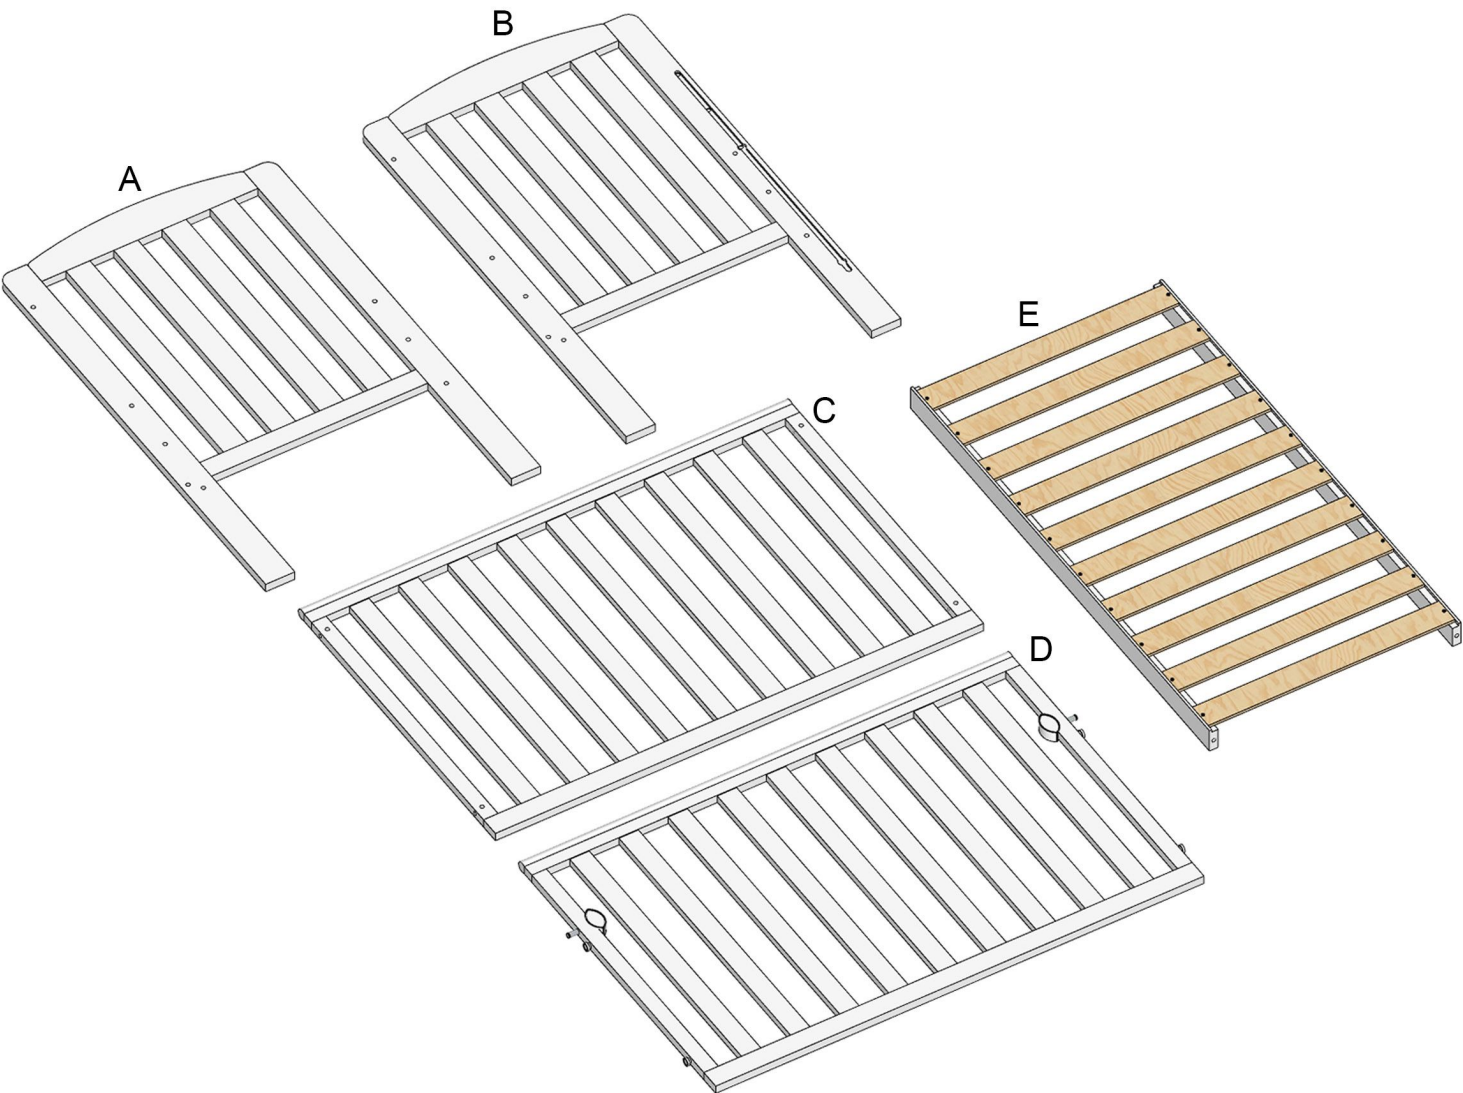


1

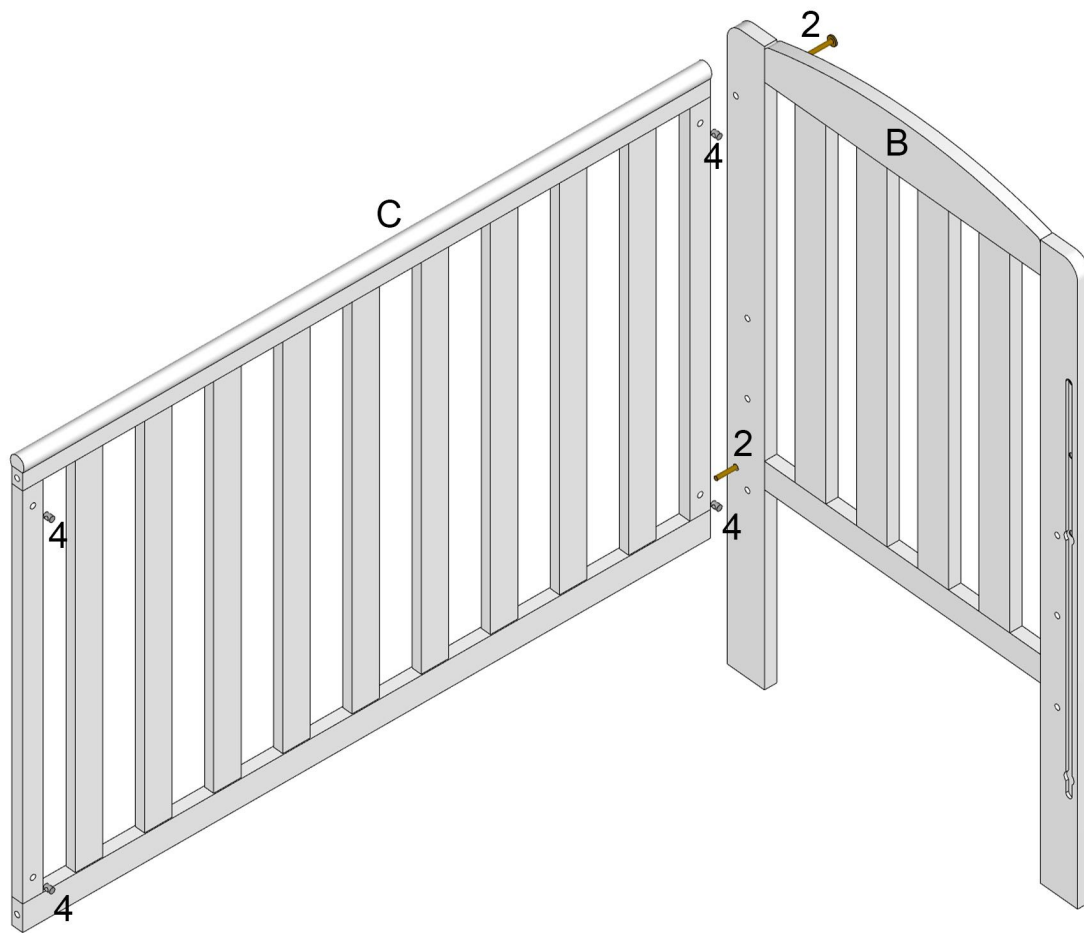

2

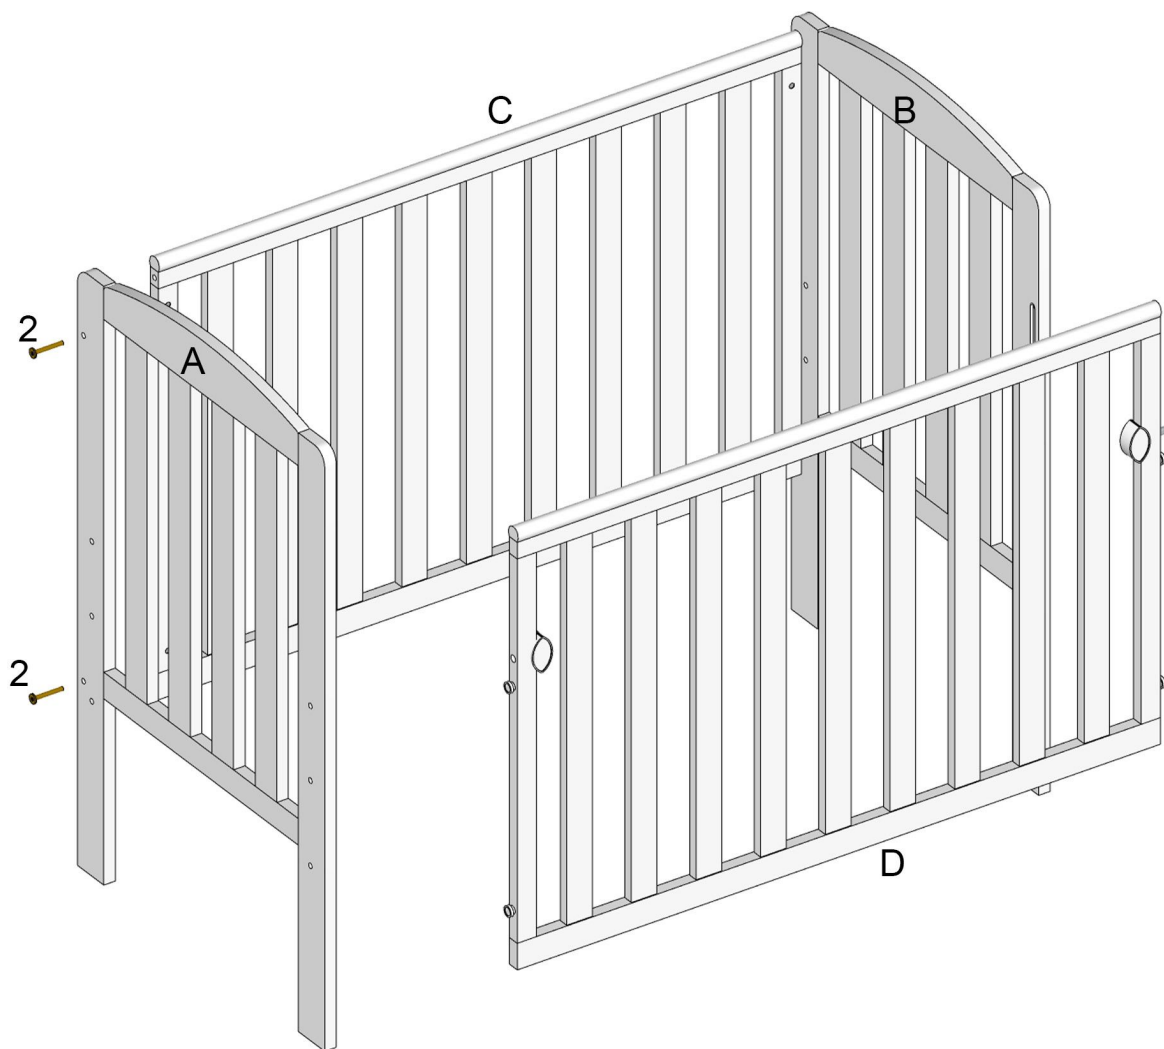

3

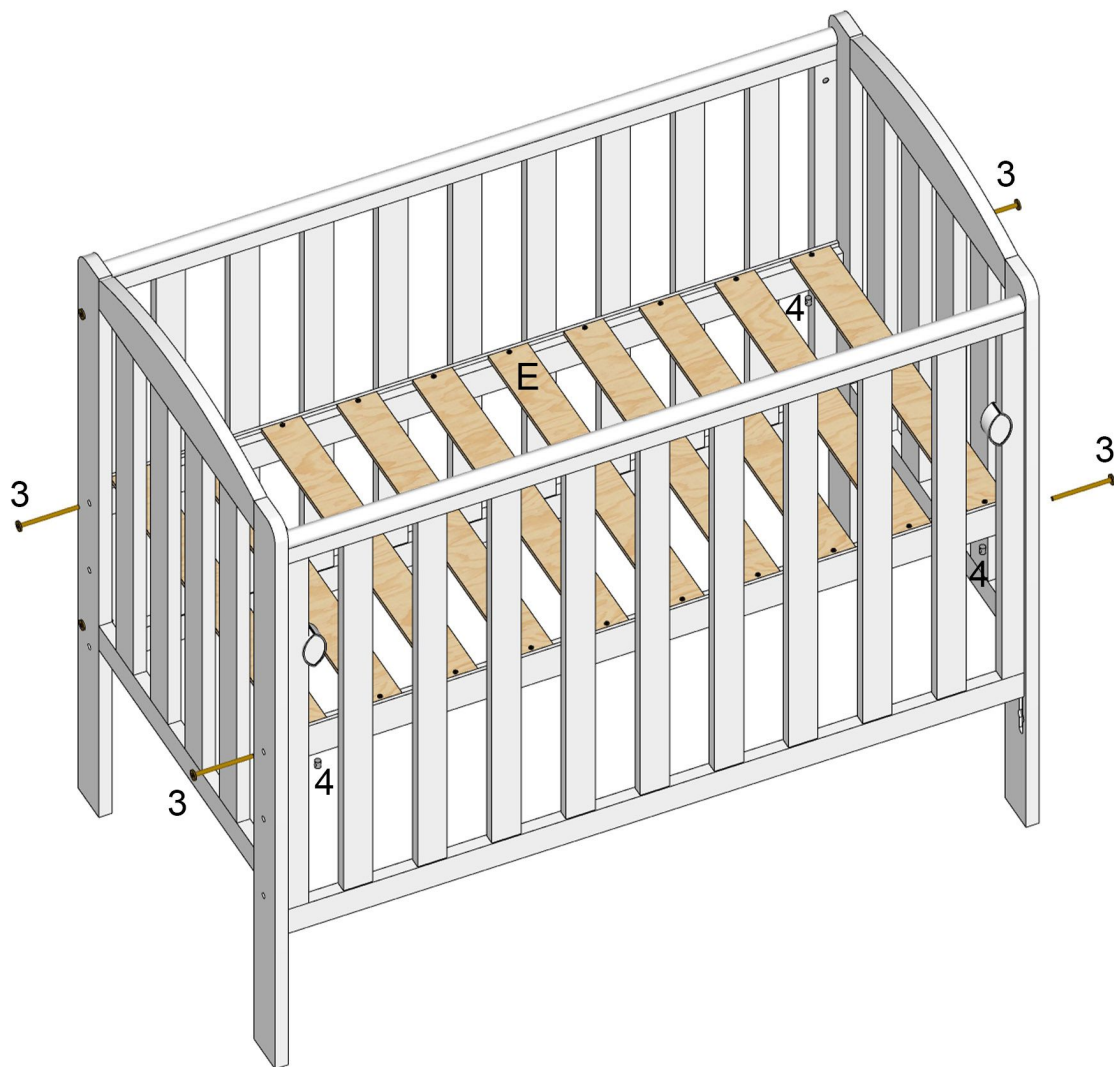

4

ATTENTION!!!

TO LOWER THE SIDE OF THE COT BED, PULL BOTH MECHANISMS AT THE SAME TIME, THEN MOVE SIDE. TO USE THE COT BED THE SIDE MUST BE LOCKED.

