

# ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 4105

ITEM DESCRIPTION : BEDSIDE



1

Reverse the bedside top & place the leg as shown & align the leg to match the apron.




2

Place the bolt & washer in the cut out & tighten it with allen key provided as in Fig1.



3

Fix the other leg set in the similar way

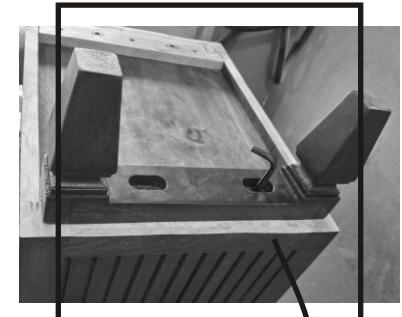

4

Reverse the bedside straight. Now your bedside is ready for use



Fig. 1

