

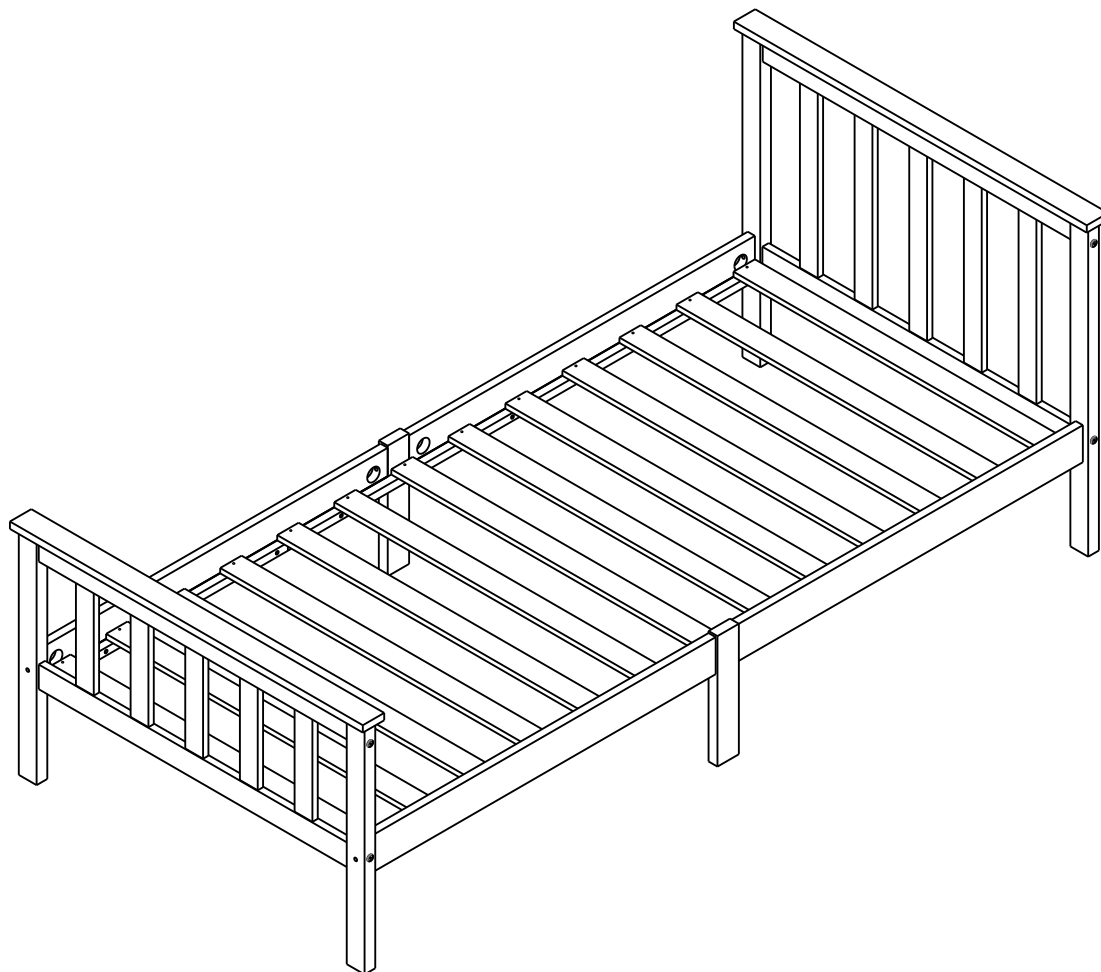








A	 M6X80mm	4
B	 M6X70mm	6
C	 φ 8X30mm	64
D	 φ 6X90mm	8
E	 4mm	1
F	 φ 4X30mm	60

G	 M6X140mm	2
H	 M8	8
I	 M8	8
J	 M8	1
K	 M8	8

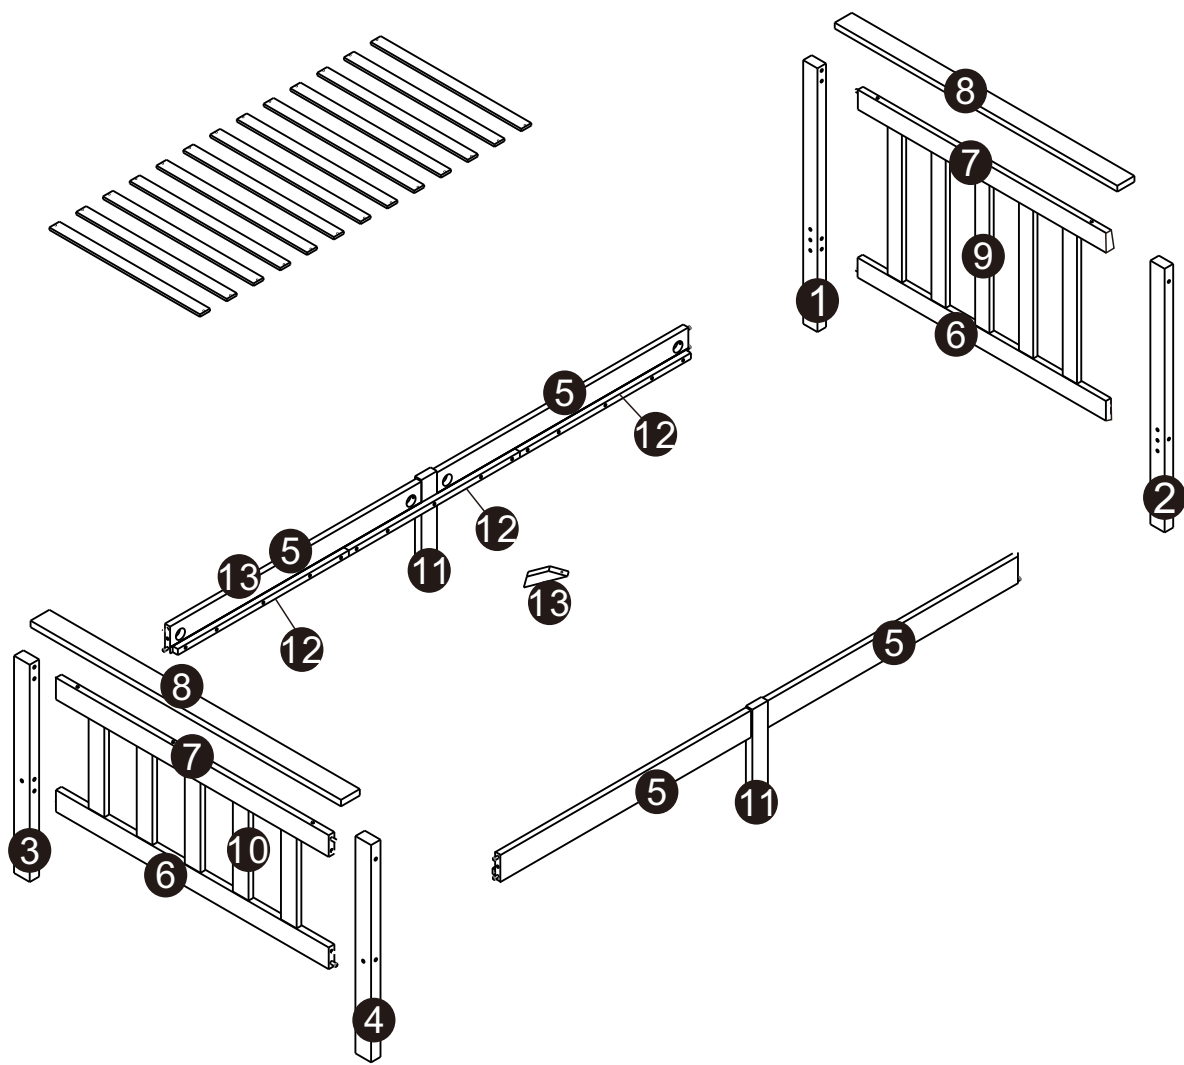


step:1

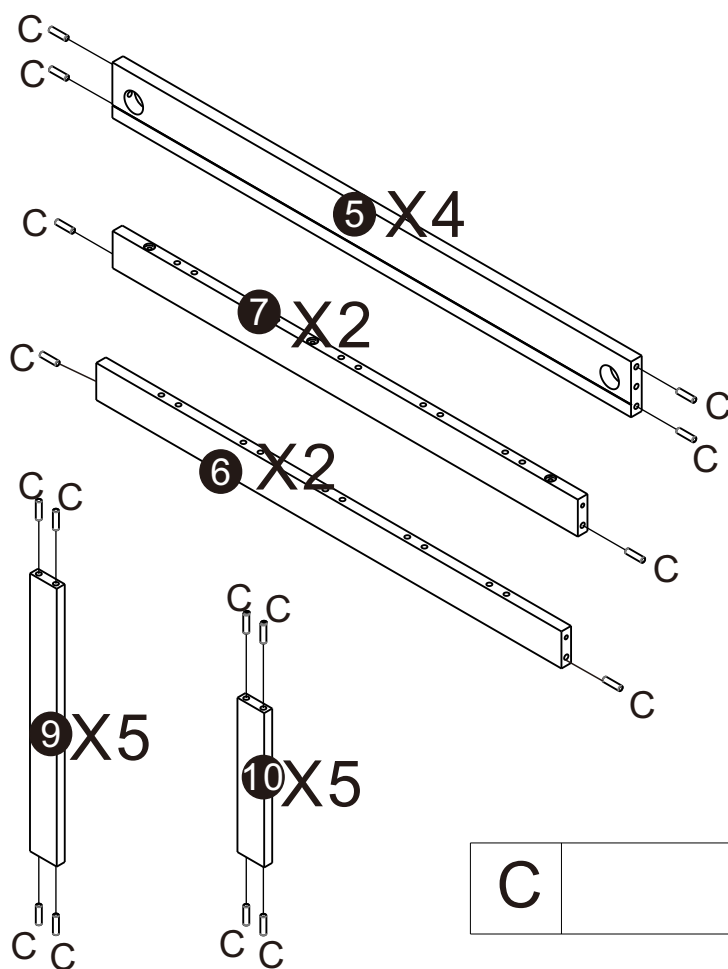



C	 $\phi 8 \times 30 \text{mm}$	64
---	--	----

step:2

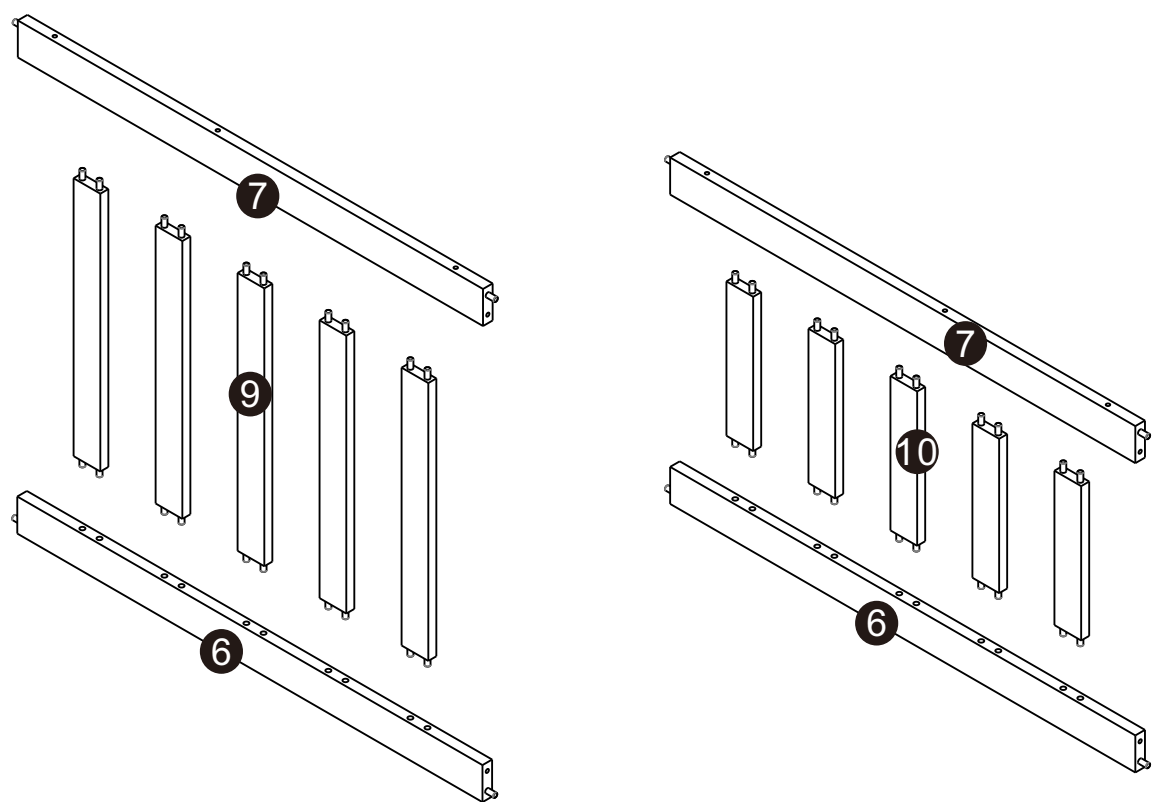



step:3

D	 $\phi 6 \times 90 \text{mm}$	8
---	---	---

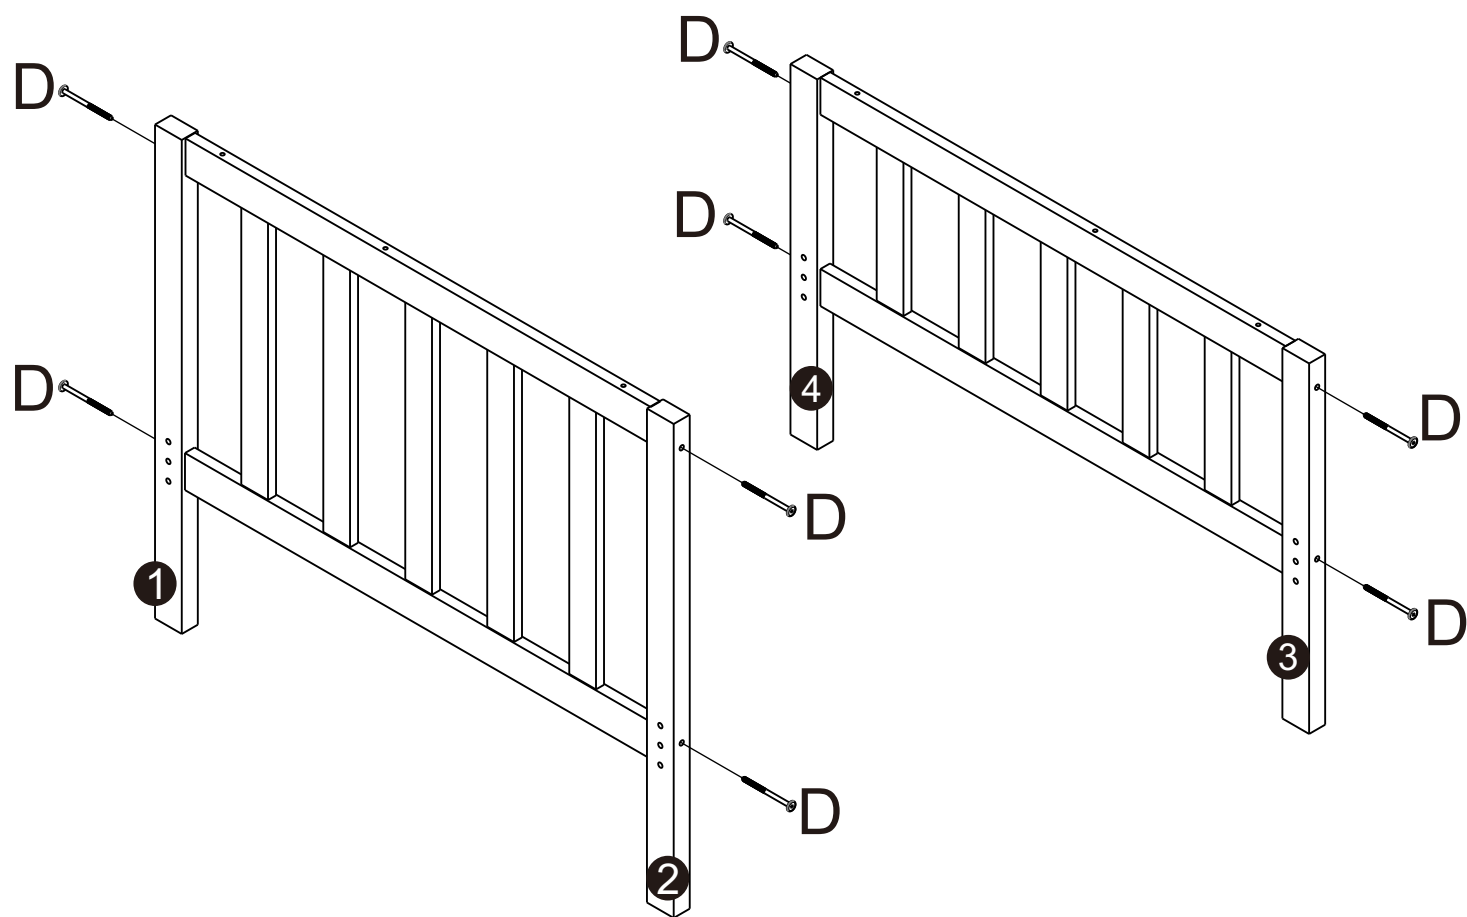


step:4

B	 M6X70mm	6
---	---	---

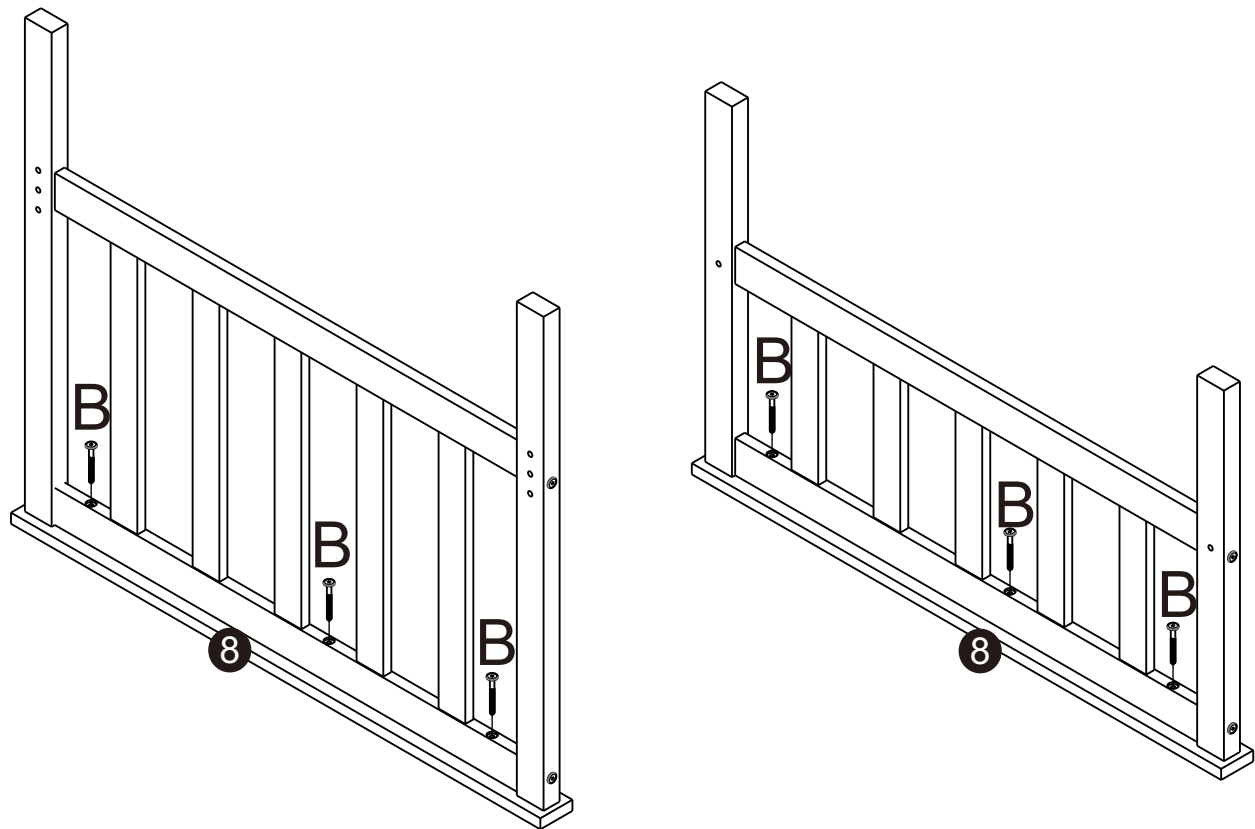



step:5

G	 M6X140mm	2
H	 M8	4
I	 M8	4
J	 M8	1
K	 M8	4


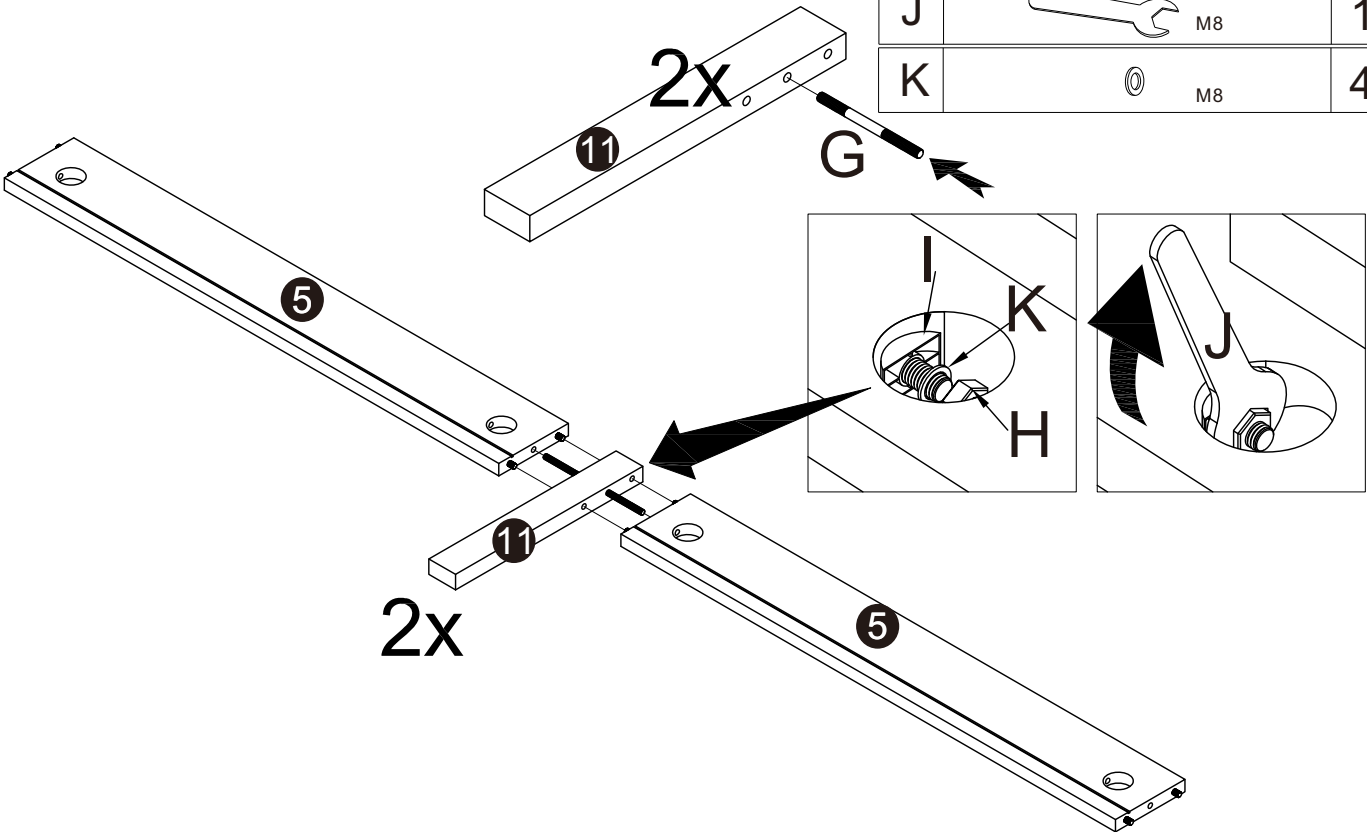



step:6

F	 $\phi 4 \times 30 \text{mm}$	30
---	--	----

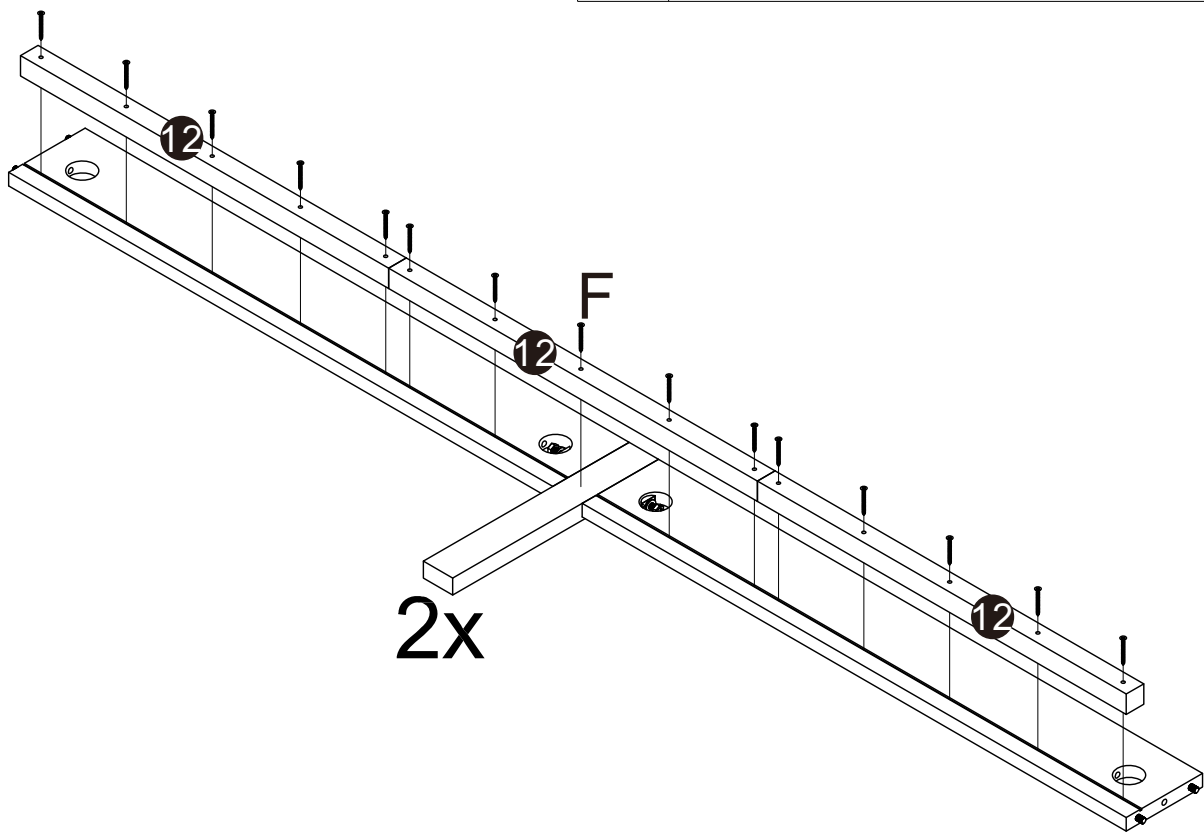



step:7

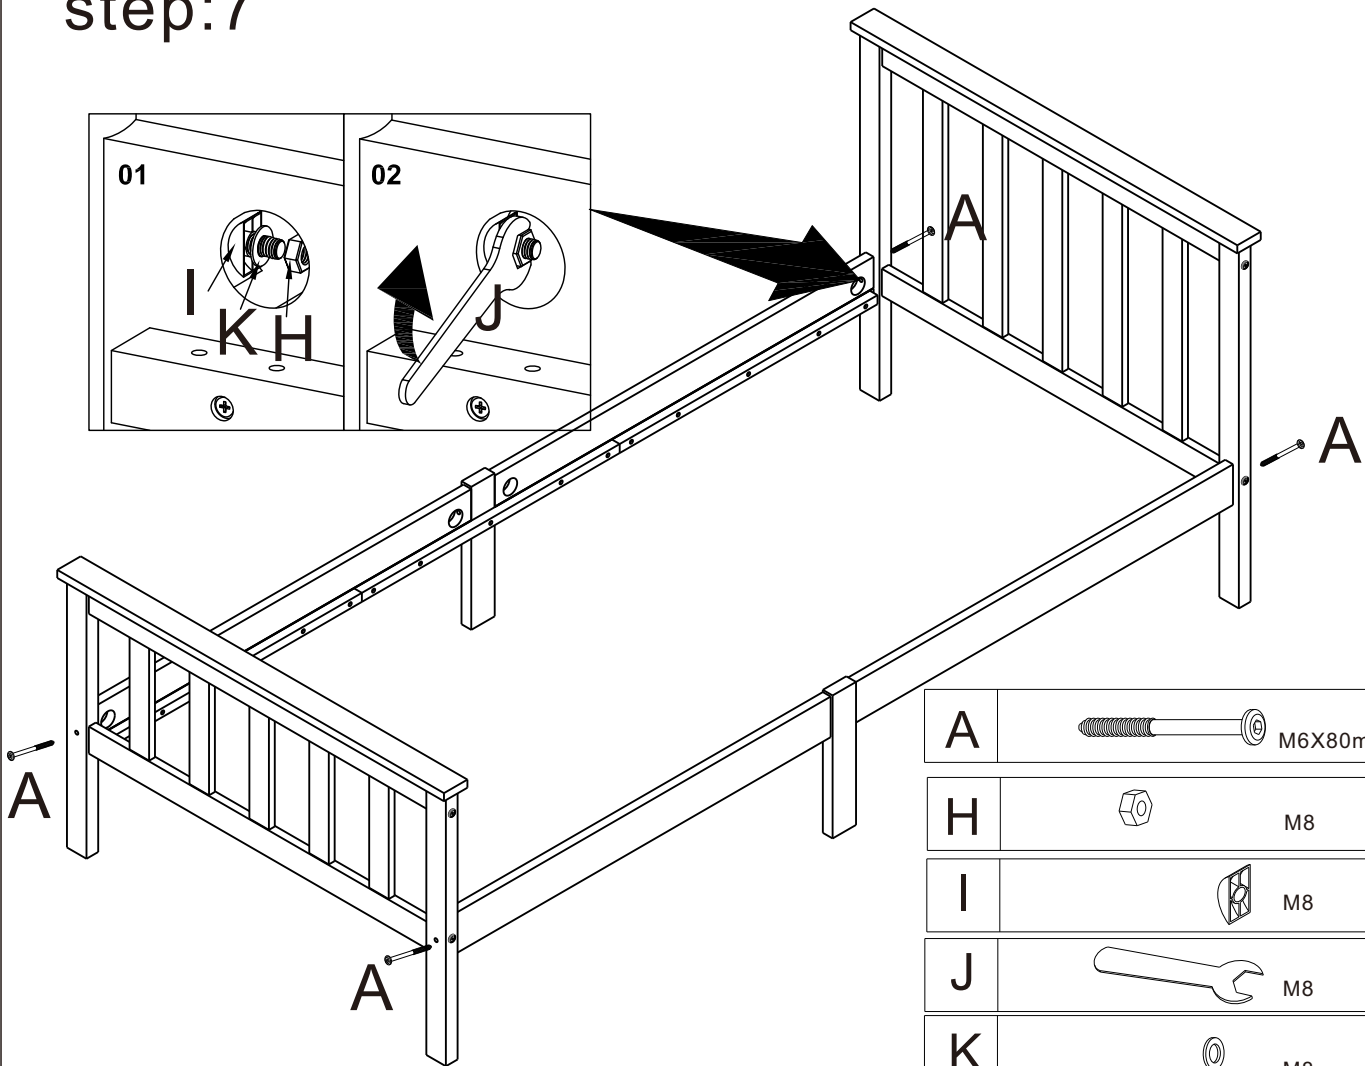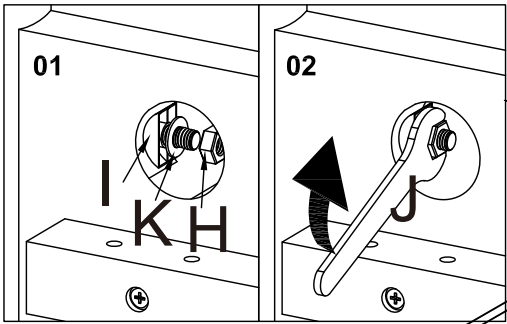



A	 M6X80mm	4
H	 M8	4
I	 M8	4
J	 M8	1
K	 M8	4


step:8

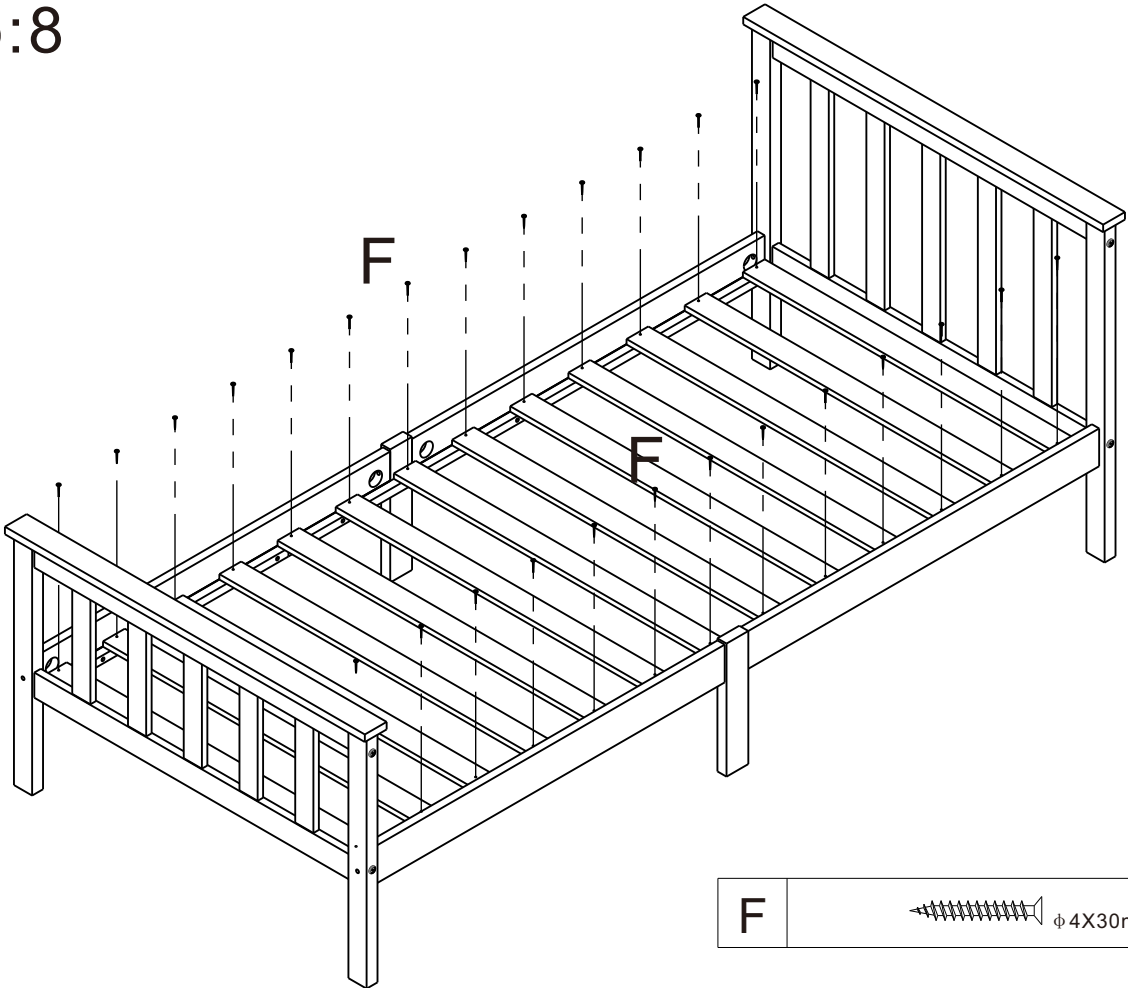

F	 $\phi 4 \times 30 \text{mm}$	26
---	--	----

step:9

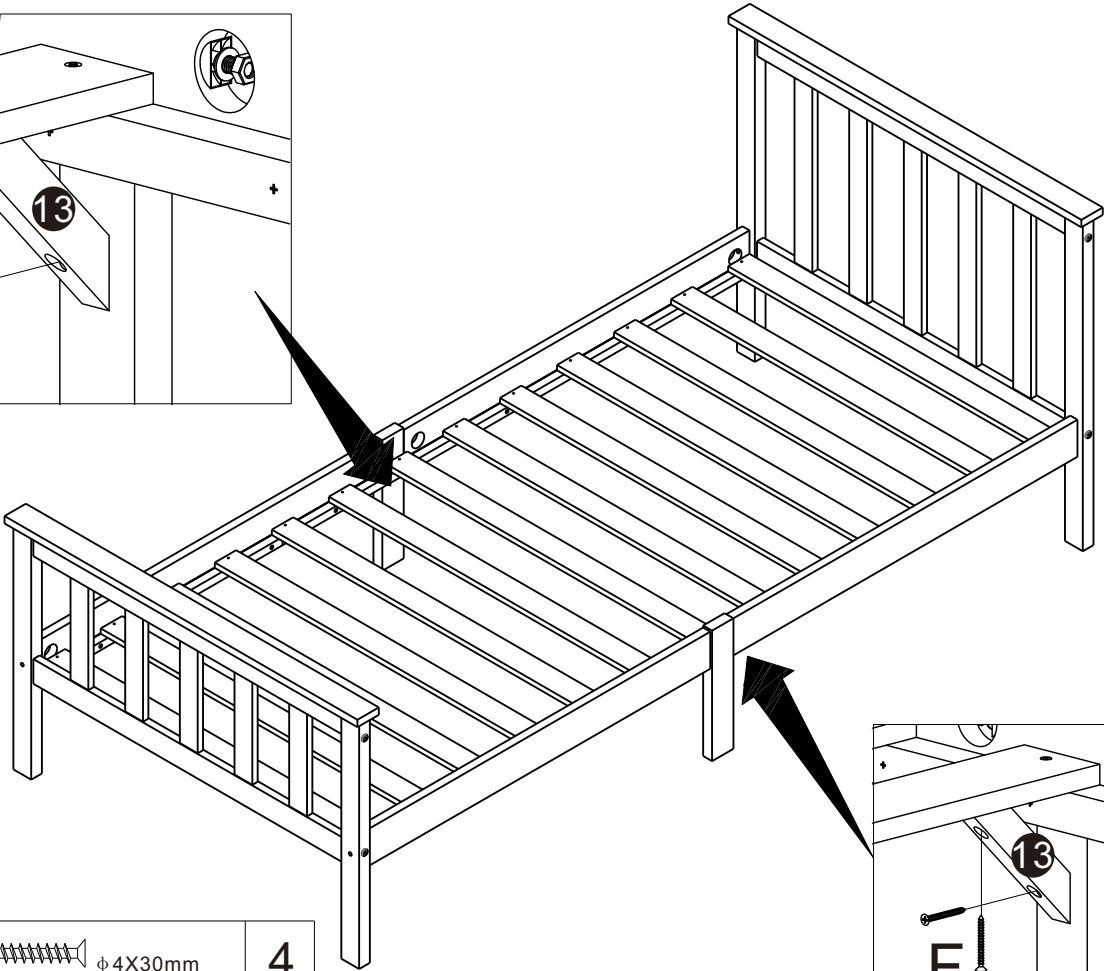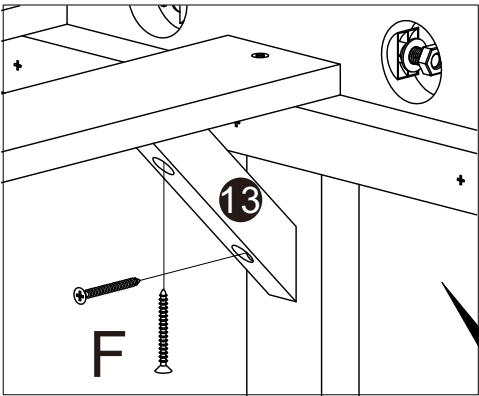

F	 $\phi 4 \times 30 \text{mm}$	4
---	--	---

