


A line drawing of a modern office chair. It features a high, contoured backrest with a separate headrest section. The seat is wide and slightly curved. Armrests are attached to the sides of the seat. The chair is mounted on a five-star base with casters. A small adjustment lever is visible on the left side of the seat.

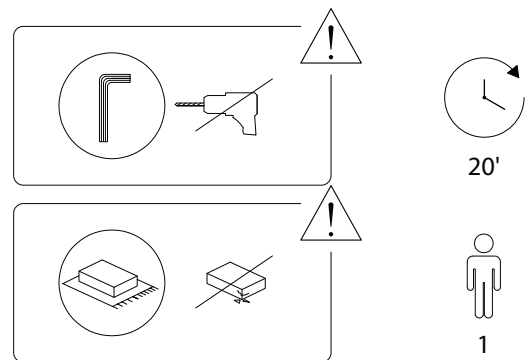


2/11

This exploded view diagram illustrates the assembly of a chair. The components are numbered 1 through 10, with some parts having multiple quantities indicated. The assembly sequence is as follows:





- Base and Casters:** The assembly begins with the base (1) and casters (2). The casters are attached to the base using screws (1).
- Seat and Backrest:** The seat (6) and backrest (5) are then attached to the base. The backrest is secured with screws (1) and a pin (4).
- Armrests:** The armrests (8R and 8L) are attached to the sides of the seat using screws (1) and pins (4).
- Headrest:** The headrest (9) is attached to the top of the backrest using a pin (4).
- Final Assembly:** The final step is attaching the seat (6) to the base (1) using a pin (4).

The diagram shows the following quantities for each part:

- 1: 1 (Base)
- 2: 2 (Casters)
- 3: 1 (Bracket)
- 4: 1 (Pin)
- 5: 1 (Backrest)
- 6: 1 (Seat)
- 7: 1 (Bracket)
- 8R: 1 (Armrest)
- 8L: 1 (Armrest)
- 9: 1 (Headrest)
- 10: 1 (Caster)

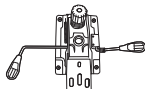1  x 5	2  x 5	3  x 1	4  x 1
5  x 1	6  x 1	7  x 1	8R  x 1
8L  x 1	9  x 1	10  x 1	
A  M6 x 22 x 4	B  M8 x 25 x 3	C  M6 x 32 x 6	
D  M6 x 13 x 2	E  M6 x 12 x 5	F  x 1	

463/ORYN/160226/

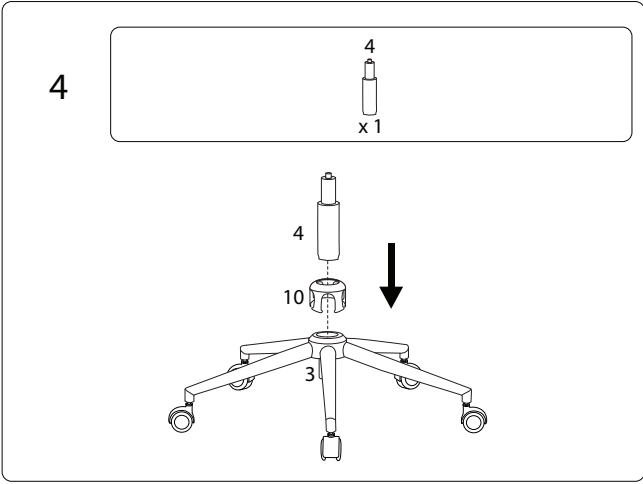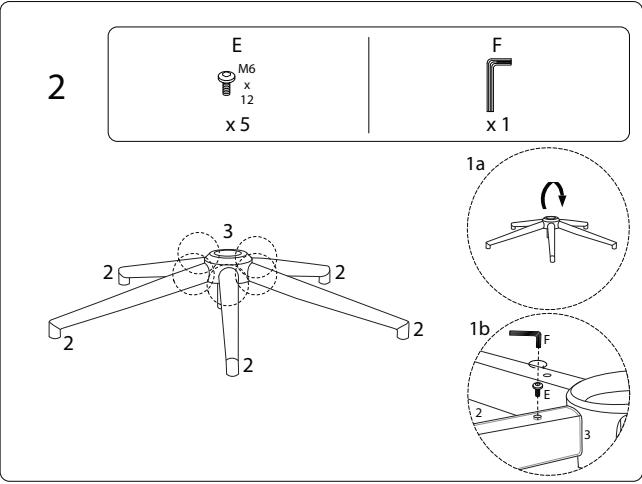
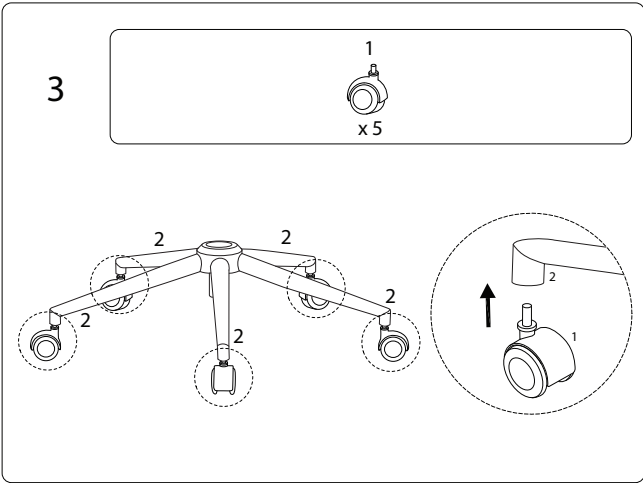
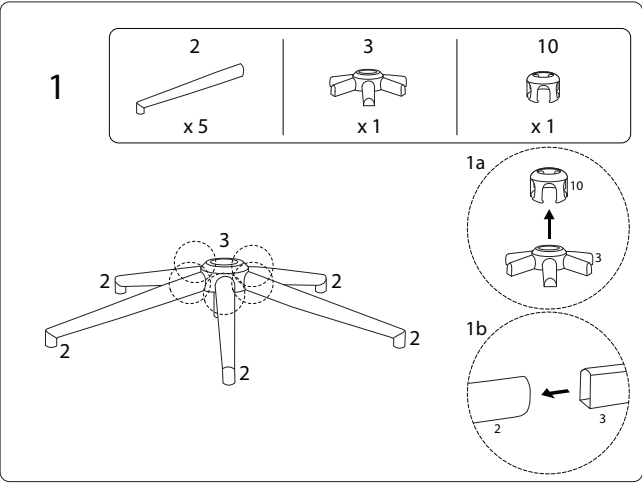


5/11

2463/ORYN/160226/

6/11

2463/ORYN/160226/

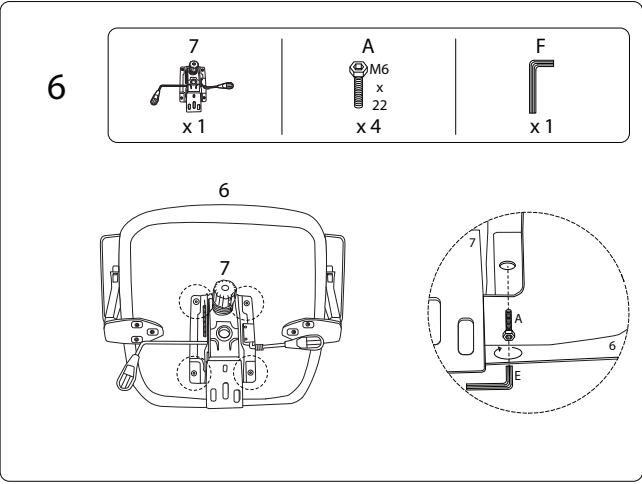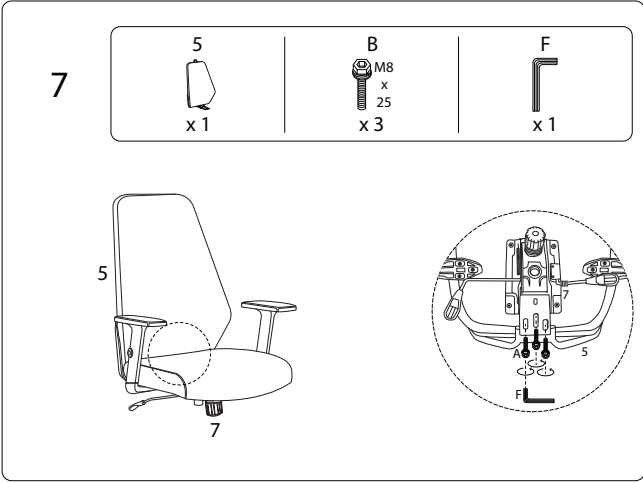
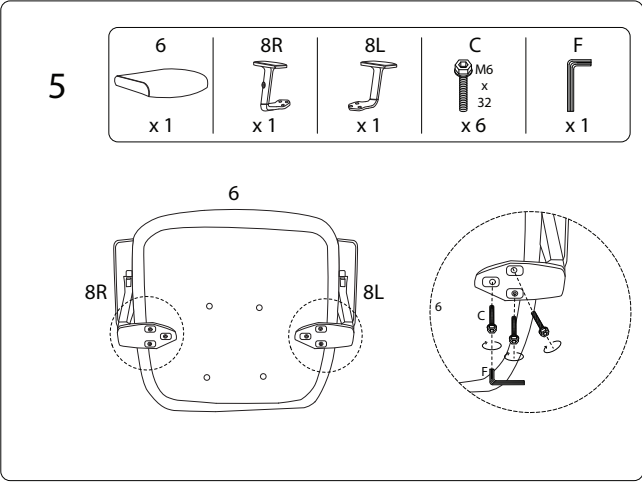


7/11

2463/ORYN/160226/

8/11

2463/ORYN/160226/

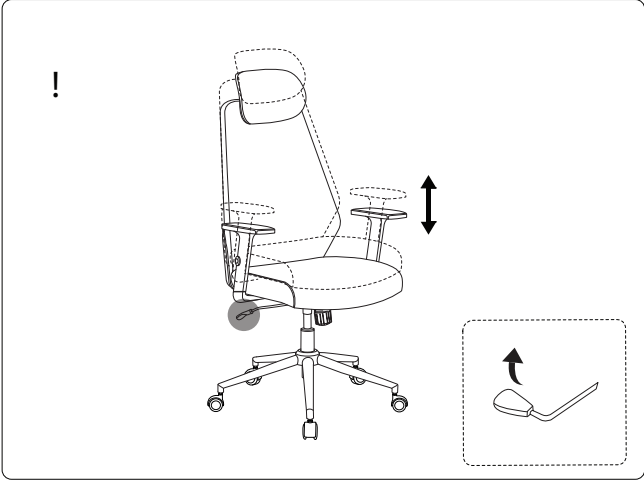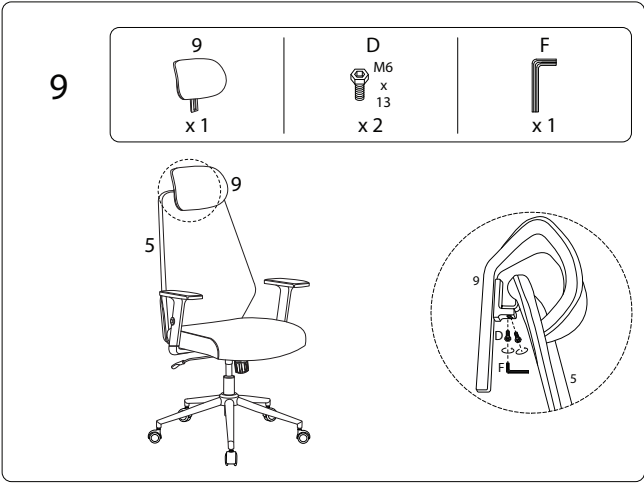


9/11

2463/ORYN/160226/



10/11

2463/ORYN/160226/

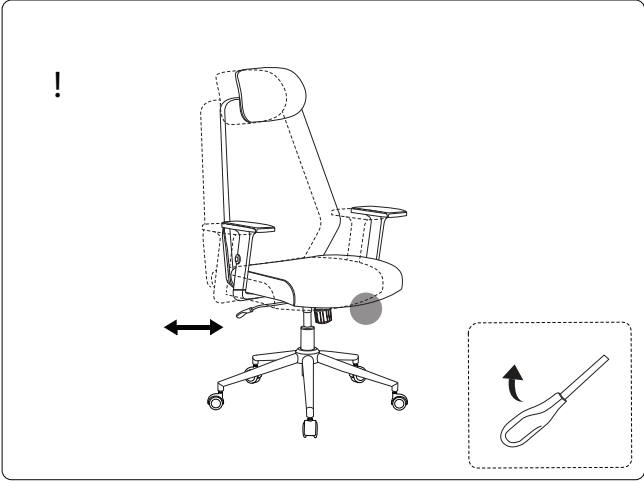

11/11

2463/ORYN/160226/