

Product Name:Schminktisch Mereta

Tools for Installing: Persons for Installing




①

Hardware List

	A	Ø15x9.5mm	17pcs
	B	M6x35mm	17pcs
	C	M3x12mm	16pcs
	D	M4x35mm	6pcs
	E		2pcs
	F		1pcs
	G	M4x20mm	2pcs
	H		4pcs

②

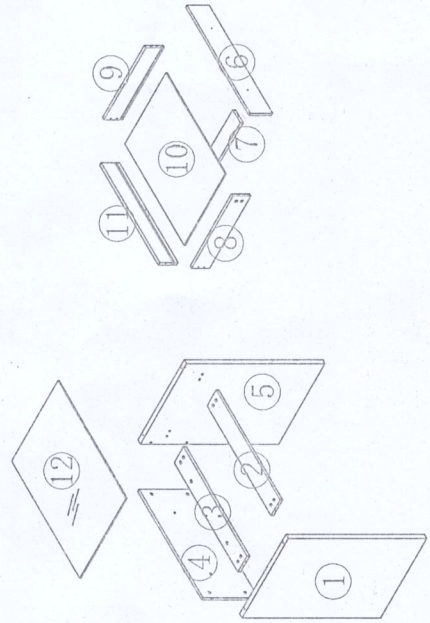

③

	①	1PC		②	1PC		③	1PC		④	1PC
	⑤	1PC		⑥	1PC		⑦	1PC		⑧	1PC
	⑨	1PC		⑩	1PC		⑪	1PC		⑫	1PC

Product Name:Schminktisch Mereta

Tools for Installing: Persons for Installing




①

Hardware List

	A	Ø15x9.5mm	17pcs
	B	M6x35mm	17pcs
	C	M3x12mm	16pcs
	D	M4x35mm	6pcs
	E		2pcs
	F		1pcs
	G	M4x20mm	2pcs
	H		4pcs



②

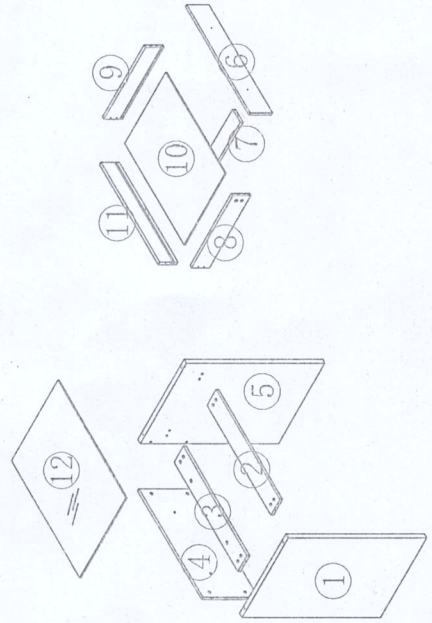


③

	①	1PC		②	1PC		③	1PC		④	1PC
	⑤	1PC		⑥	1PC		⑦	1PC		⑧	1PC
	⑨	1PC		⑩	1PC		⑪	1PC		⑫	1PC

STEP1:

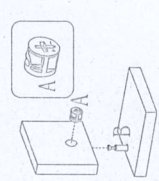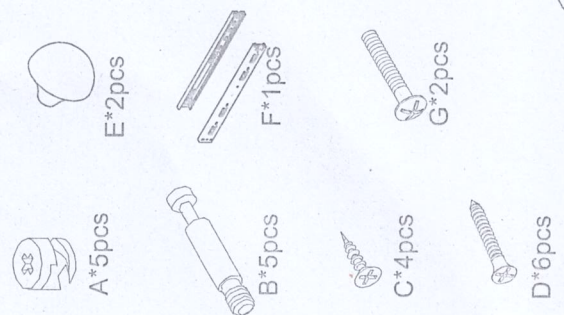


Screw the B (Steel of Three-In-One) to the plastic bottom (end steel of Three-In-One) inside of the board, and use B to connect with the other board.


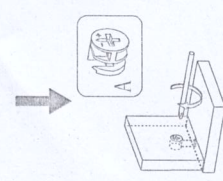


Insert the A (Round Nut of Three-In-One) to the hole of the connected board, screw it 180 degrees clockwise to be fixed.

STEP2:

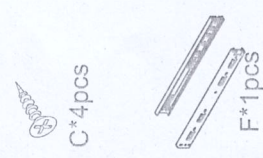


STEP3:

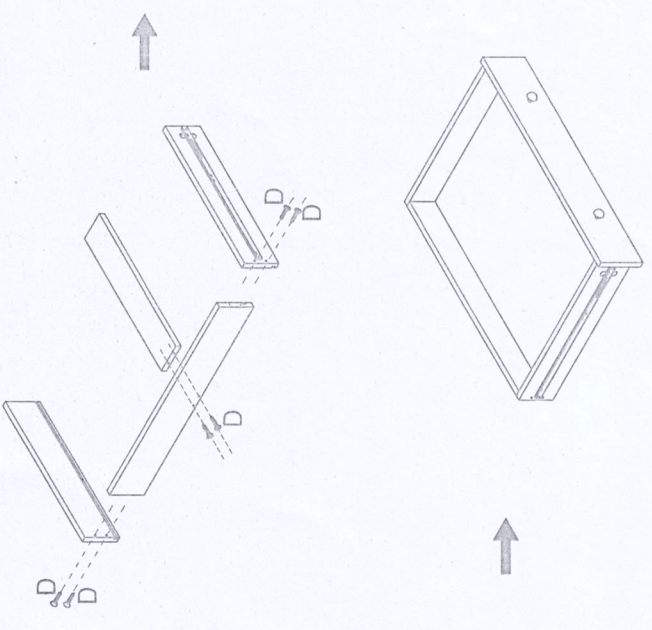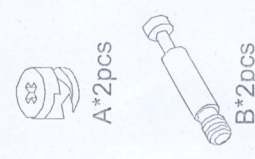


Press and hold the slide switch and remove the small section slide to install on the drawer side panel

Large section slides mounted on side panels

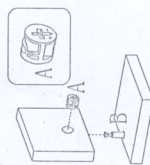

Screw the B (Steel of Three-In-One) to the plastic bottom(end steel of Three-In-One) inside of the board, and use B to connect with the other board.

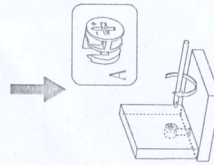


Insert the A(Round Nut of Three-In-One) to the hole of the connected board, screw it 180 degrees clockwise to be fixed.


STEP4:



A*4pcs

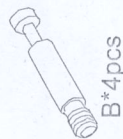


B*4pcs

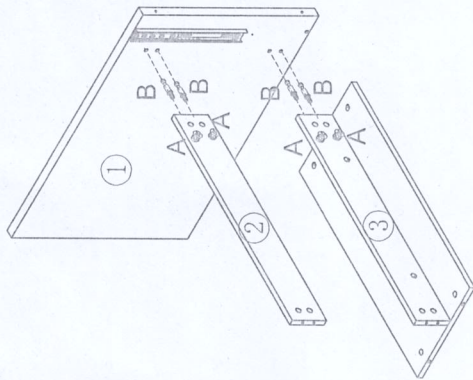


STEP5:



A*6pcs

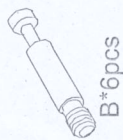


B*6pcs

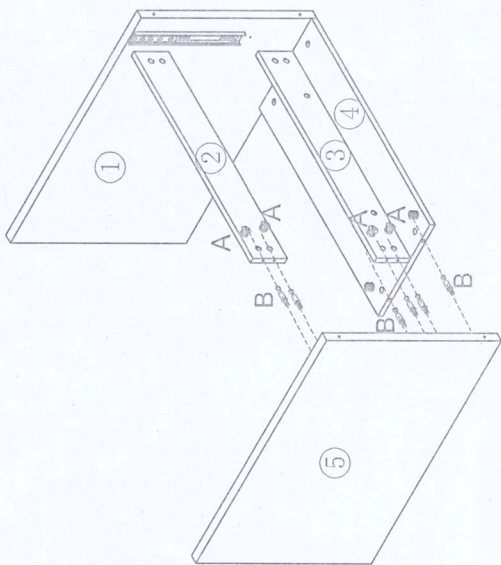

STEP6:



H*4pcs

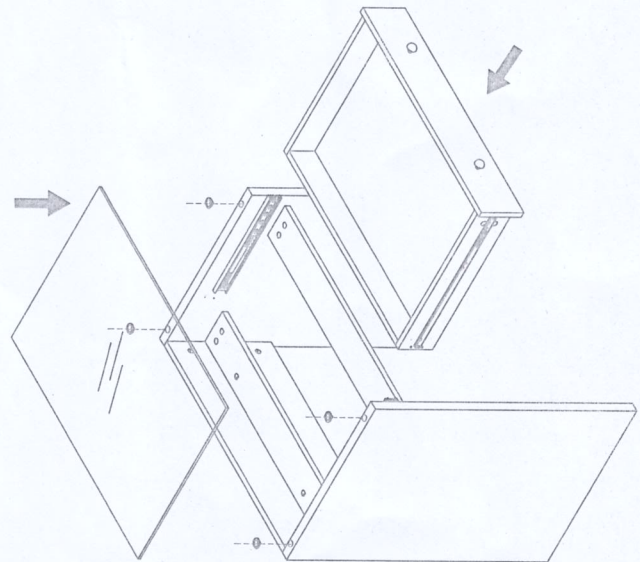

STEP7:

