


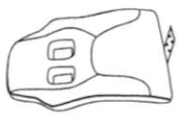
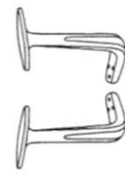
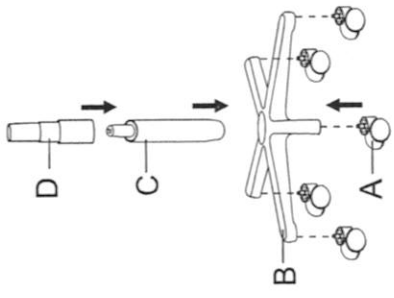
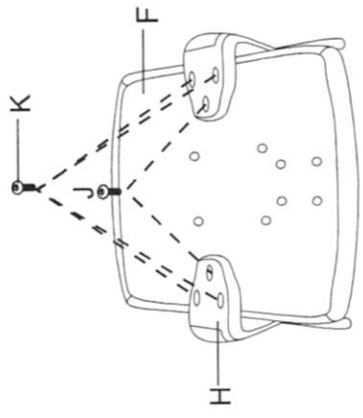
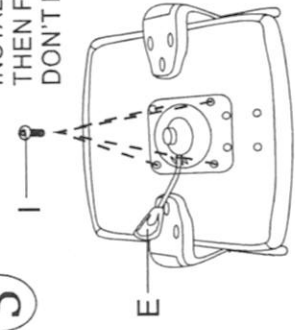
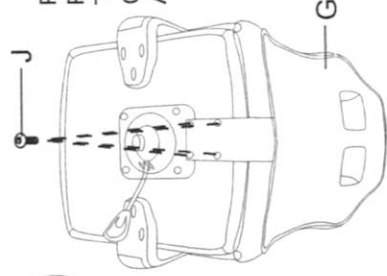
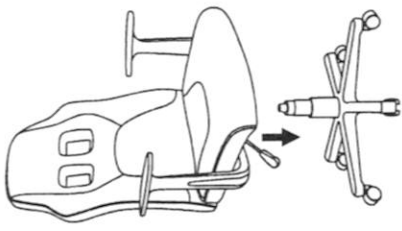


AUFBAUANLEITUNG

A*5		B*1	
C*1		D*1	
E*1		F*1	
G*1		H*1(L&R)	
I*4	 M6*20MM	J*6	 M6*30MM
K*4	 M6*35MM	L*1	

1 	2 
3 WARNING: INSTALL STEP 3 FIRST, THEN FOLLOWED BY STEP 4, DON'T REVERSAL 	4 PLEASE NOTE: THE METAL PART OF BACKREST ON THE MECHANISM (E) IS CORRECT WHEN SCREWS ARE ASSEMBLED. 
5 	6 