


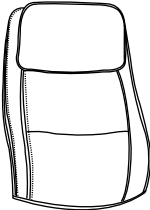
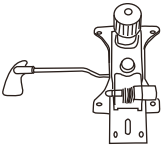





Assembly Instructions

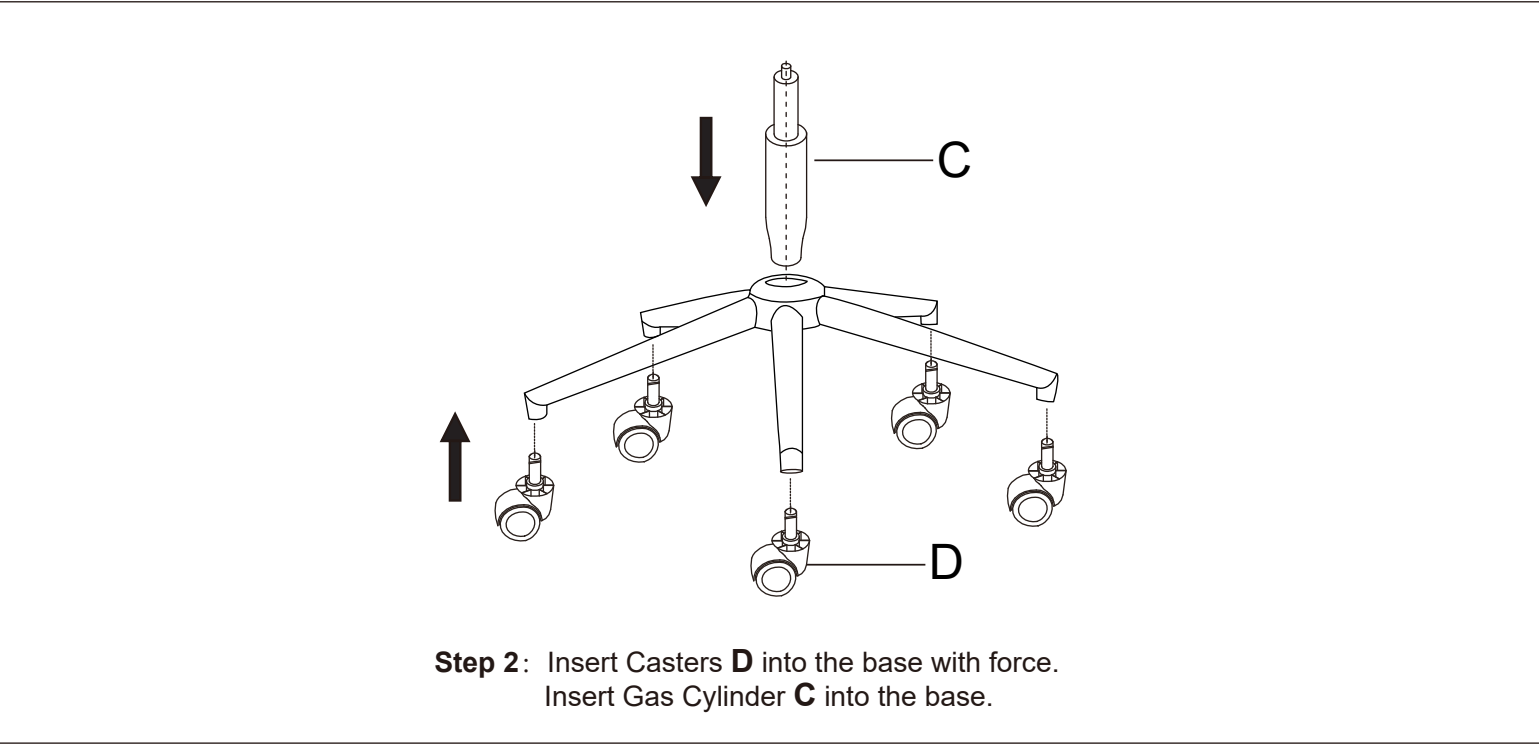


PARTS CHECKLIST						
						
Ax1	Cx1	Ex1	Fx1	Gx5	Hx2 (L/R)	Ix4 (M6x20mm)
						
Jx8 (M6x30mm)	Kx3 (M8x20mm)	Lx5 (M6x14mm)	Mx1	Nx1	Ox6 (M6x20mm)	Px2

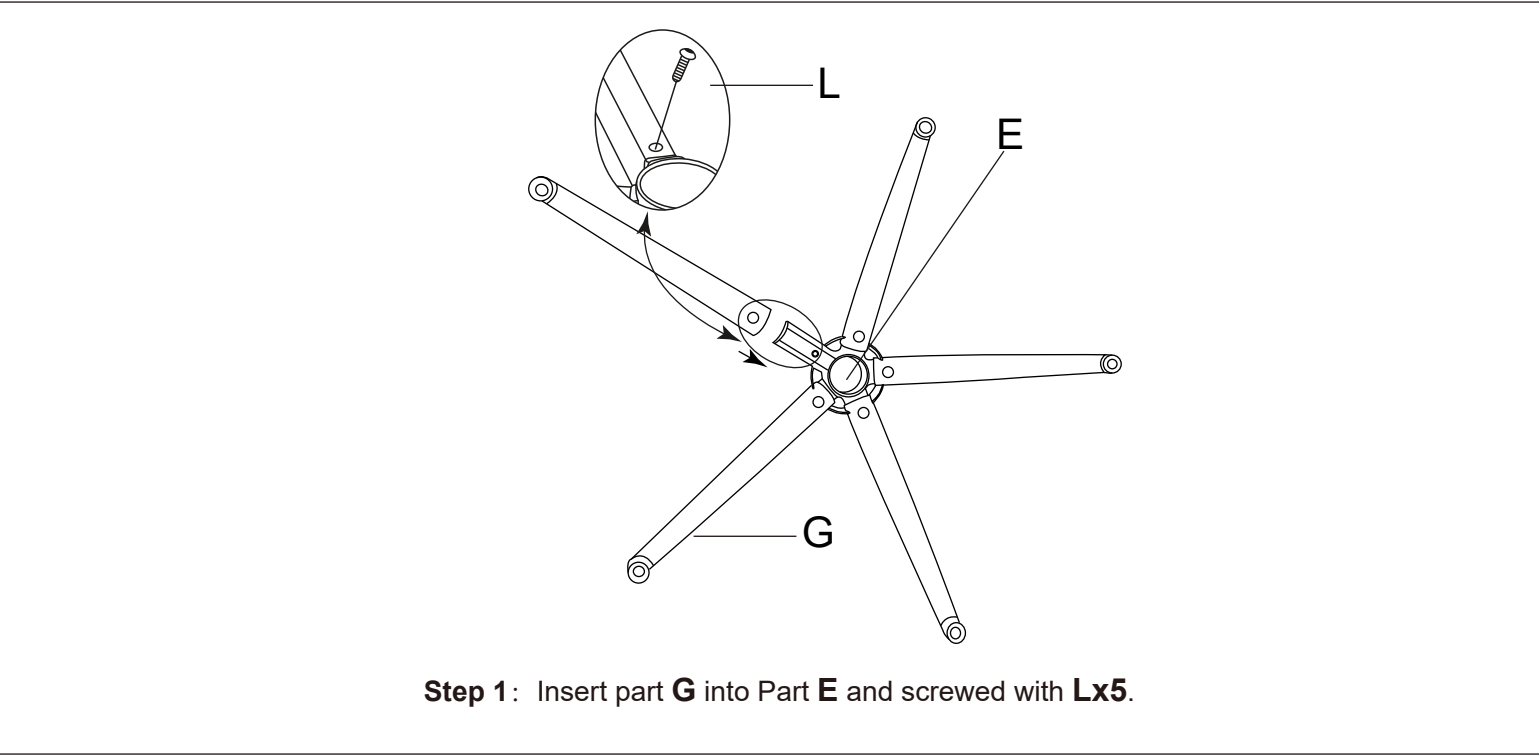


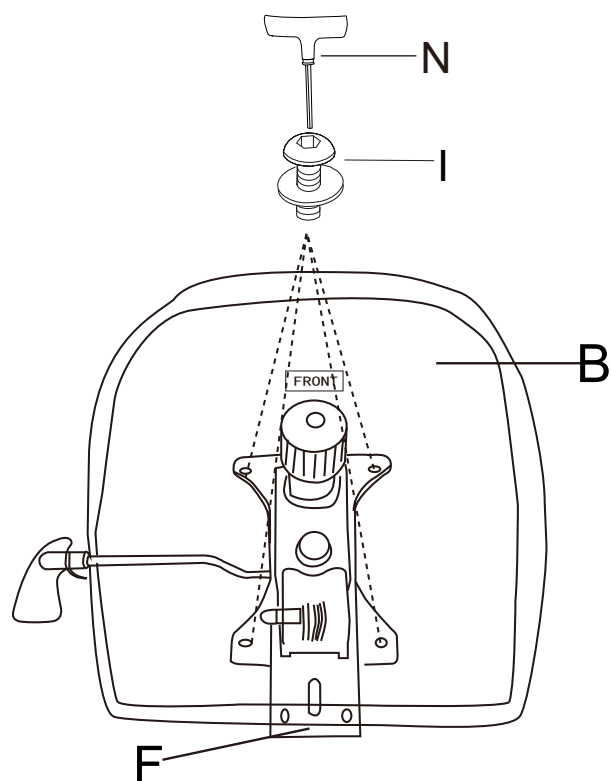


Step 3: Assemble Seat Mechanism **F** with Seat **B** via Screws **Ix4**.
Turn the screws and finish with Allen Wrench **N**.

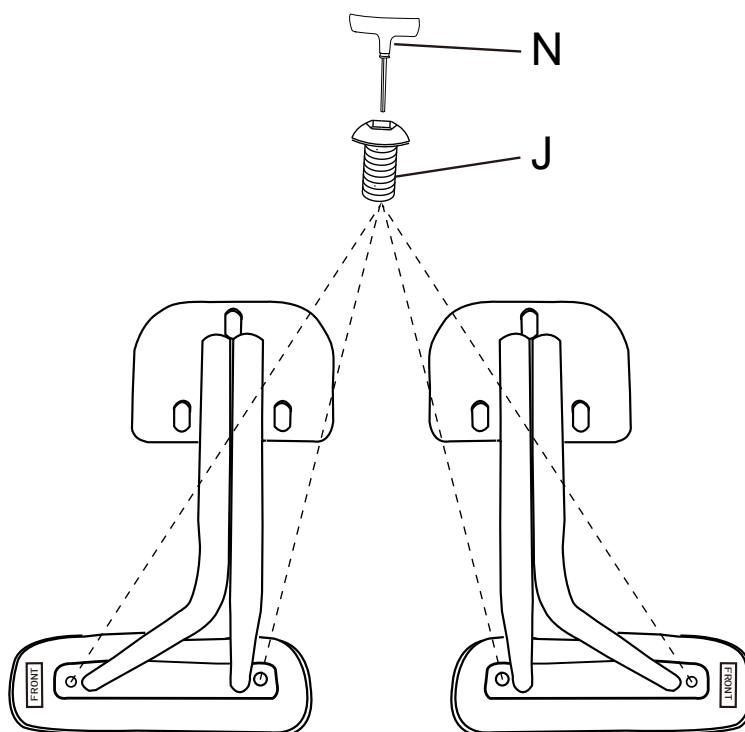


Step 4: Assemble the Armrest Iron Frame **Hx2** with Armrest upholstery **Px2** via Screws **Jx4**.
Turn the screws and finish with Allen Wrench **N**.

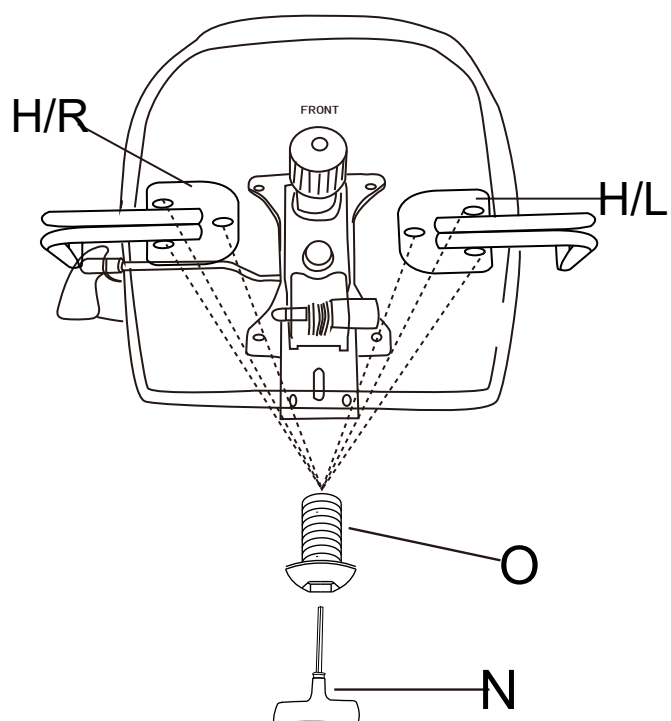


Step 5: Assemble Armrests **H** with Seat **B** via screws **Ox6**.

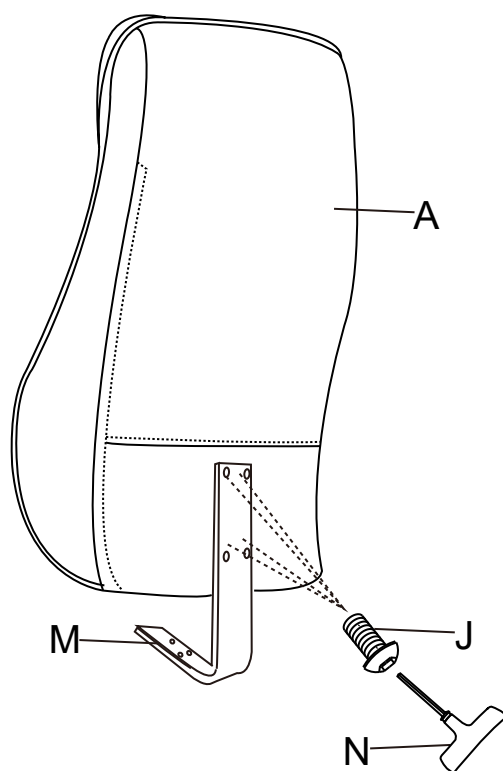

Step 6: Attach the Iron Sheet **M** to the back **A** via Screws **Jx4**.

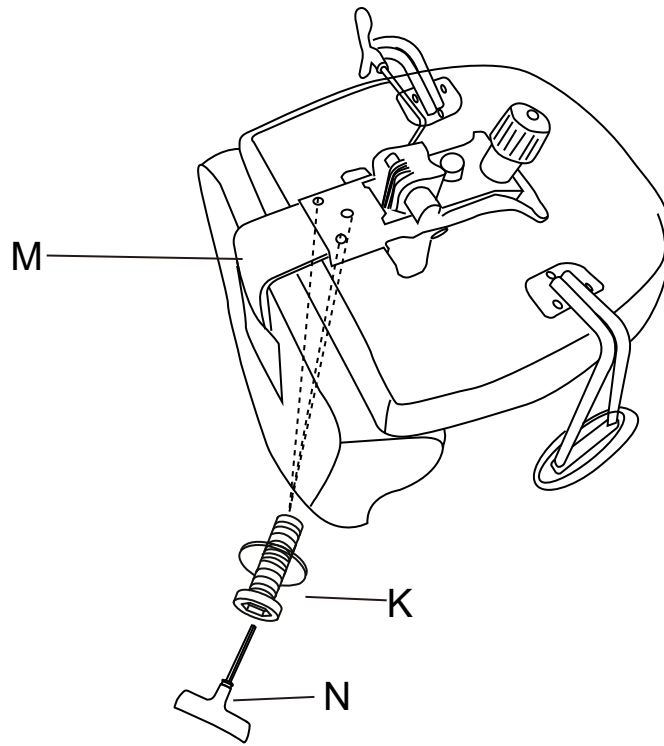

Step 7: Attach the Iron Sheet **M** to the Seat **B** via Screws **Kx3**.

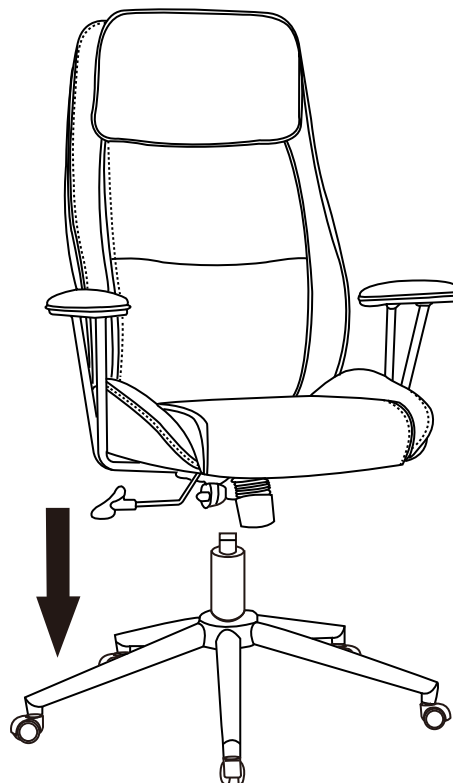

Step 8: Attach the assembled seat to the assembled base by aligning the hole in the tilt mechanism to the top of the gas cylinder. Press the seat firmly to complete the installation.



Importer:
CLP Trading GmbH
Triftenstraße 93
32791 Lage
Germany
info@clp.de