

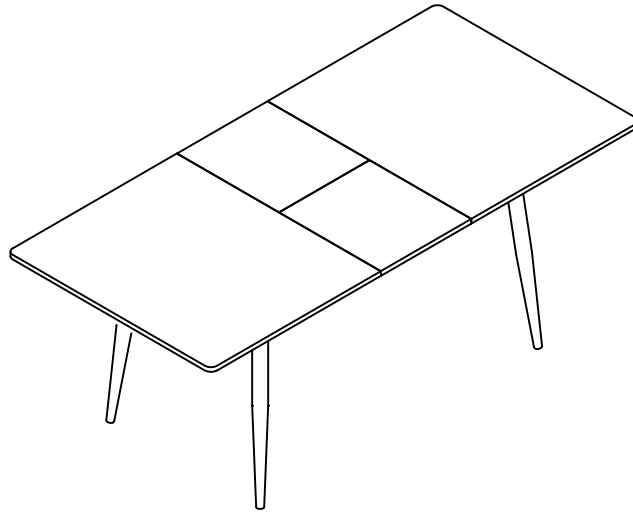


ASSEMBLY INSTRUCTION

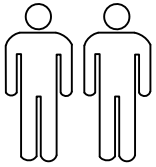


①

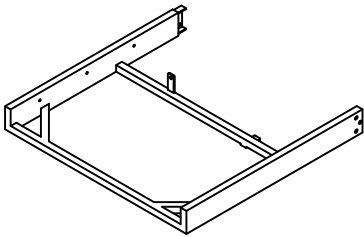


1pcs

②

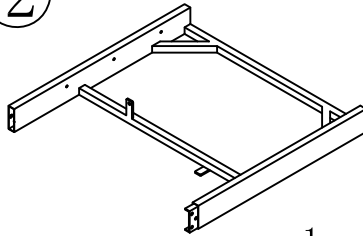


1pcs

③

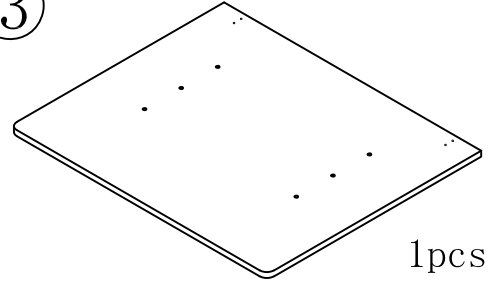


1pcs

④

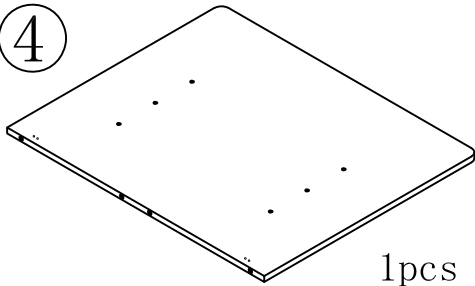


1pcs

⑤

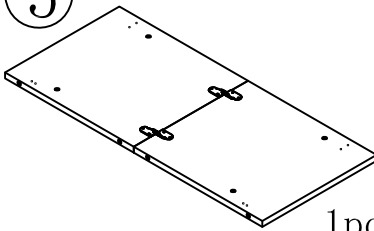

1pcs

⑥



2pcs

⑦



4pcs

A



8*18

24pcs

B



6*16

26pcs

C



M5

1pcs

D



4pcs

E



4pcs

F



4pcs

G



8*16

18pcs

H



4pcs

I



36pcs

J



1pcs

K




2pcs

L



2pcs

M



1pcs


N




M4

1pcs

STEP1

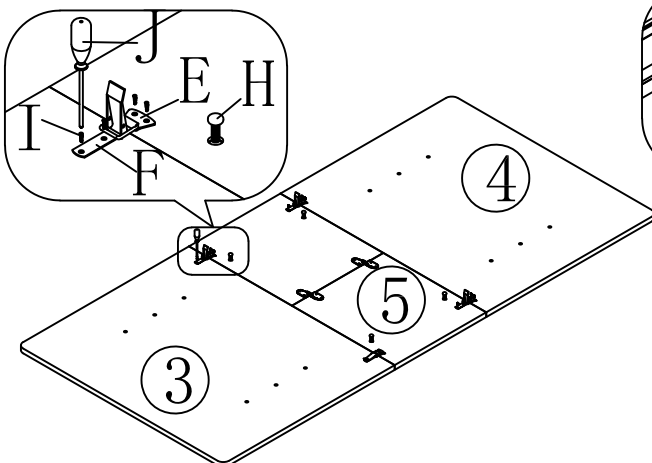


STEP2

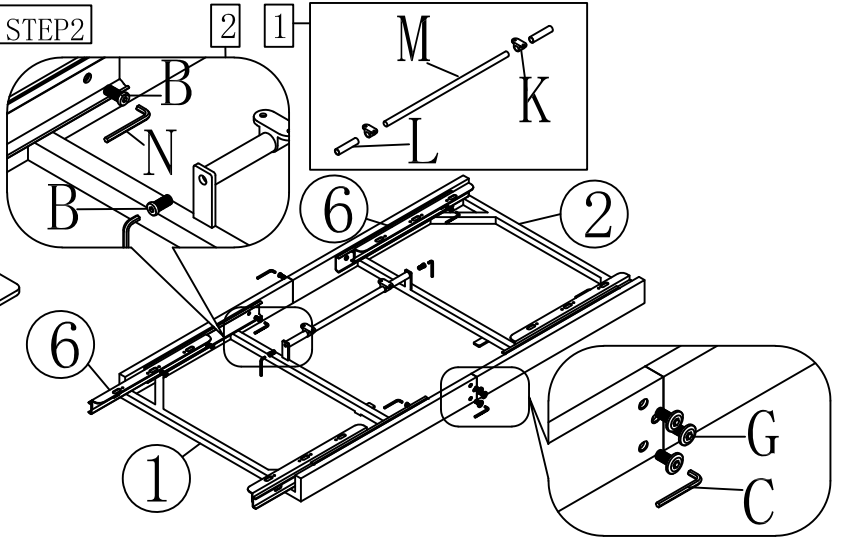


ASSEMBLY INSTRUCTION

STEP3

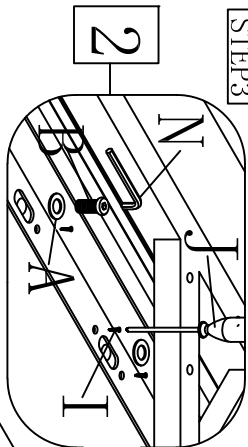


Insert the screw, push the slide rail inward, align with the center hole, and tighten the screw.

STEP4

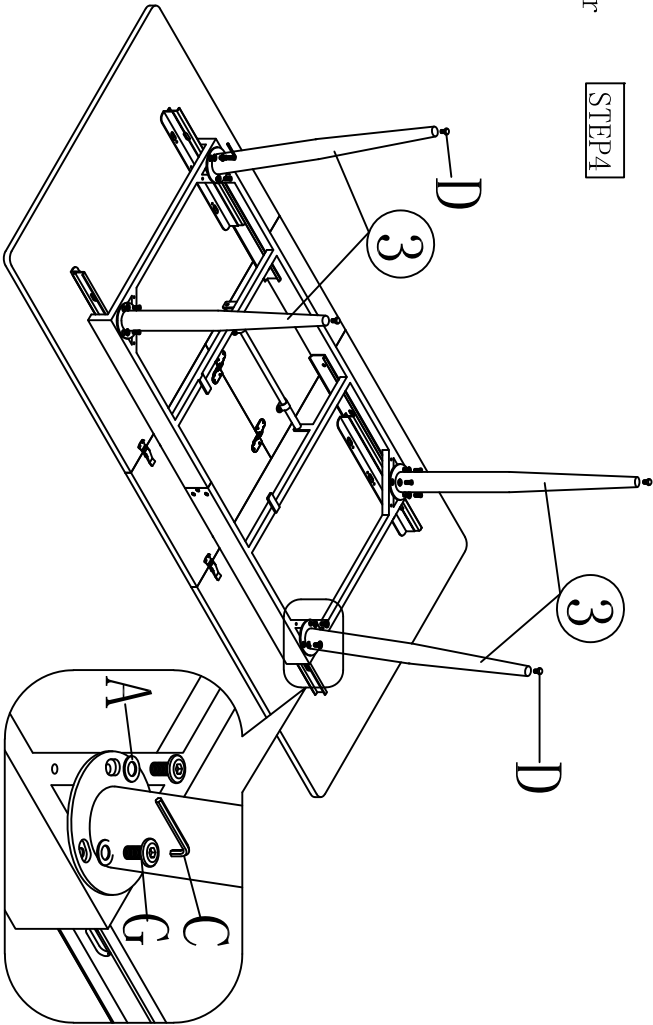


STEP5

turnover device

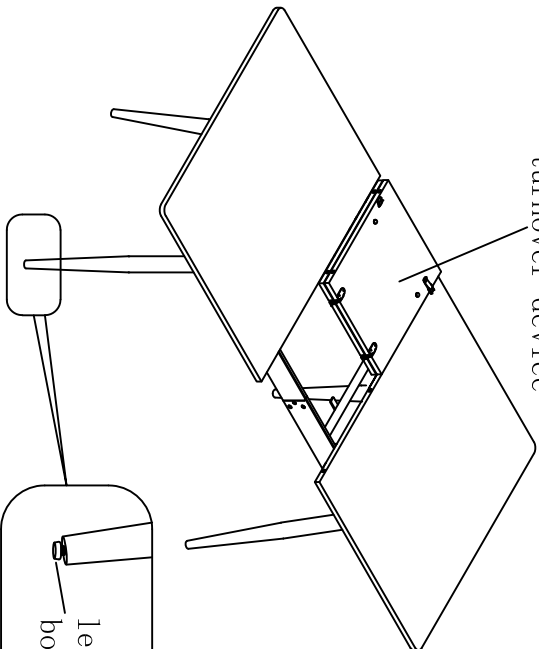

STEP6

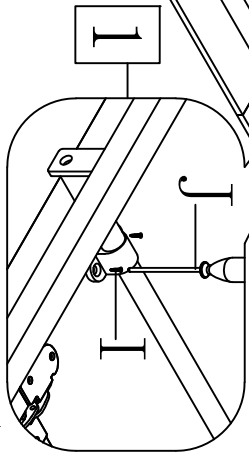

The desktop flatness can be manually adjusted here

STEP7

