

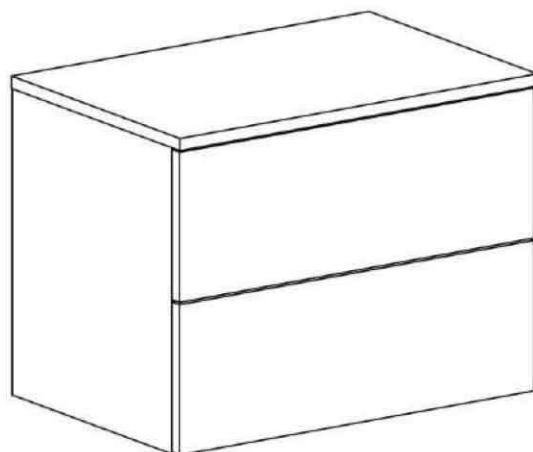
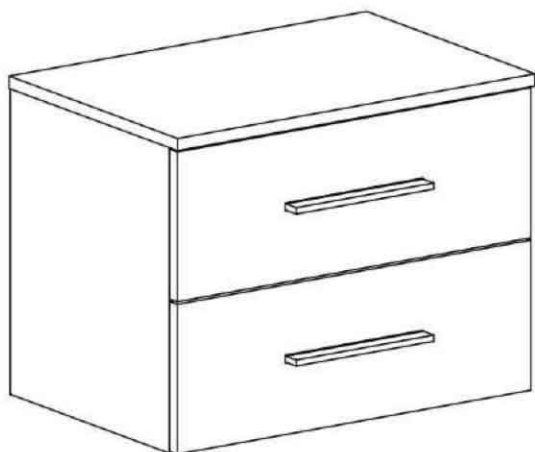
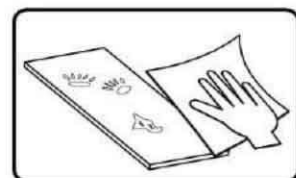
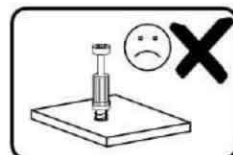
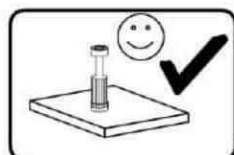
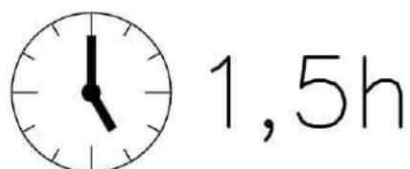
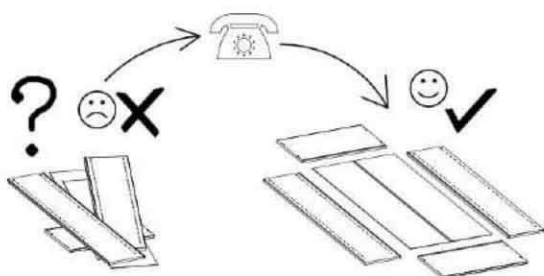
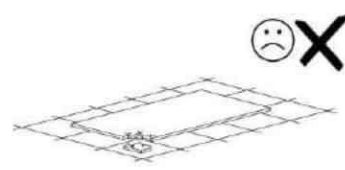
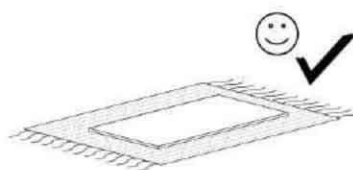
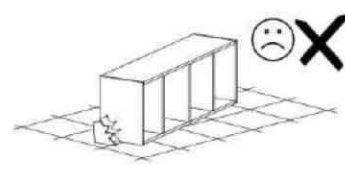
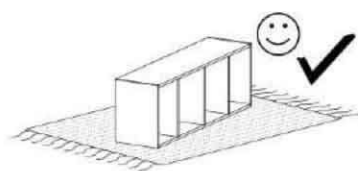
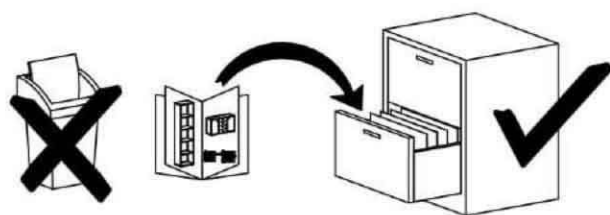





LINDA SN III

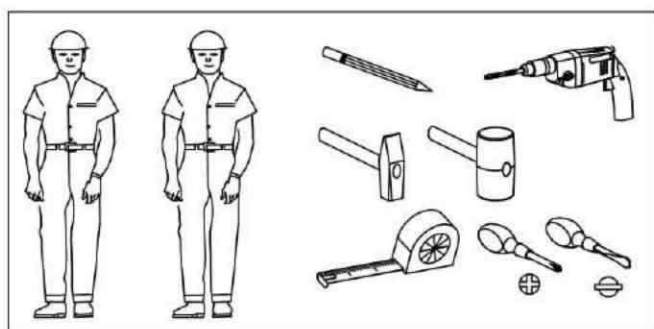

PUSH

**W przypadku otrzymania nóżek
NIE MONTOWAĆ COKOŁU !!!**

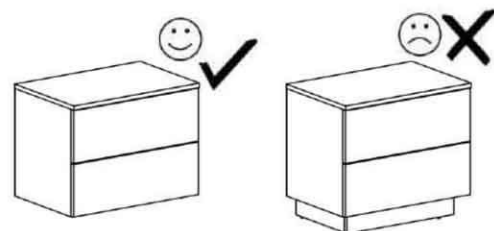

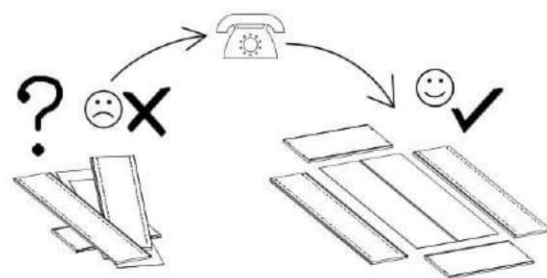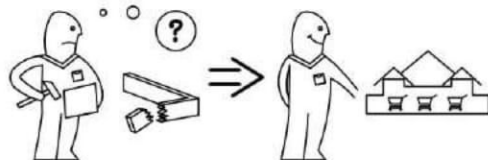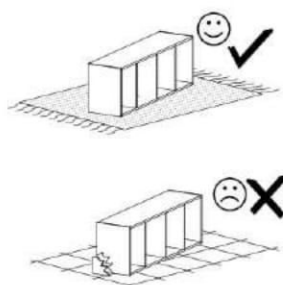

OPCJA A



E88




x...(2)

OPCJA B



PUSH

L13






x...(2)

G57



3,5x16





x...(4)

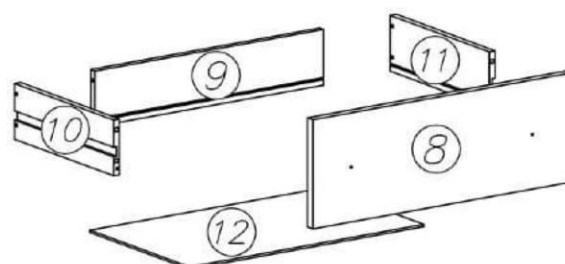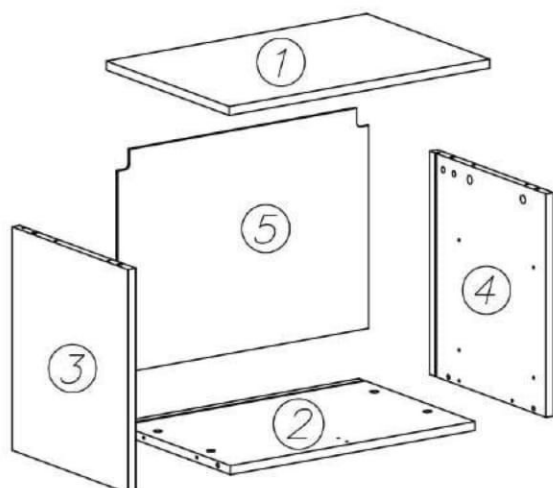

U9R x...(1)	W1 x...(1)		
U9L x...(1)	H3 280mm x...(4)	G50 6x13 x...(8)	W10 300mm x...(1)
K1 ø15x12 x...(8)	G8 4x30 x...(4)	N1 M4x9 x...(4)	I1 x...(6)
K10 x...(8)	B1 ø8x35 x...(8)	W2 x...(1)	A6 ø7x40 x...(8)


I

OPCJA A

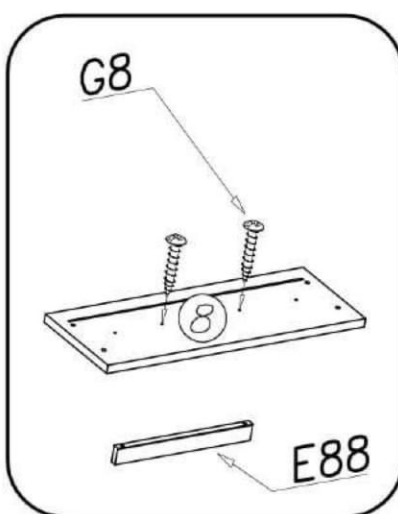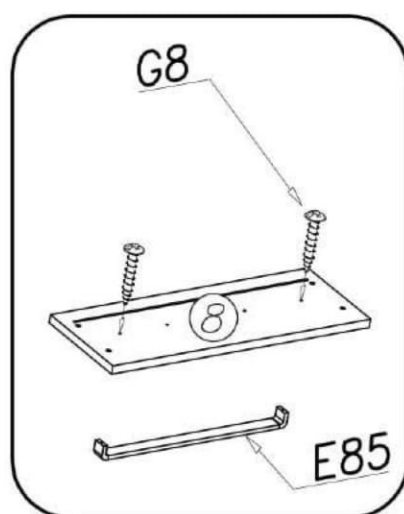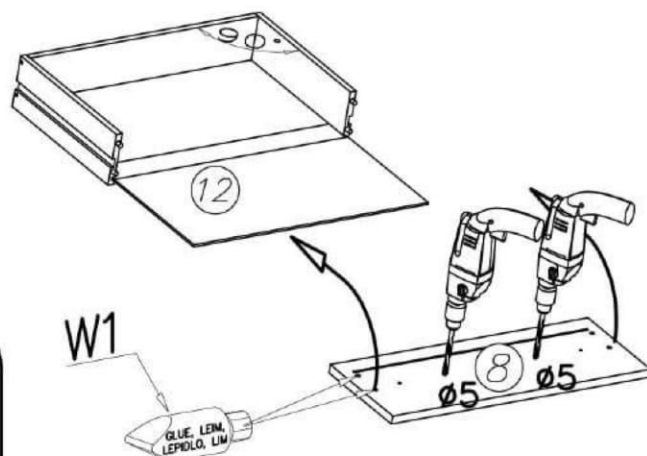
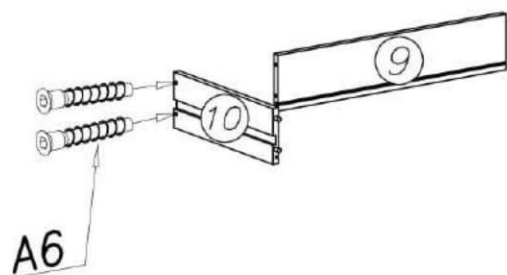


II


OPCJA B

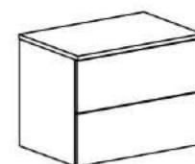








PUSH

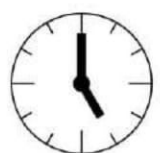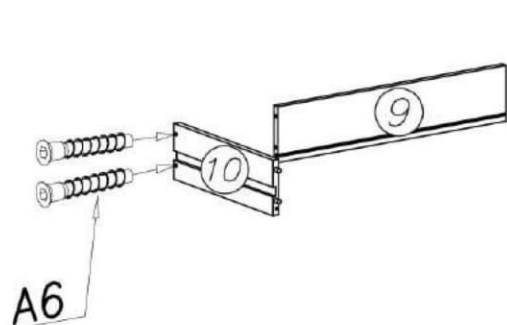





0,5h

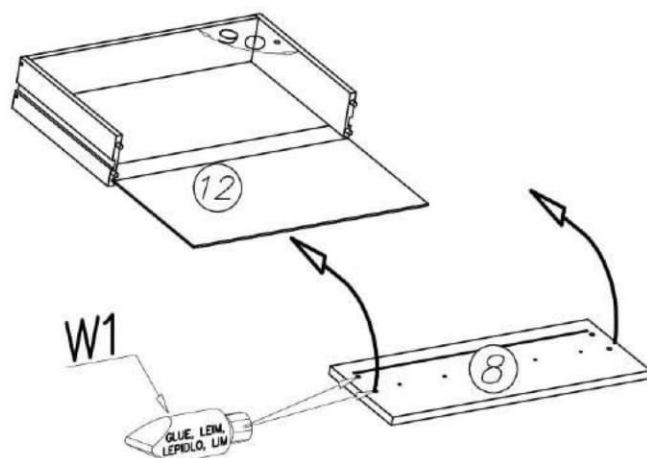



III

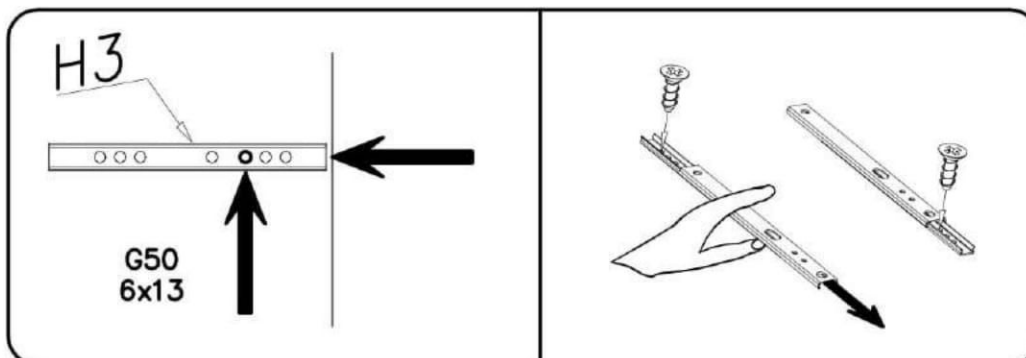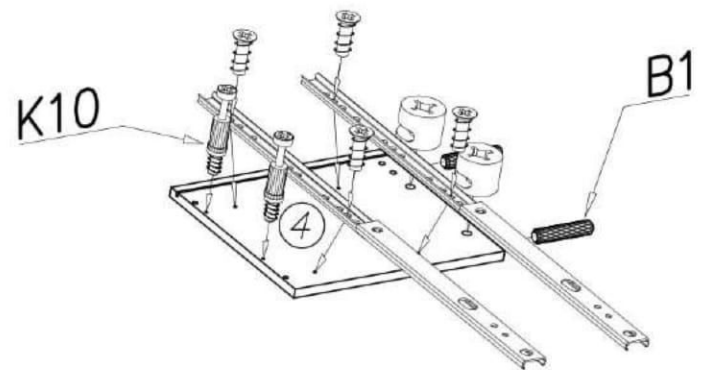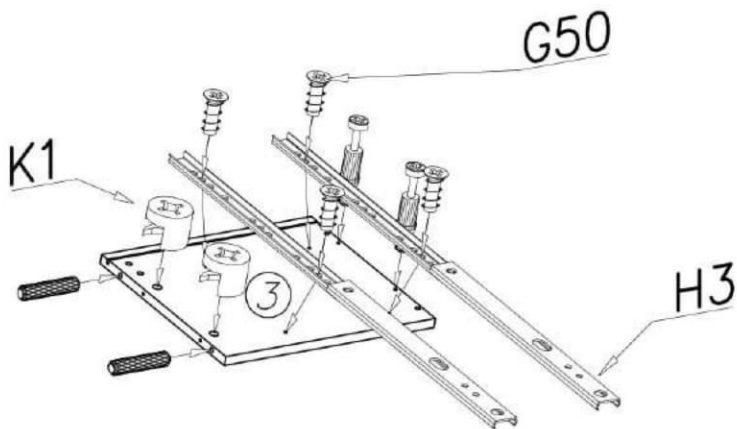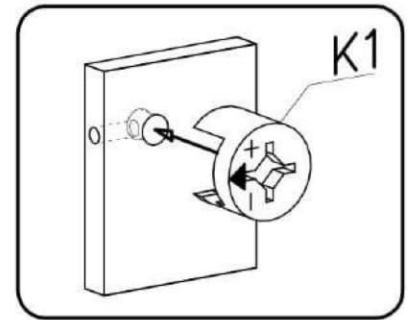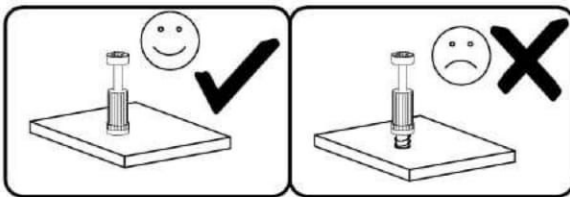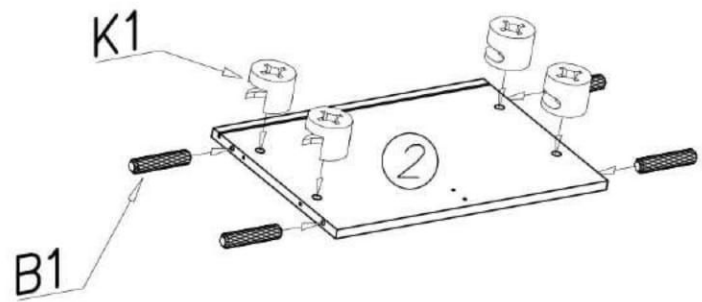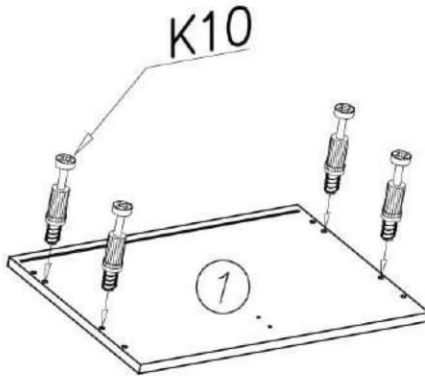



IV

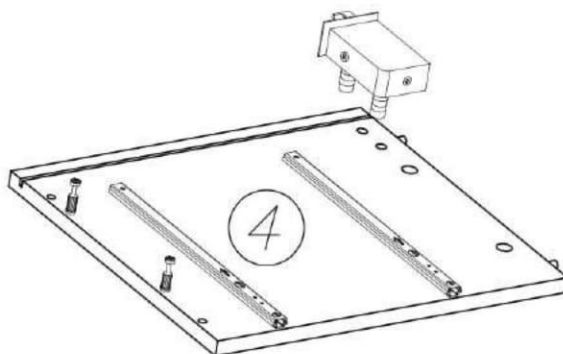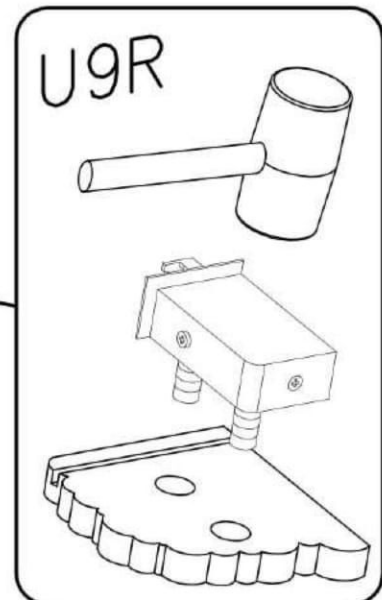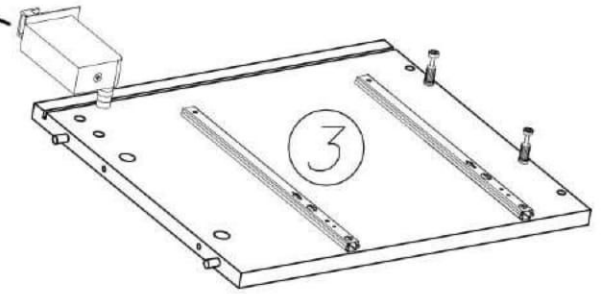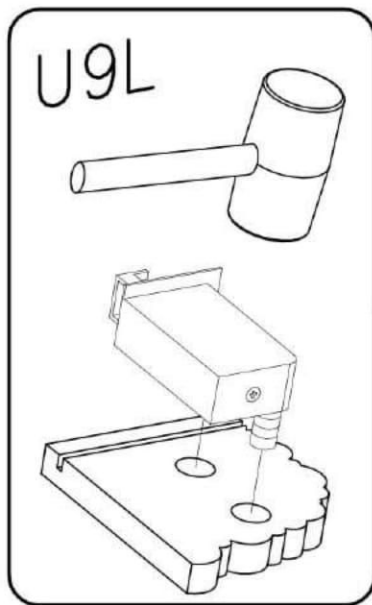


V

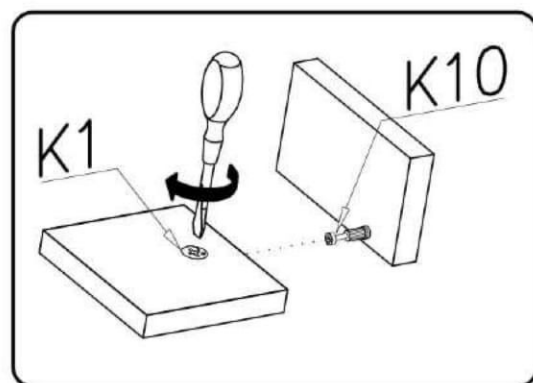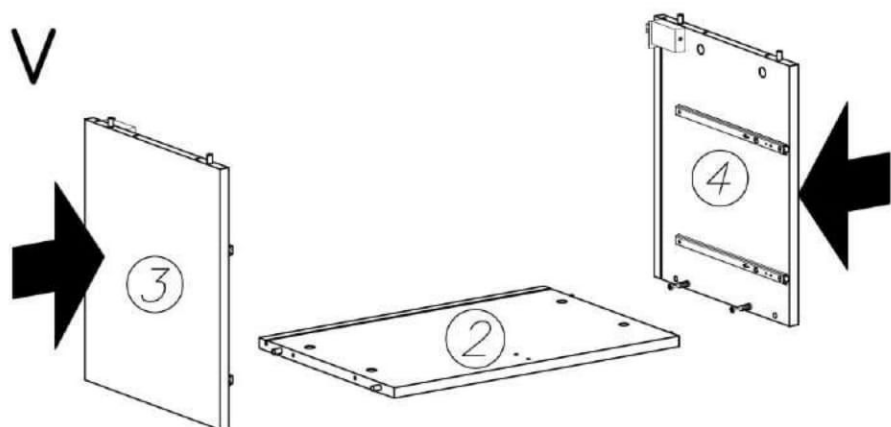



VI

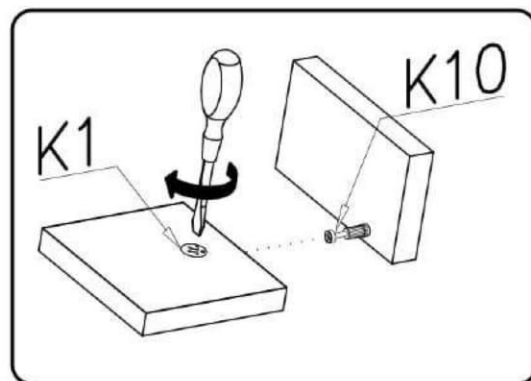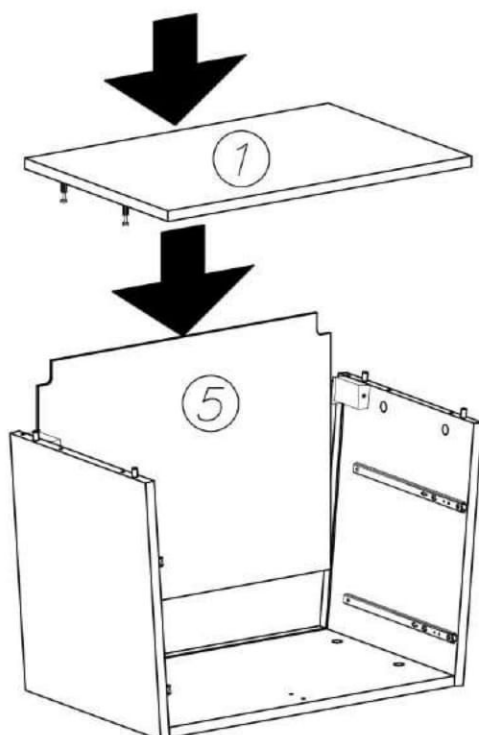


VII

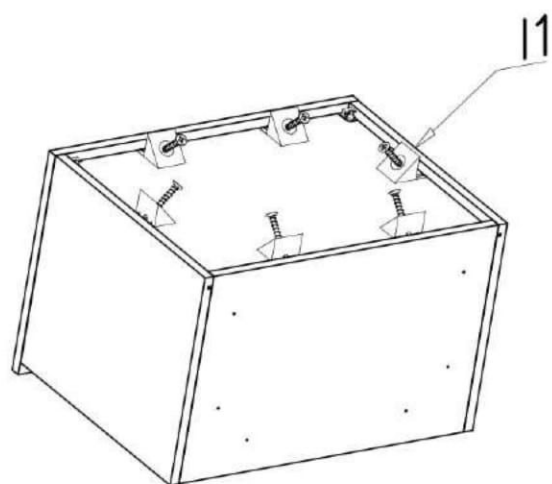


$$a=b$$

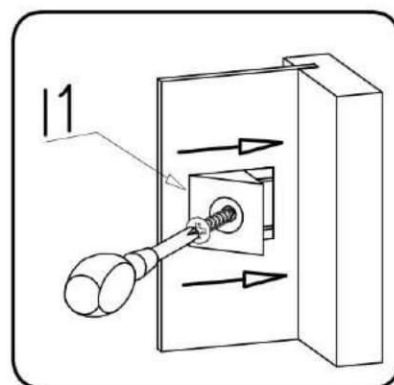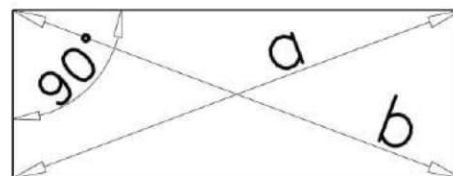

VIII

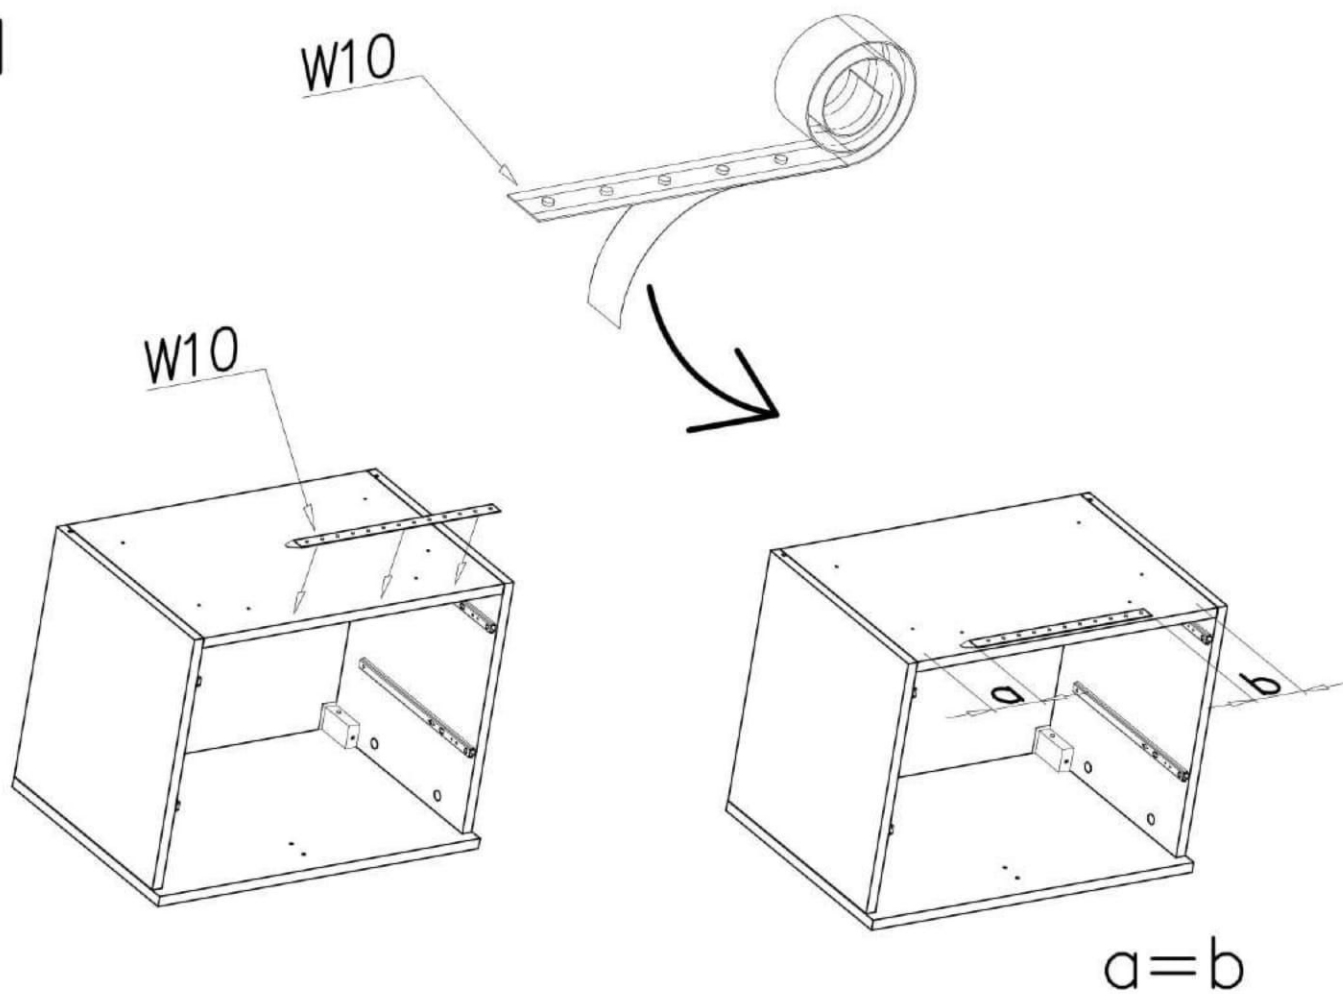


IX

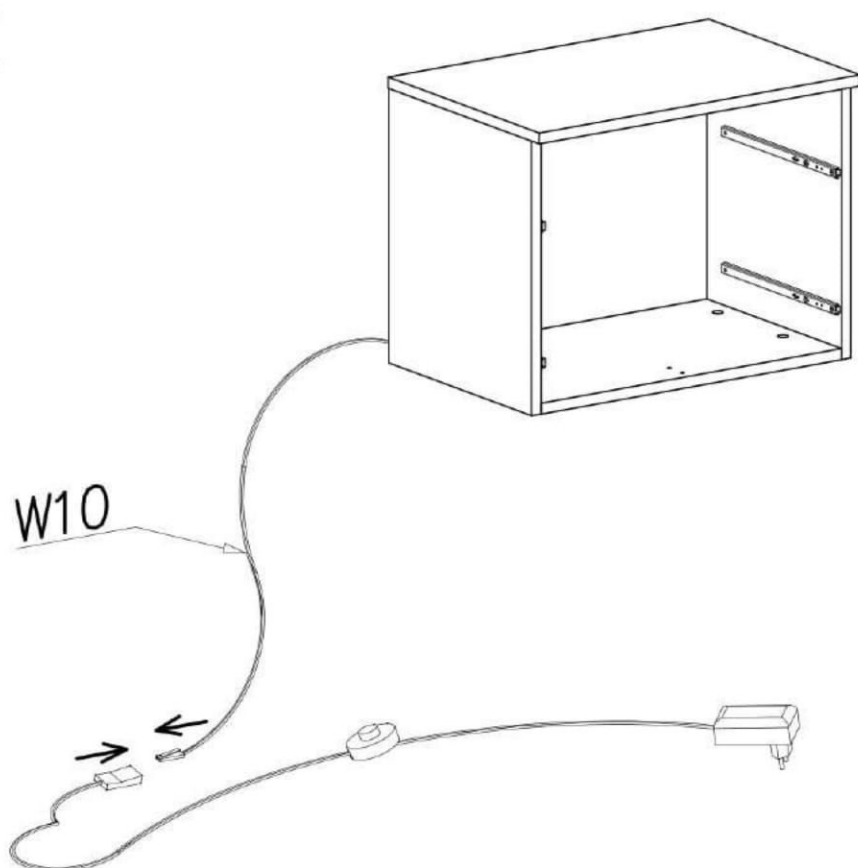


X


OPCJA B

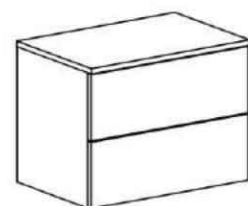

PUSH

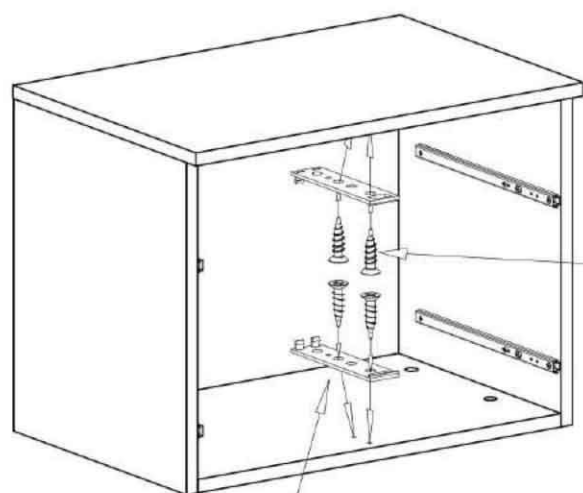


G57

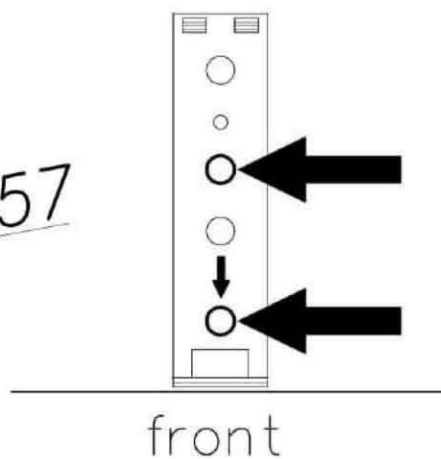


front

L13

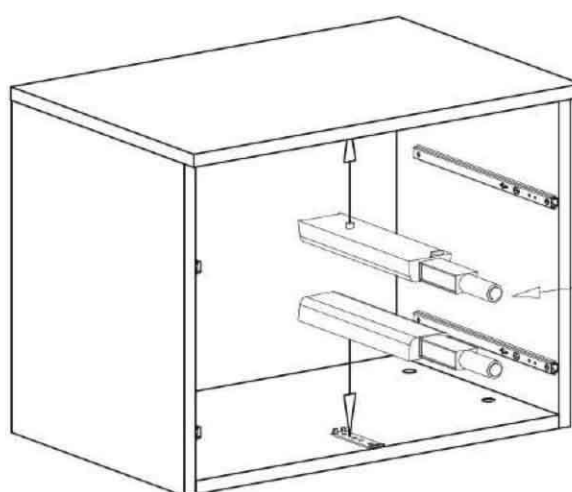


L13



L13

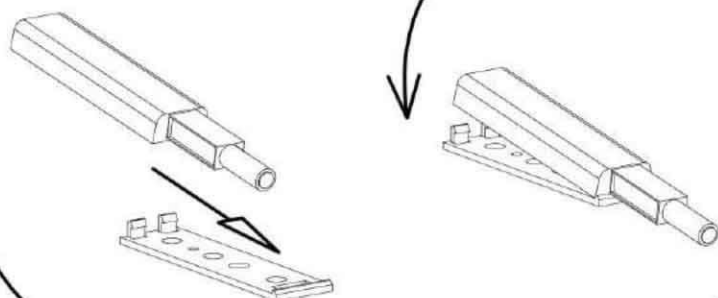




L13

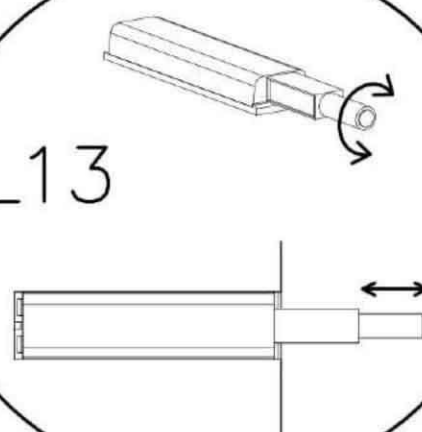

XI

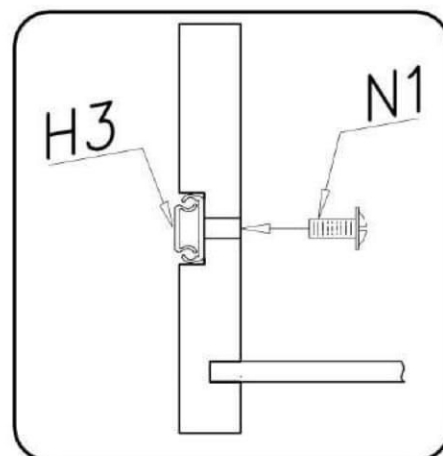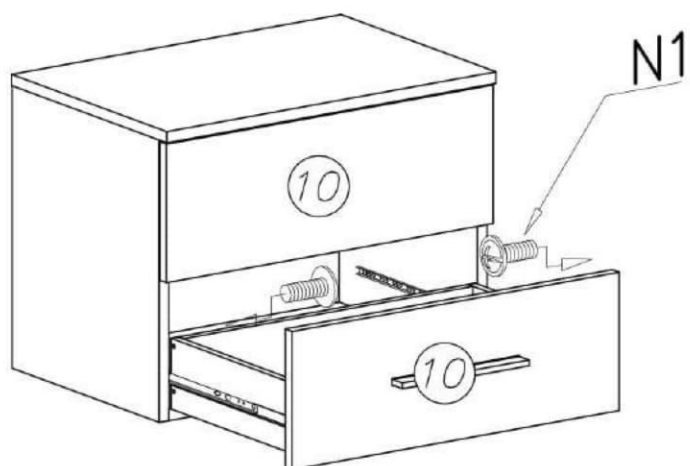

XII

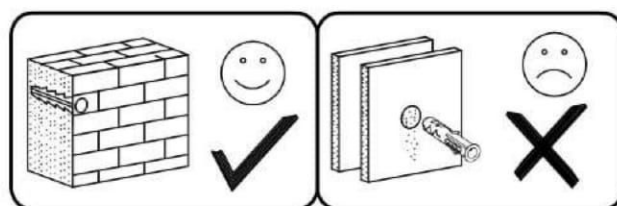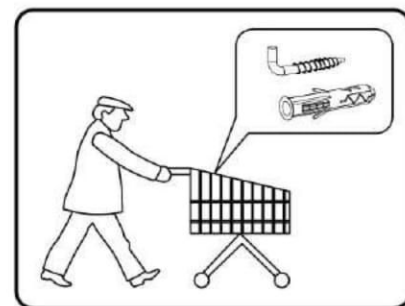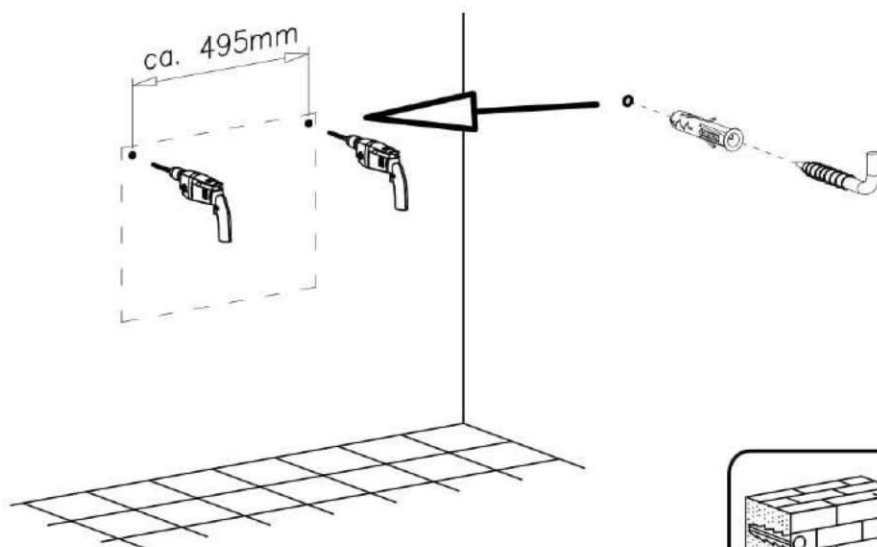

XIII

