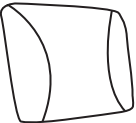
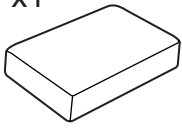



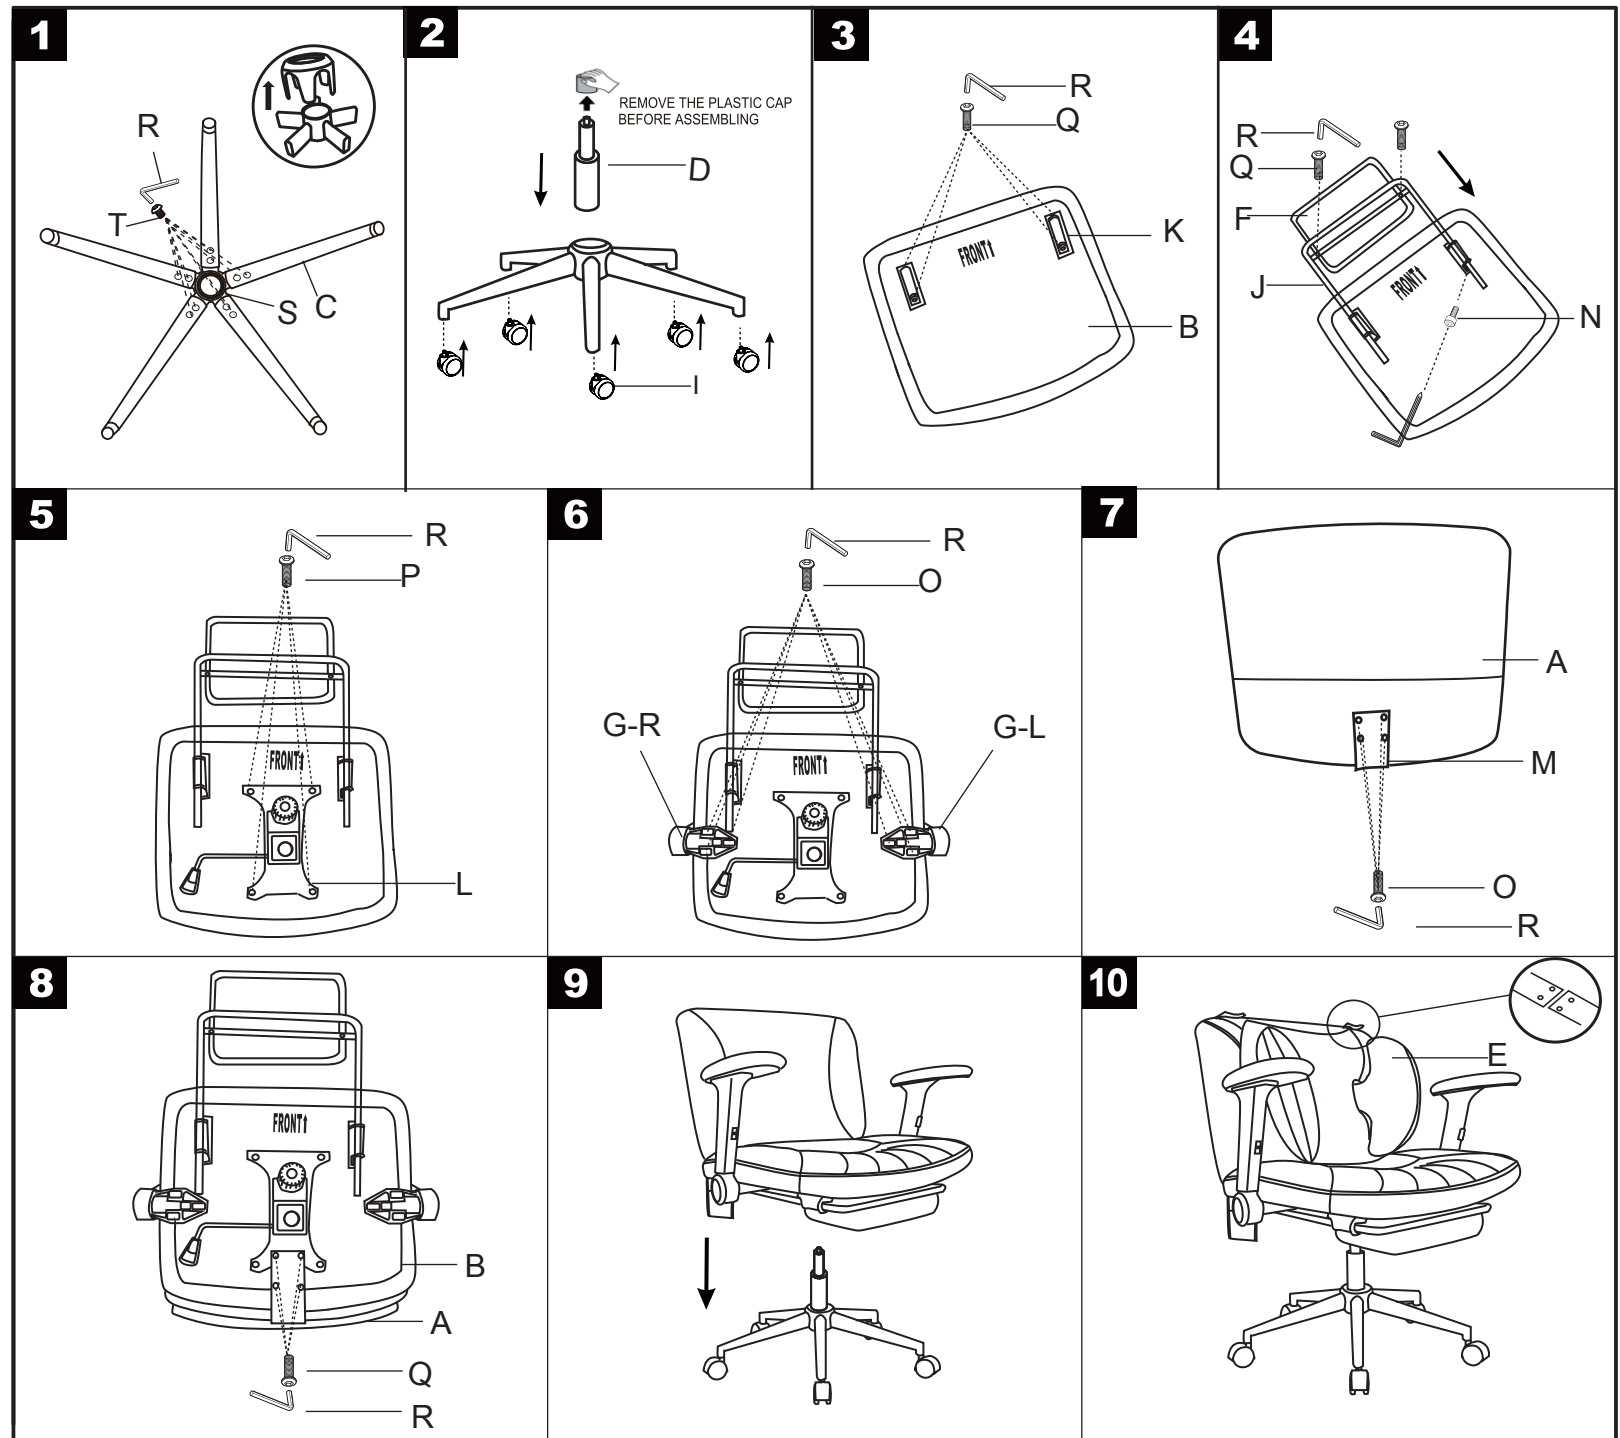
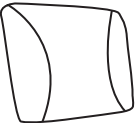
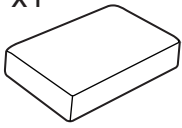




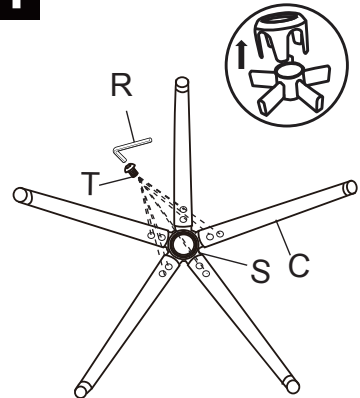
ASSEMBLY INSTRUCTION

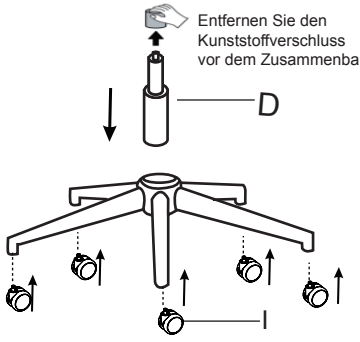
Ax1 	Bx1 
Cx5 	Dx1 
Ex1 	Fx1 
Gx2 	
Ix5 	Jx1 
Kx2 	Lx1 
Mx1 	Sx1 
Nx1  M5*10	Ox10  M6*25mm
Px4  M6*20mm	Qx10  M6*35mm
Rx1 	Tx10  M6*16mm



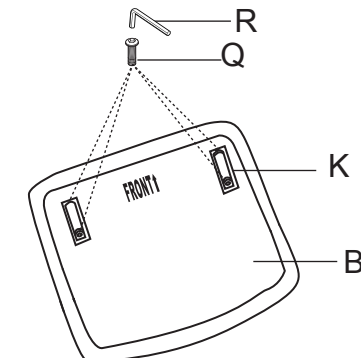
Montageanleitung

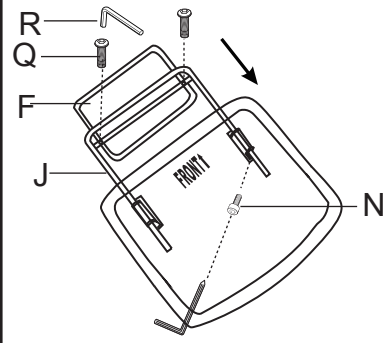
Ax1 	Bx1 
Cx5 	Dx1 
Ex1 	Fx1 
Gx2  	
Ix5 	Jx1 
Kx2 	Lx1 
Mx1 	Sx1 
Nx1  M5*10	Ox10  M6*25mm
Px4  M6*20mm	Qx10  M6*35mm
Rx1 	Tx10  M6*16mm

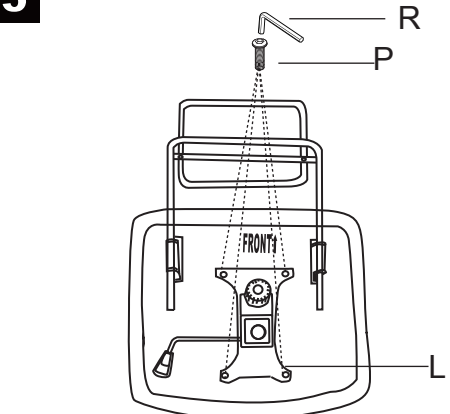
1


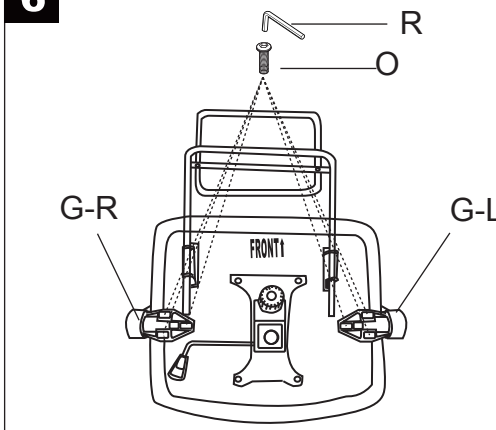
2


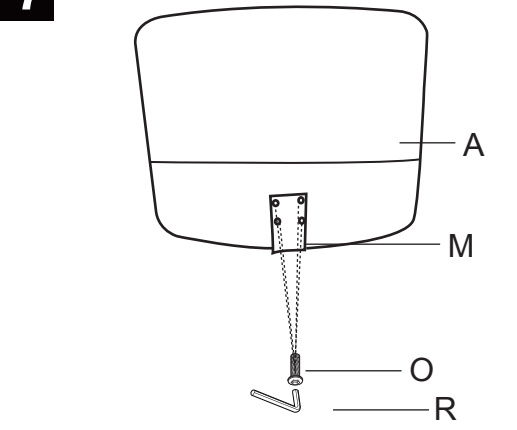
Entfernen Sie den Kunststoffverschluss vor dem Zusammenbau.

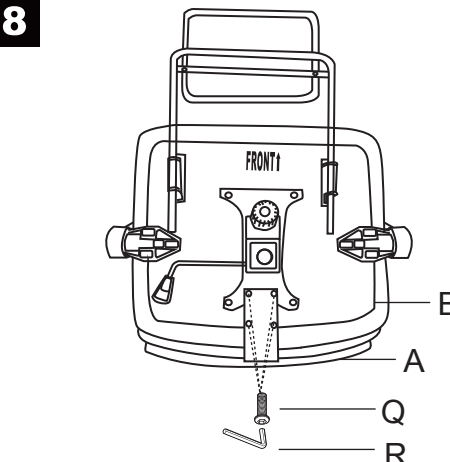
3


4


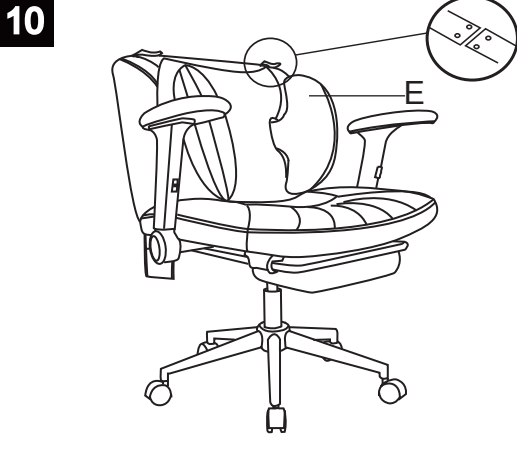
5


6


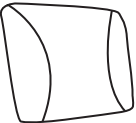
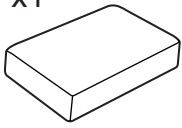


7


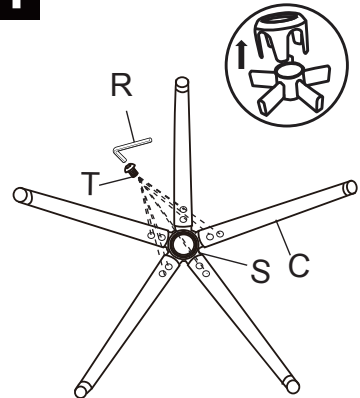
8


9

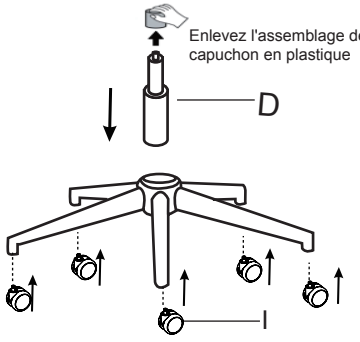

10


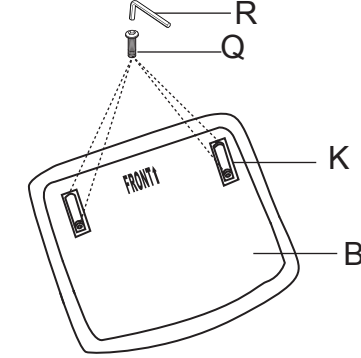
INSTRUCTIONS D'ASSEMBLEMENT

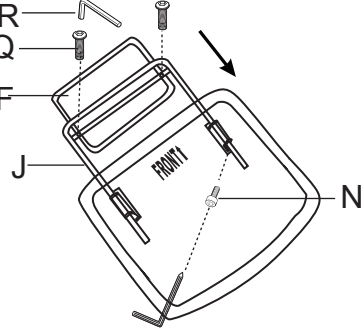
Ax1 	Bx1 
Cx5 	Dx1 
Ex1 	Fx1 
Gx2  L	 R
Ix5 	Jx1 
Kx2 	Lx1 
Mx1 	Sx1 
Nx1  M5*10	Ox10  M6*25mm
Px4  M6*20mm	Qx10  M6*35mm
Rx1 	Tx10  M6*16mm

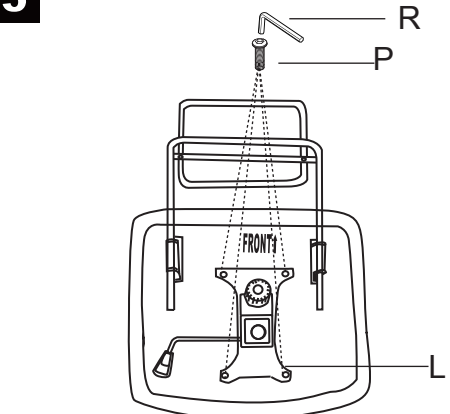
1


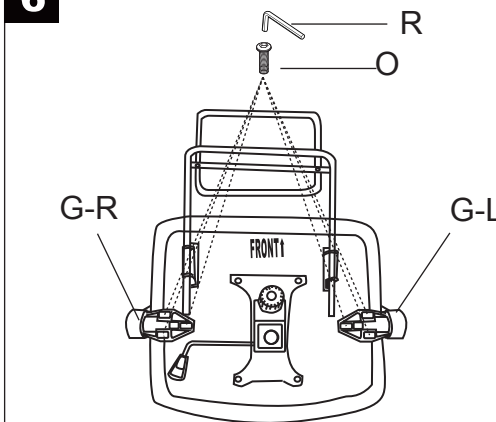
Enlevez l'assemblage de capuchon en plastique

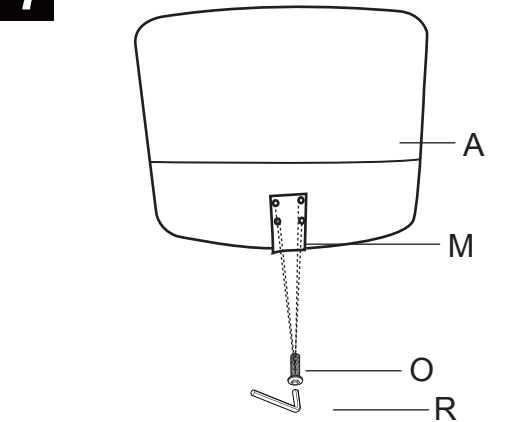
2


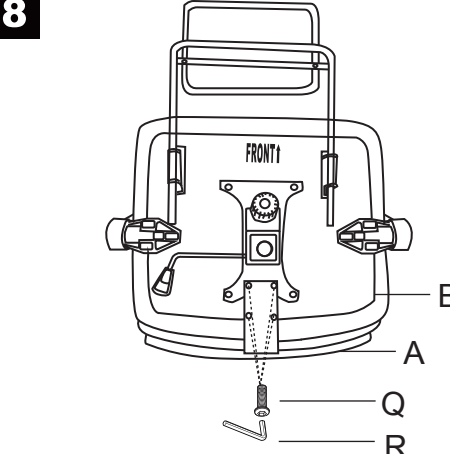
3


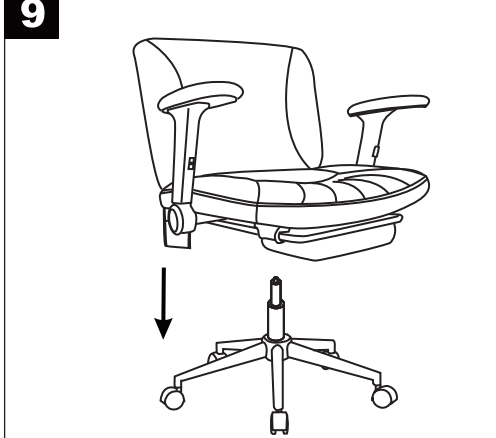
4


5


6


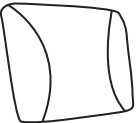
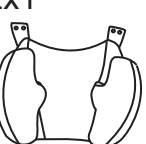
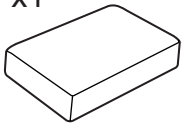


7


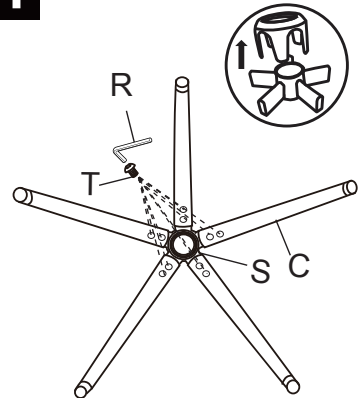
8


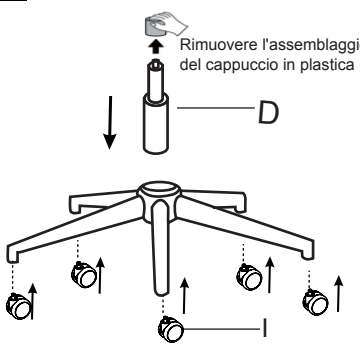
9


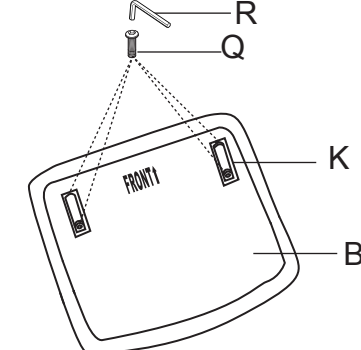
10

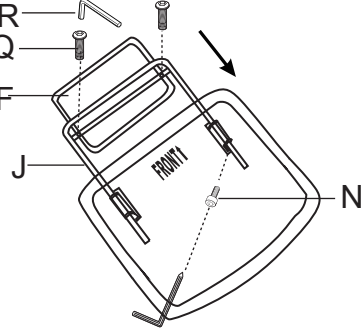

Istruzioni per l'assemblaggio

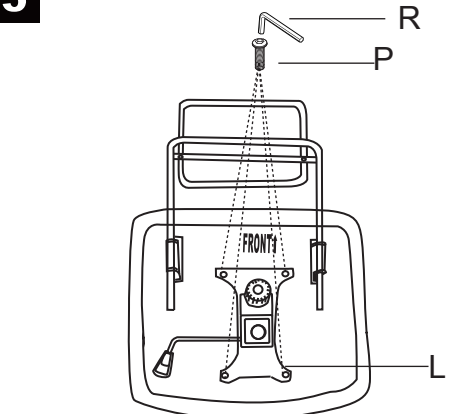
Ax1 	Bx1 
Cx5 	Dx1 
Ex1 	Fx1 
Gx2  L	 R
Ix5 	Jx1 
Kx2 	Lx1 
Mx1 	Sx1 
Nx1  M5*10	Ox10  M6*25mm
Px4  M6*20mm	Qx10  M6*35mm
Rx1 	Tx10  M6*16mm

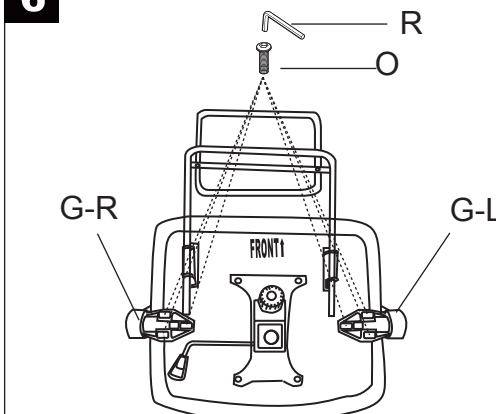
1


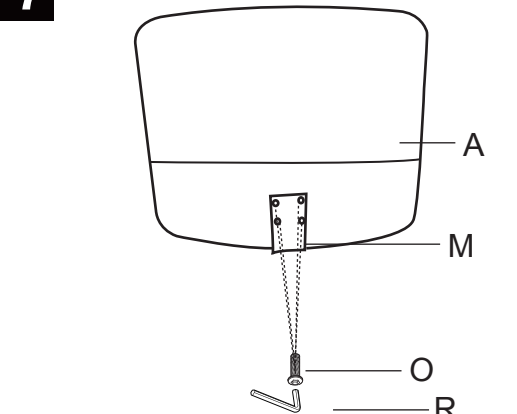
2


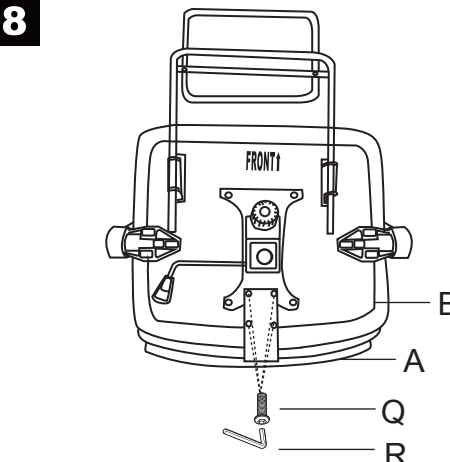
3


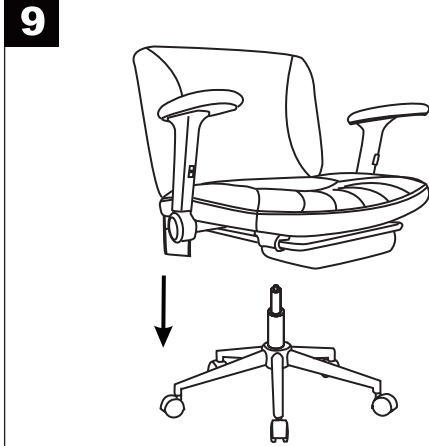
4


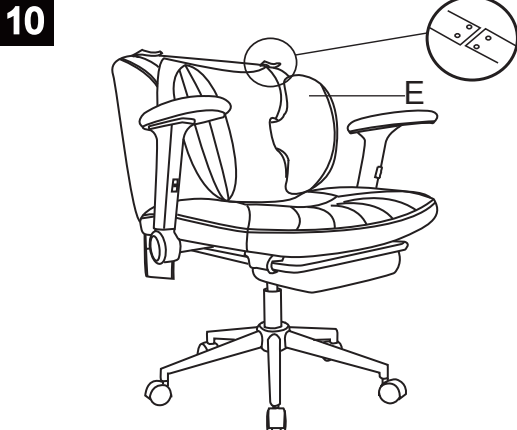
5


6


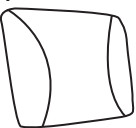
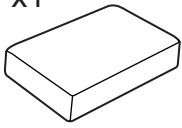


7


8


9


10


INSTRUCCIÓN DE MONTABLE

Ax1 	Bx1 
Cx5 	Dx1 
Ex1 	Fx1 
Gx2  	
Ix5 	Jx1 
Kx2 	Lx1 
Mx1 	Sx1 
Nx1  M5*10	Ox10  M6*25mm
Px4  M6*20mm	Qx10  M6*35mm
Rx1 	Tx10  M6*16mm

