


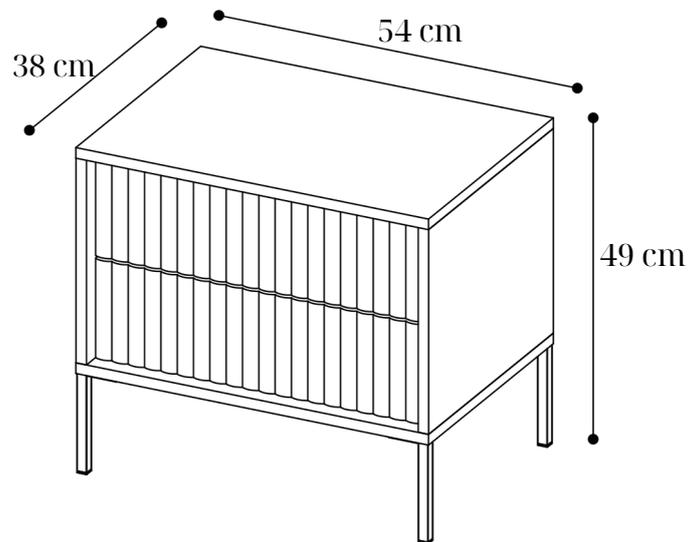
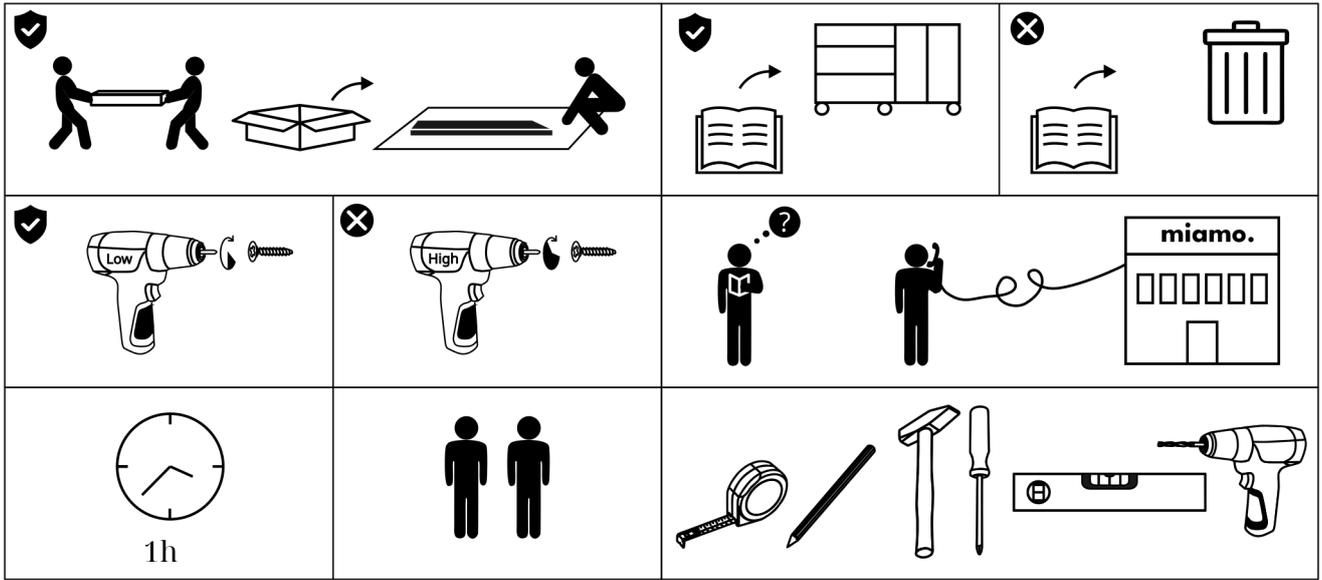
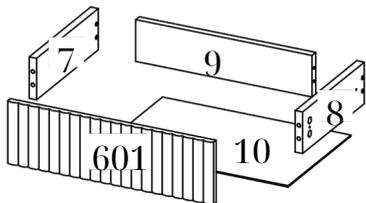


Montageanleitung

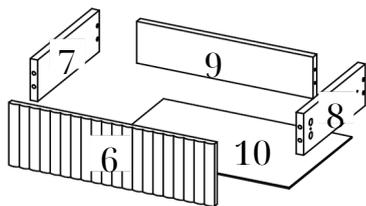

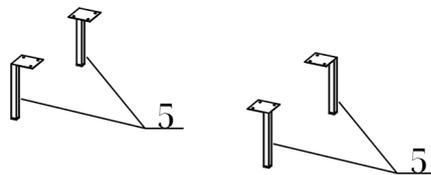









PTO x2 	A x8 <p>8x35mm</p>	B x16 <p>29,5mm</p>	C x16 <p>15x12mm</p>	D x4 	E x1 	F x16
ND x57 <p>3,5x16mm</p>	TA x1 <p>77x30x15mm</p>	X x4 	R x4 <p>300mm</p>			

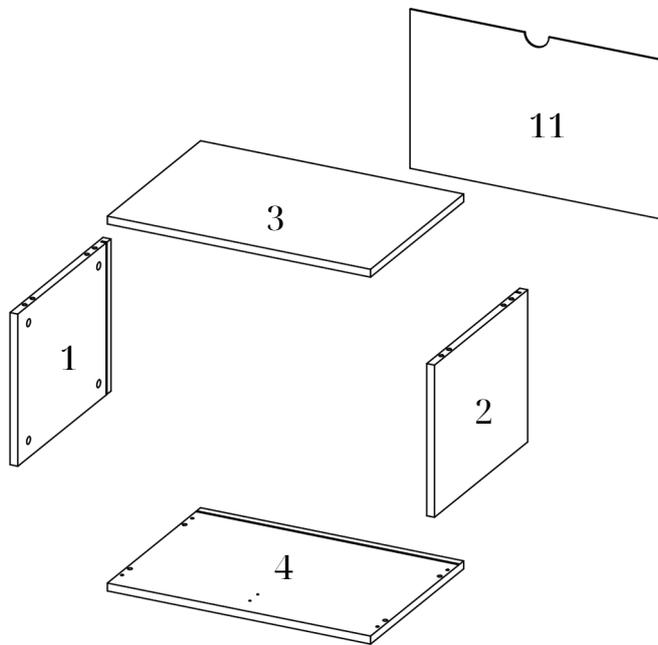

1	380x309x16mm
2	380x309x16mm
3	540x380x16mm
4	540x380x16mm
5	150x60x60mm
6	500x150x16mm
601	500x150x16mm
7	300x100x16mm
8	300x100x16mm
9	449x100x16mm
10	479x305x3mm
11	520x323x3mm







1

A x8  8x35mm	C x8  15x12mm
---	--

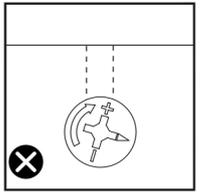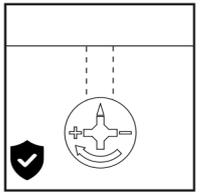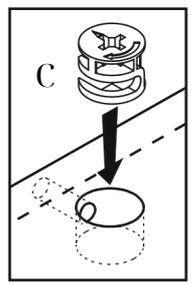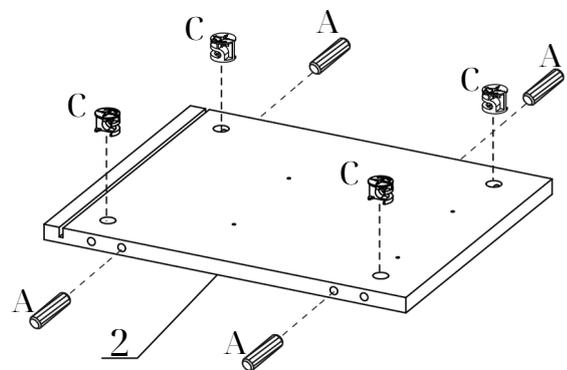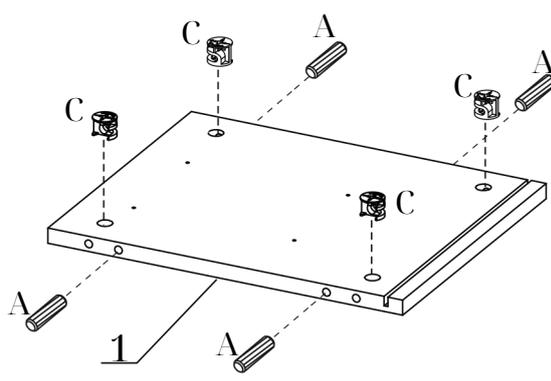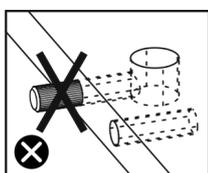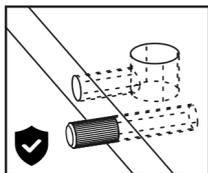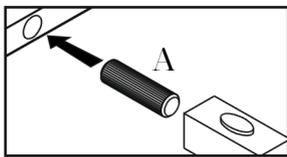



2

B x4  29,5mm	PTO x1  	ND x2  3,5x16mm
---	--	--

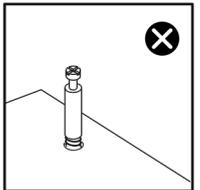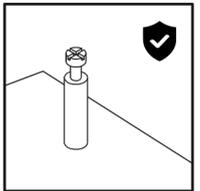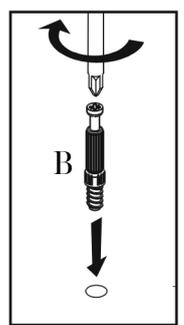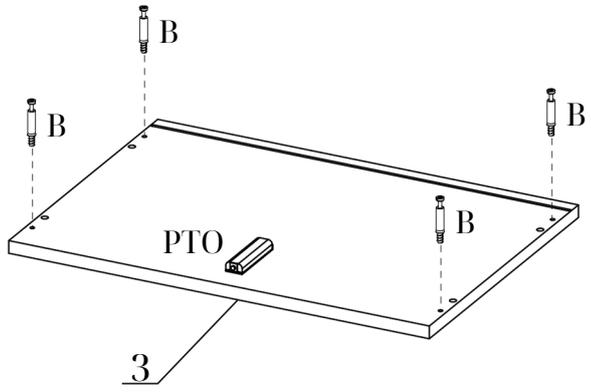
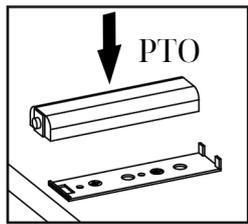
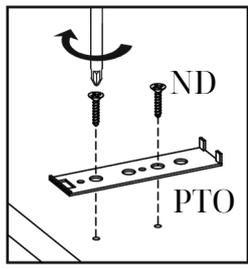


3



B x4  29,5mm	PTO x1 
ND x14  3,5x16mm	

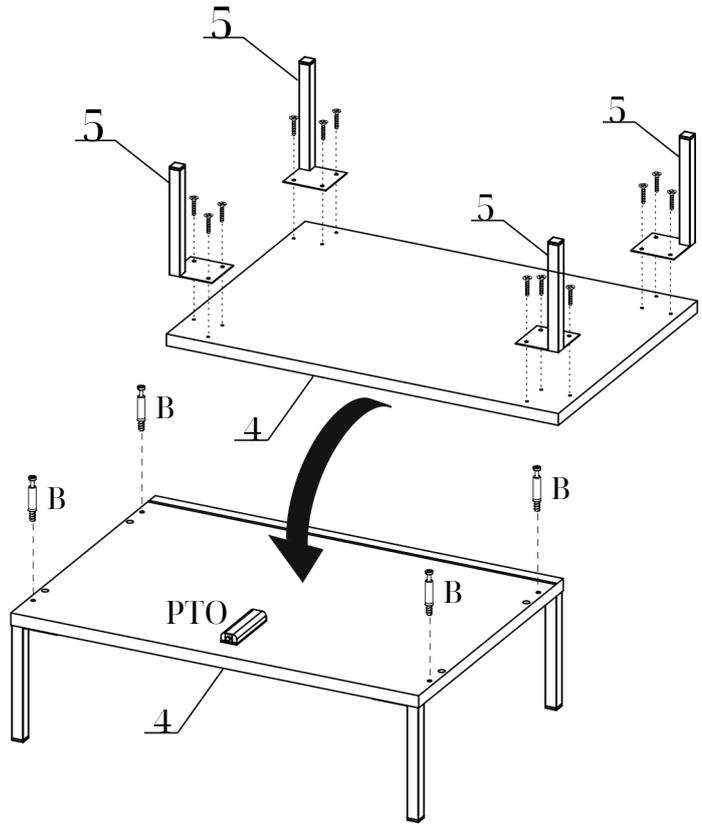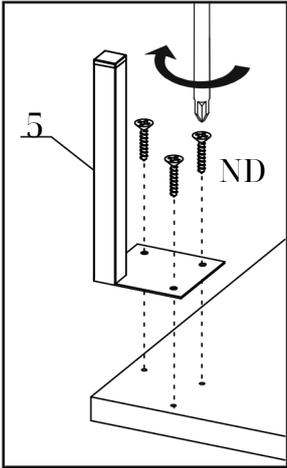

4

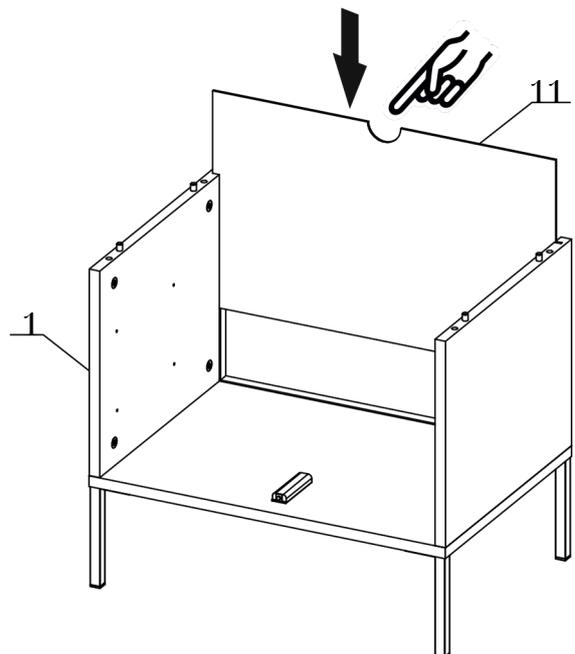
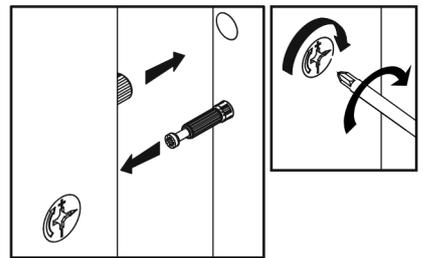
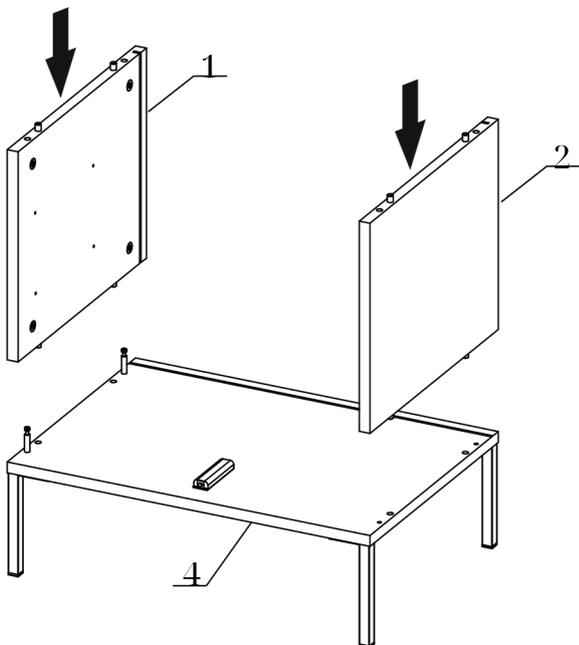


5


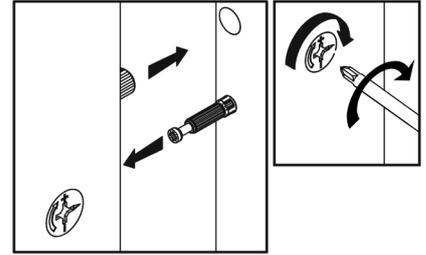
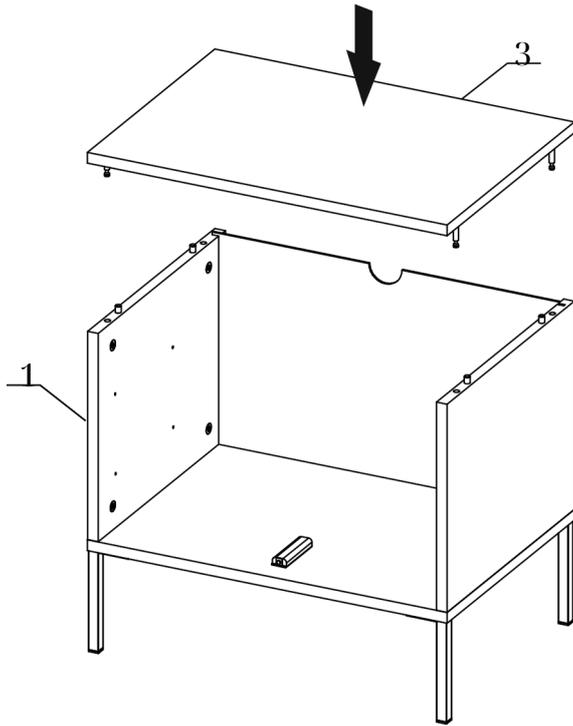


6


X x 4

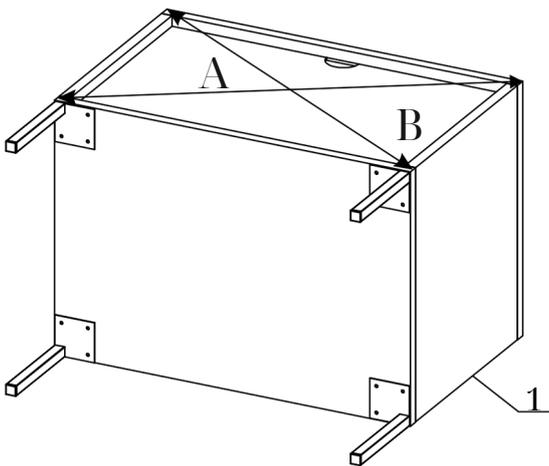
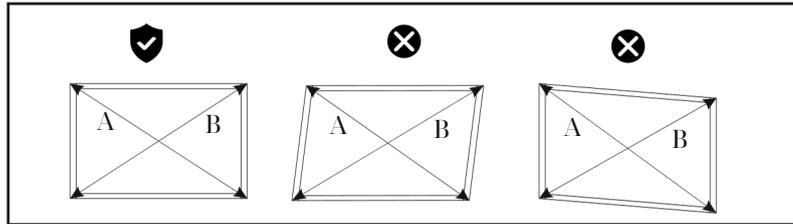
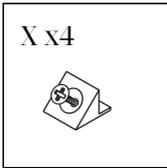


$A=B$

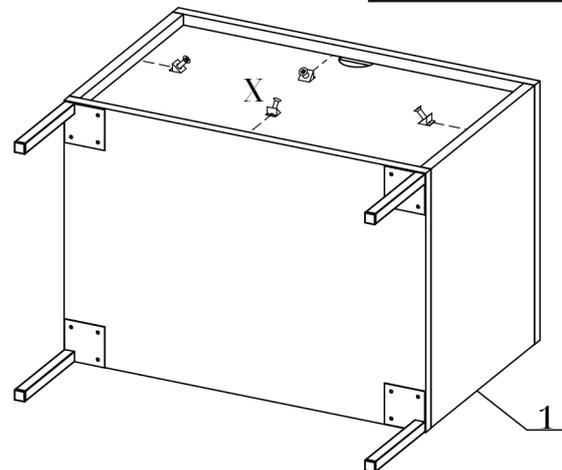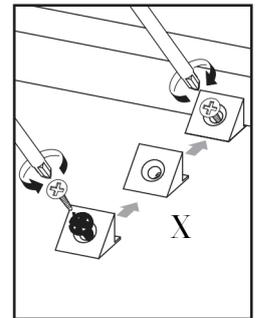




7

TA x1  77x30x15mm	ND x1  3,5x16mm
---	---

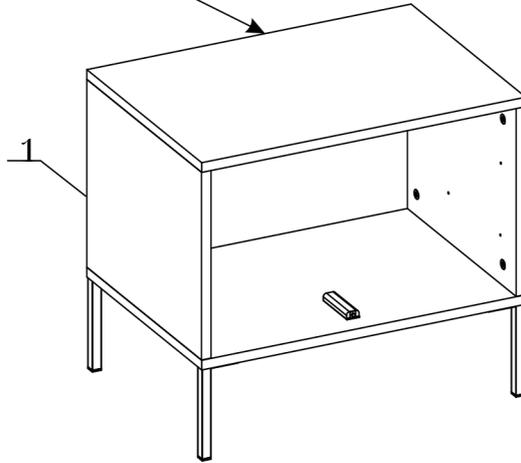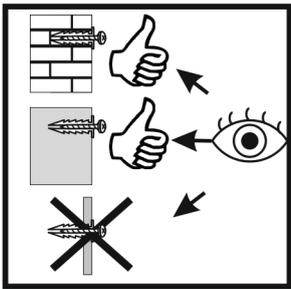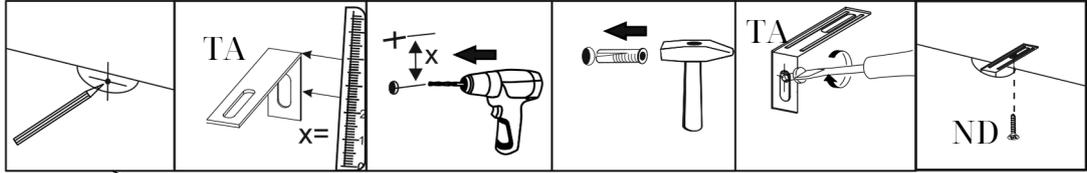


8


R x4  300mm

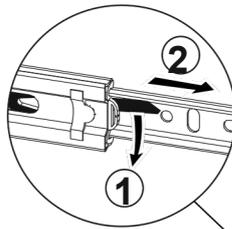

R





R1



R2





9

R1 x4 300mm	ND x8 3,5x16mm	F x8
----------------	-------------------	------





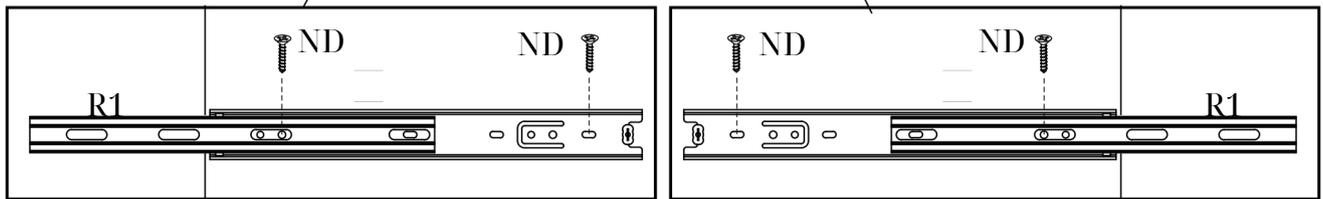
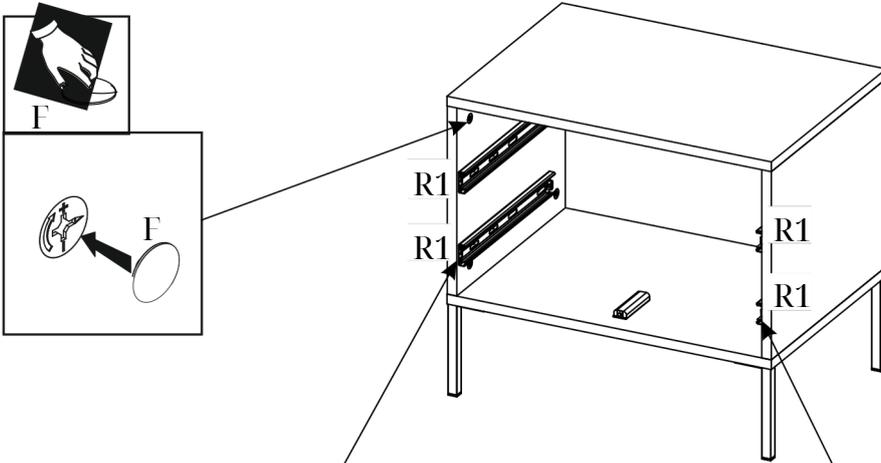


10


B x2 29,5mm	C x8 15x12mm	PTO x2
----------------	-----------------	--------

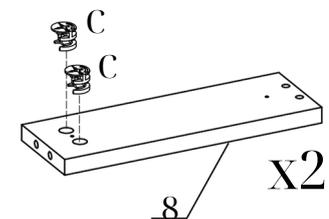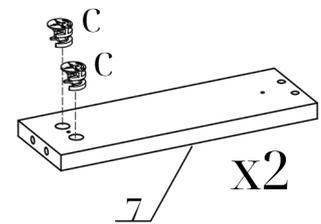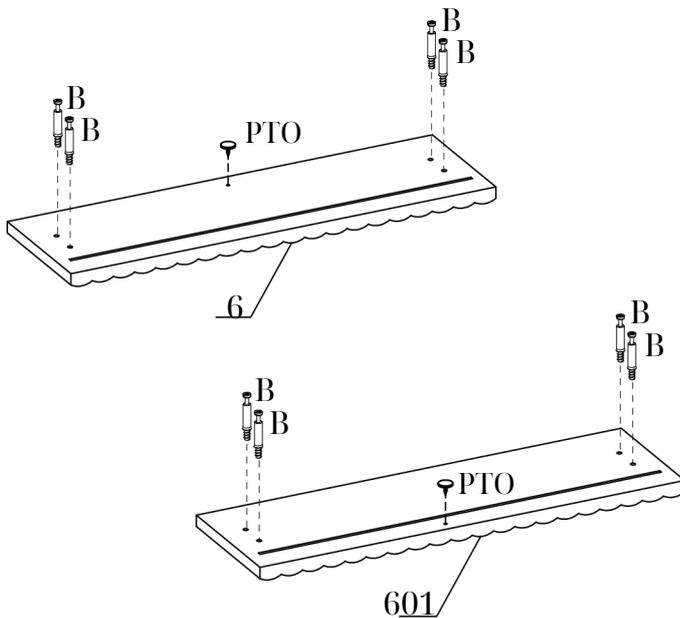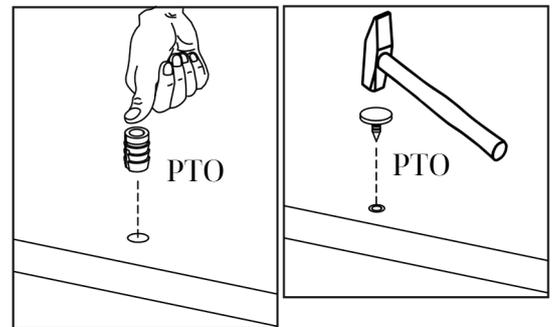






11

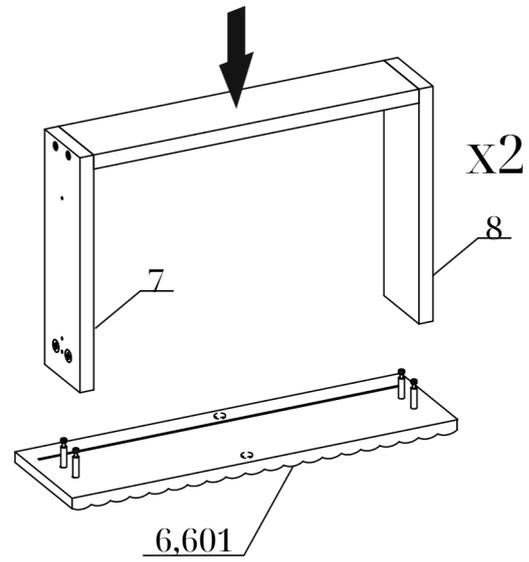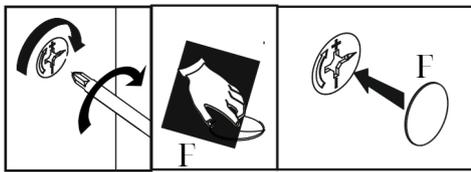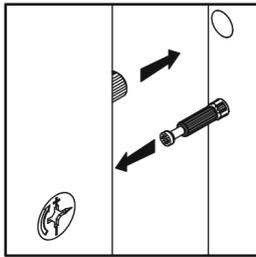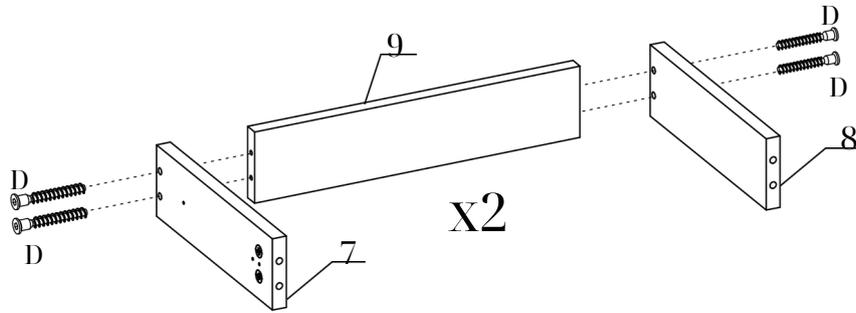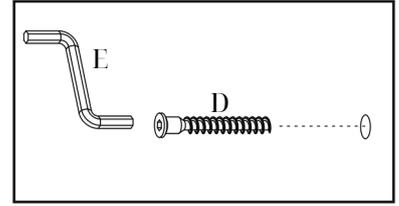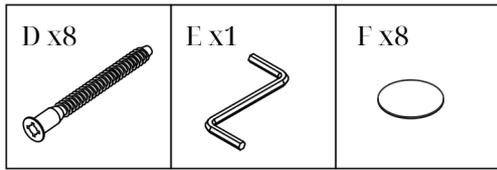

12

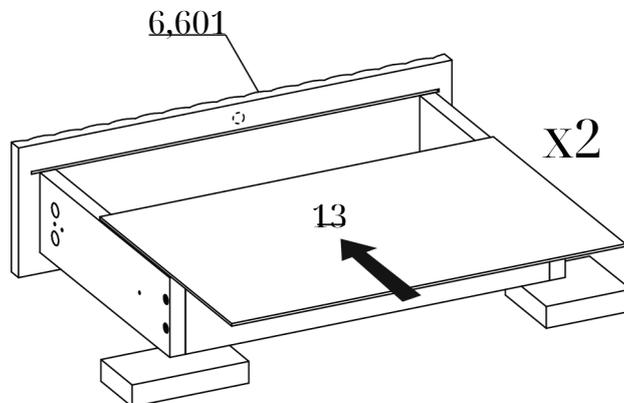

13

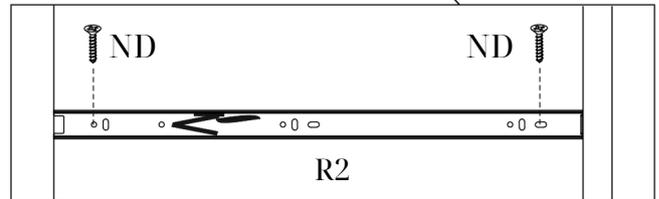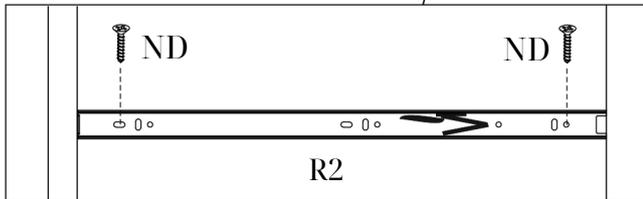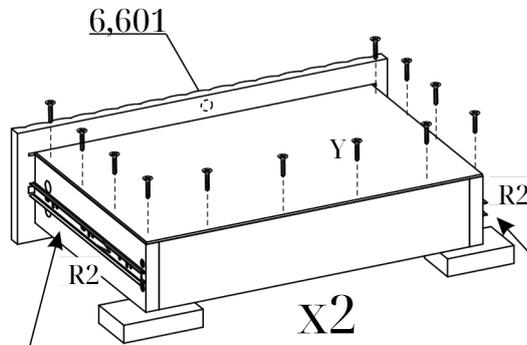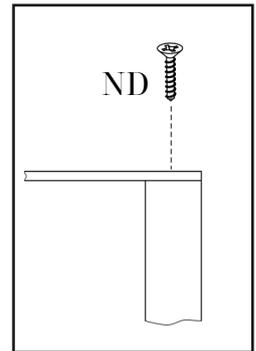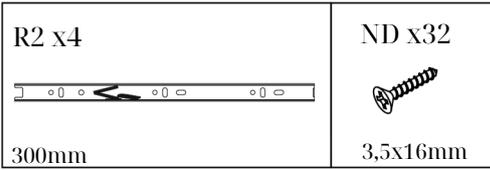

14

