

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN323

ITEM DESCRIPTION : ROUND BEDSIDE



1


Reverse the Bedside top & place
the leg as shown & align the
leg to match the apron.



2

Twist the leg into the iron fitting
slot by rotating it.

3
Fix the other legs in the similar way

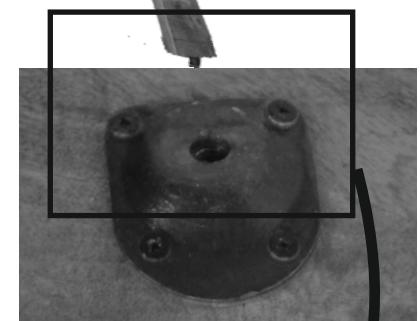

4

Reverse the Bedside
straight. Now your
Bedside is ready
for use



Fig. 1

