




<p>A</p>  <p>x18</p>	<p>B</p>  <p>x6</p>	<p>C</p>  <p>x1</p>
---	--	---

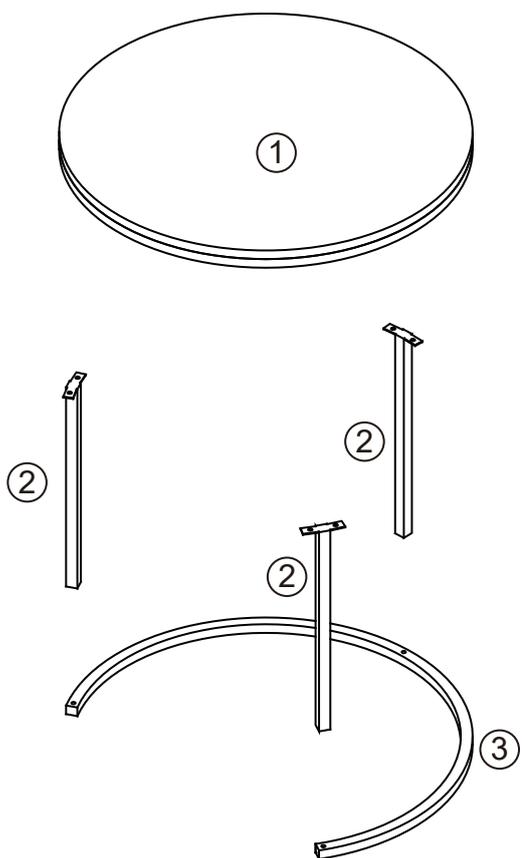

①		1
②		3
③		1
④		1
⑤		3
⑥		1

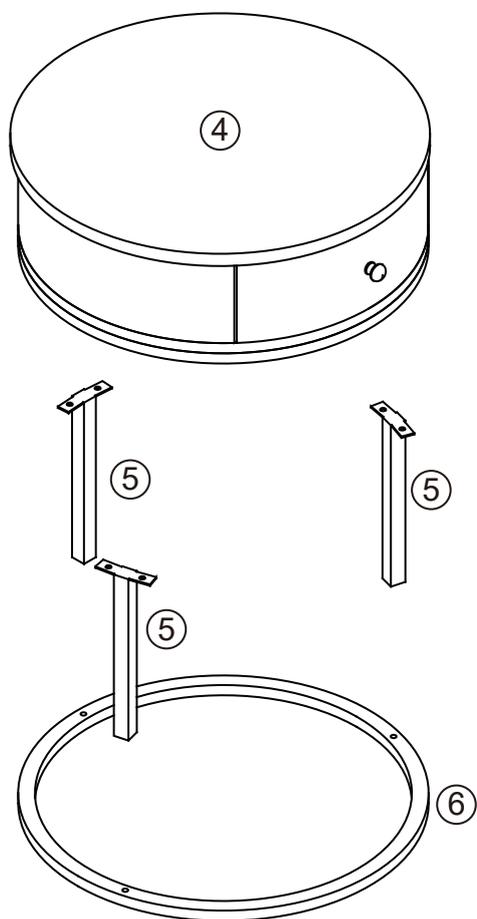



1

You will need

A



x6

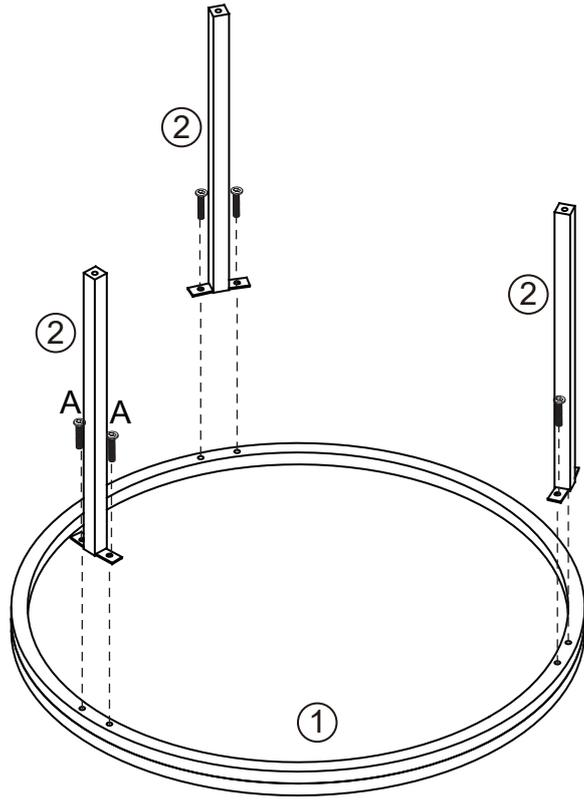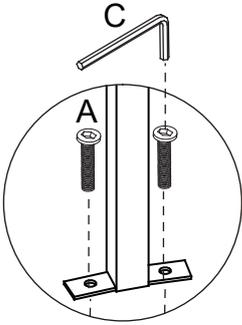



2

You will need

A



x3

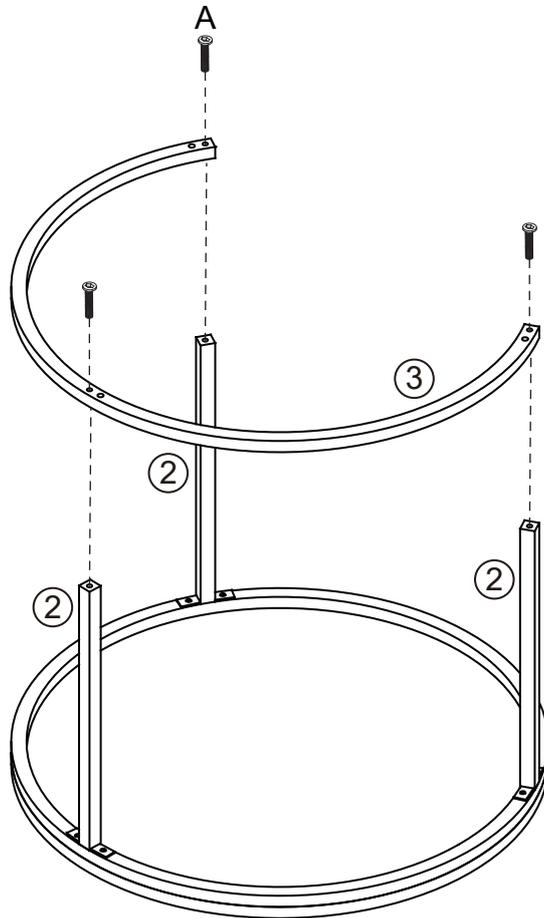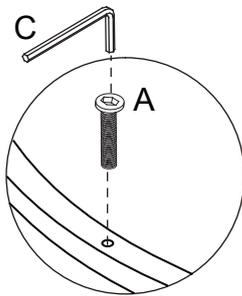



3

You will need

B



x3

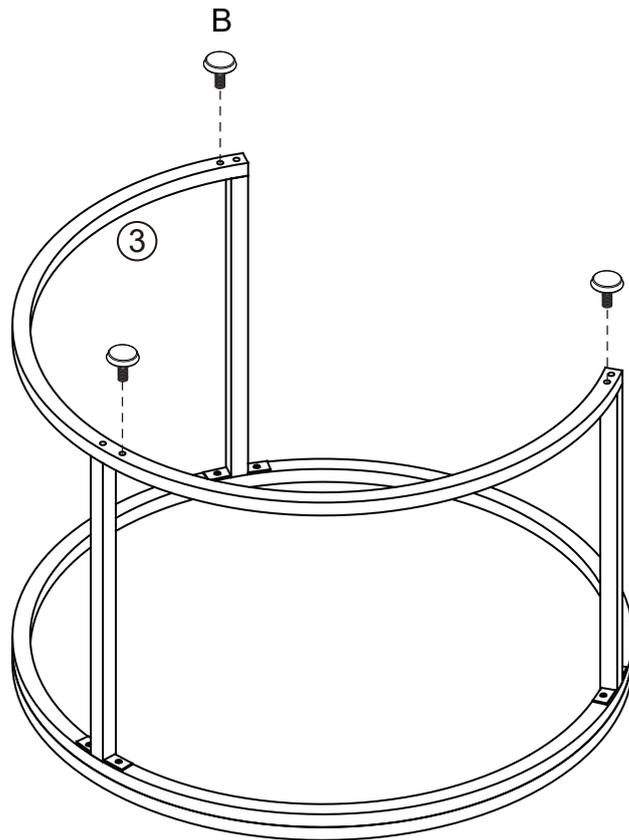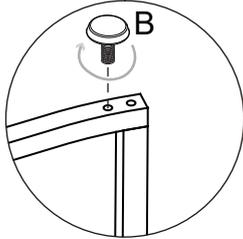

Twist the adjuster on center leg to make the top panel is flush.



4

You will need

A



x6

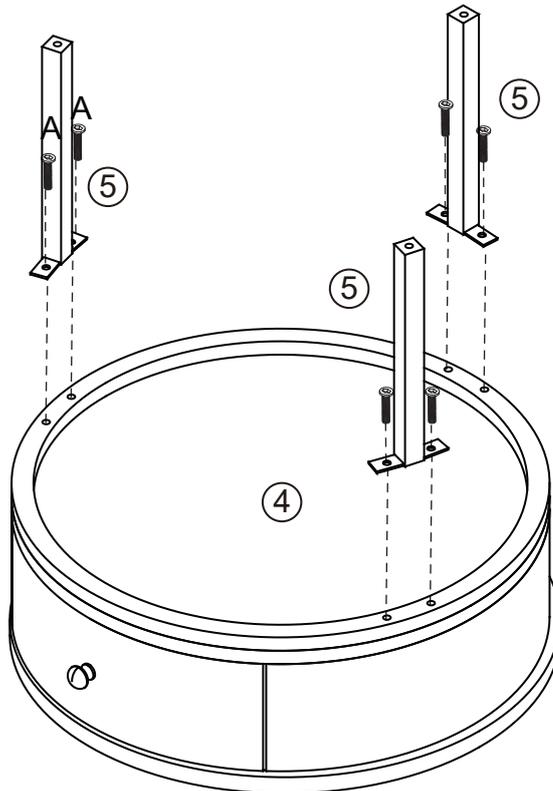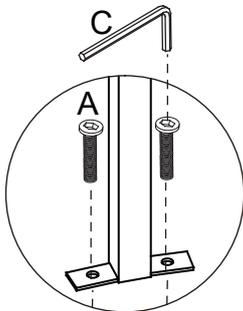



5

You will need

A



x3

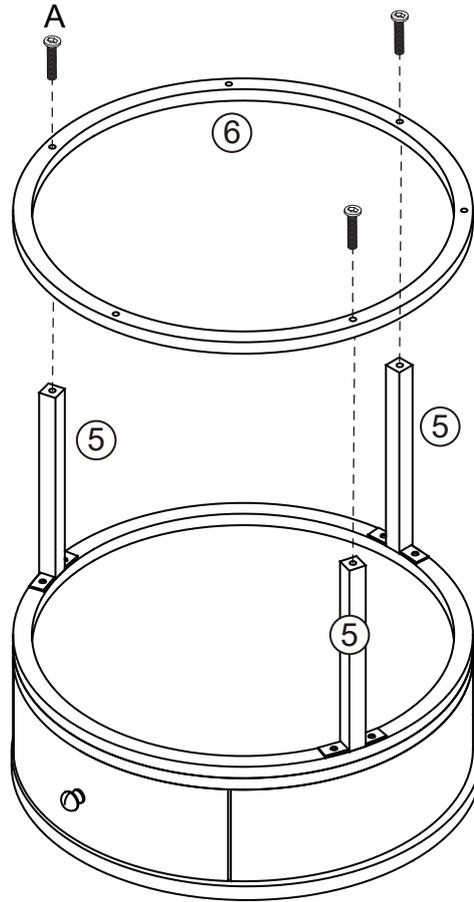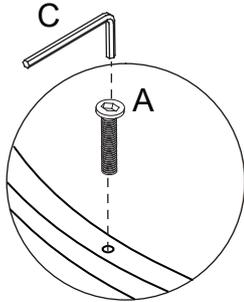



6

You will need

B



x3

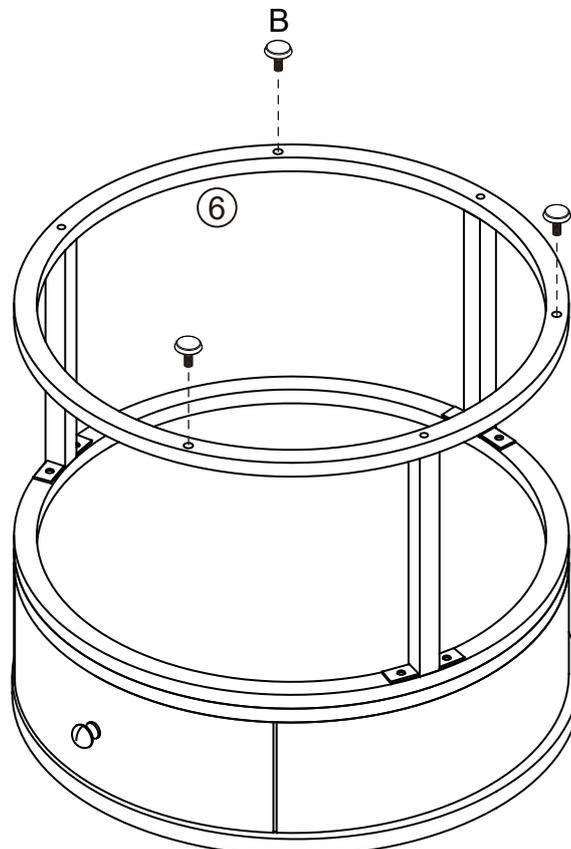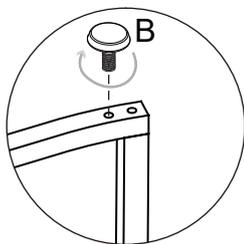

Twist the adjuster on center leg to make the top panel is flush.

